



# Instruction manual

## Machine Mounted Terminals / Machine Mounted Displays

### MMT8000 series / MMD8000 series

**Read these instructions carefully before using and store for future reference.**

**These instructions contain important information about the product, in particular about its intended use, safety, installation, utilisation, maintenance and disposal.**

**Hand over the instructions to the user following installation of the product, and pass the manual on to the new user if the product is resold.**

These instructions can be downloaded from: [www.ads-tec.de](http://www.ads-tec.de) in the Download area.

**Publisher**

ads-tec GmbH

Heinrich-Hertz-Straße 1

72622 Nürtingen

Phone: +49 7022 2522-0

Fax: +49 7022 2522-400

Internet: [www.ads-tec.de](http://www.ads-tec.de)

E-mail: [mailbox@ads-tec.de](mailto:mailbox@ads-tec.de)

# Table of Contents

<b>1</b>	<b><u>Device description.....</u></b>	<b><u>6</u></b>
<b>2</b>	<b><u>General safety instructions .....</u></b>	<b><u>9</u></b>
2.1	<b>Information about documentation</b>	<b>9</b>
2.1.1	General remark	9
2.1.2	Limitation of liability	9
2.1.3	Manufacturer and contact details	10
2.1.4	Relevant device documentation	10
2.1.5	Symbols	10
2.1.6	Data, figures and modifications	11
2.1.7	Trademarks	11
2.1.8	Copyright	11
2.1.9	Standards	11
2.2	<b>Explanation of safety instructions</b>	<b>12</b>
2.2.1	Structure of safety instructions	12
2.2.2	Explanation of signal words	13
2.3	<b>Safety instructions</b>	<b>14</b>
2.3.1	Basic safety instructions	14
2.3.2	Environmental conditions	14
2.3.3	Intended use	16
2.3.4	Improper use	16
2.3.5	Damage due to improper use	16
2.3.6	Warranty / repairs	17
2.3.7	Treatment and disposal of lithium batteries	17
2.3.8	Electrostatically sensitive components	18
<b>3</b>	<b><u>Scope of delivery.....</u></b>	<b><u>19</u></b>
3.1	<b>Optional scope of delivery</b>	<b>20</b>
<b>4</b>	<b><u>Installation .....</u></b>	<b><u>21</u></b>
4.1	<b>Overview of installation components</b>	<b>22</b>
4.2	<b>Order of installation</b>	<b>26</b>
4.3	<b>Installation with support arm adapter</b>	<b>27</b>
4.3.1	Detaching support arm adapter from device	27
4.3.2	Key module	28
4.3.3	Adjusting position of support arm adapter	31
4.3.4	Preinstallation of connecting tube	33

4.3.5	Cable routing	35
4.3.6	Mounting support arm adapter on connecting tube	36
4.3.7	Detaching and attaching service slot cover	37
4.3.8	Mounting device on support arm adapter	39
<b>4.4</b>	<b>Installation with crosspiece adapter</b>	<b>40</b>
<b>4.5</b>	<b>Installation with VESA 75 adapter</b>	<b>41</b>
<b>5</b>	<b><u>Interfaces .....43</u></b>	
<b>5.1</b>	<b>Interfaces of machine mounted terminal</b>	<b>44</b>
<b>5.2</b>	<b>Interfaces of machine mounted display</b>	<b>47</b>
5.2.1	Maximum cable lengths	49
<b>5.3</b>	<b>Earthing</b>	<b>50</b>
5.3.1	General informations regarding earthing	50
5.3.2	Earthing MMT	50
5.3.3	Earthing MMD without HDBaseT™ Extender Kit	51
5.3.4	Earthing MMD with HDBaseT™ Extender Kit	51
5.3.5	Earthing of accessories	52
<b>6</b>	<b><u>HDBaseT™ Extender Kit .....53</u></b>	
<b>6.1</b>	<b>Installation of receiver module</b>	<b>53</b>
<b>6.2</b>	<b>Interfaces of receiver module</b>	<b>54</b>
<b>6.3</b>	<b>Connecting cables between receiver module and MMD</b>	<b>55</b>
<b>6.4</b>	<b>Interfaces of transmitter module</b>	<b>56</b>
<b>6.5</b>	<b>Status indicators</b>	<b>57</b>
6.5.1	Status indicators on transmitter module	57
6.5.2	Status indicators on receiver module	58
<b>7</b>	<b><u>Commissioning .....59</u></b>	
<b>8</b>	<b><u>Operation .....61</u></b>	
<b>8.1</b>	<b>Switching on and off</b>	<b>61</b>
<b>8.2</b>	<b>Multifunction touch-screen</b>	<b>61</b>
<b>8.3</b>	<b>Turning/tilting device and key module</b>	<b>62</b>
<b>8.4</b>	<b>Component replacement</b>	<b>64</b>
8.4.1	Replacing BIOS battery on MMT8000 series	64
8.4.2	Replacing mass storage device	66
8.4.3	Replacement parts list	68

<b>9</b>	<b>Maintenance, cleaning and disposal.....</b>	<b>69</b>
9.1	Maintenance	69
9.2	Cleaning	69
9.3	Disposal	70
<b>10</b>	<b>Technical data .....</b>	<b>71</b>
10.1	MMT-MMD technical data	71
10.1.1	Data sheet	71
10.1.2	External device dimensions MMT8017	72
10.1.3	External device dimensions MMT8024	73
10.1.4	External device dimensions MMD8017	74
10.1.5	External device dimensions MMD8024	75
10.2	HDBaseT™ Extender Kit technical data	76
10.2.1	Data sheet	76
10.2.2	External device dimensions – HDBaseT™ Extender Kit transmitter	77
10.2.3	External device dimensions – HDBaseT™ Extender Kit receiver	78
<b>11</b>	<b>List of figures.....</b>	<b>79</b>
<b>12</b>	<b>Service &amp; support.....</b>	<b>81</b>
12.1	ADS-TEC support	81

# 1 Device description

The **M**achine **M**ounted **T**erminal (MMT) and **M**achine **M**ounted **D**isplay (MMD) are designed for the control and visualisation of production processes in the pharmaceutical, foodstuff, beverage and chemical industry. In the case of the MMT, the processing unit is integrated in the housing, making an external PC unnecessary for control (Figure 1: Use of MMT and MMD). The MMD is a display which can be controlled by an external computer, e.g. from the existing industrial computer environment. With the MMD, cables can be used for distances of up to 15 m between the display and computer. The optional HDBaseT™ Extender Kit has been developed to bridge greater distances of up to 100 m. MMT and MMD are both available in the 17 and 24 inch format.

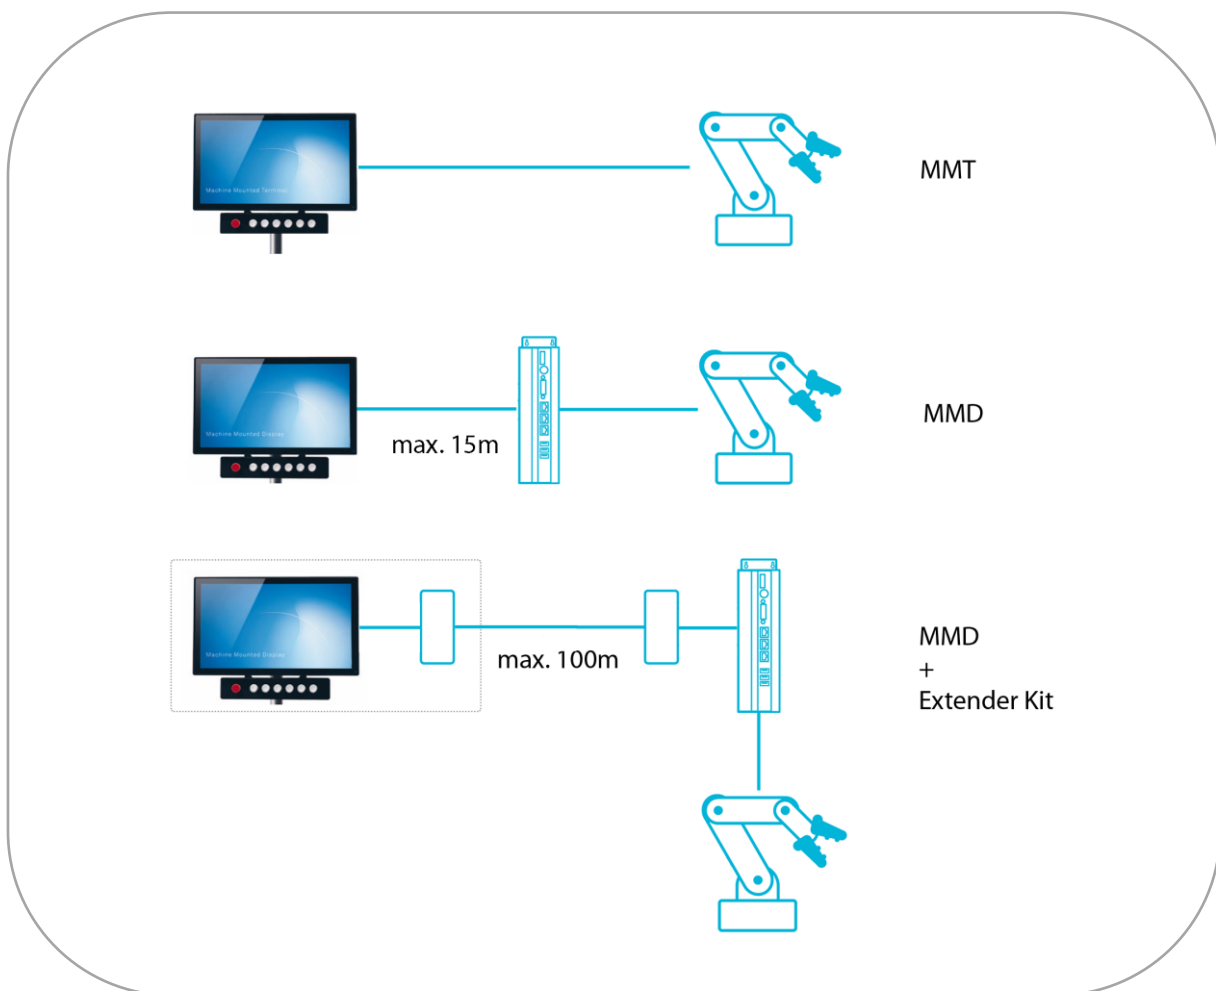


Figure 1: Use of MMT and MMD

The MMT/MMD8000 series has been specially developed to fulfil strict hygiene requirements. This is achieved by the stainless steel housing of the device being completely closed, having rounded edges and no external screws. This allows the device to be cleaned simply and effectively. The device has no fan, which means that the primary source of contamination is not present. Due to its robust, compact design, the device can also be operated under demanding environmental conditions. All necessary cables are routed to the device through the connecting tube so that there are no exposed cables in the operating room.

Thanks to the very latest multi-touch technology, the full-HD display with a maximum resolution of 1920x1080 pixels can be operated conveniently by touching and also by means of swiping and dragging movements. Operation with special gloves is also possible. Additionally, a freely configurable key module is available which enables e.g. individual production processes to be started and stopped by simply pressing keys or by operating a switch. An emergency-stop switch can also be integrated in this module.

Both the MMT and MMD can be mounted either on a stand or on a support arm, i.e. stand or suspended mounting (Figure 2).

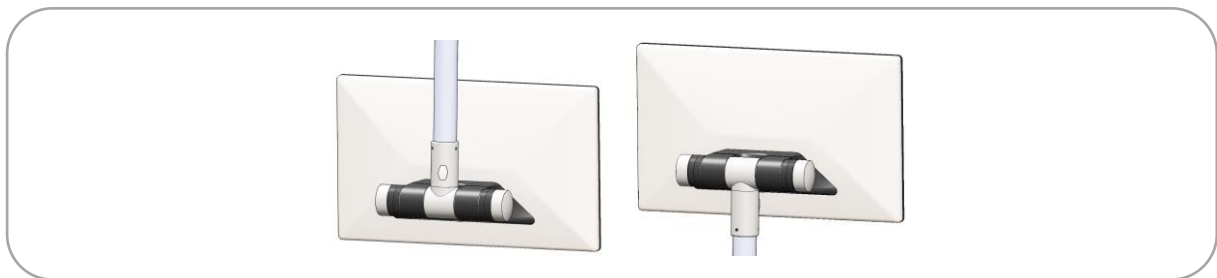


Figure 2: Mounting on support arm and stand

In addition to the T-piece support arm adapter, a crosspiece support arm adapter is also available (Figure 3). This allows two monitors to be mounted one above the other.



Figure 3: Crosspiece adapter

By simply turning and tilting the device and the key module, each device can be adjusted during operation so that the user can view it at the optimum angle (Figure 4).

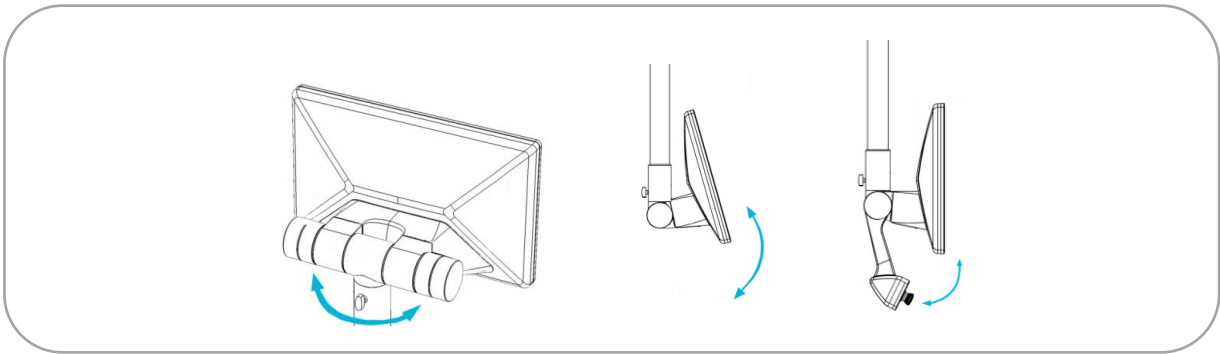


Figure 4: Turning and tilting

Alternatively, ADS-TEC also offers a VESA adapter which can be used to connect the device to a VESA 75 mounting system (Figure 5).



Figure 5: VESA adapter



## **2 General safety instructions**

### **2.1 Information about documentation**

#### **2.1.1 General remark**

This instruction manual is intended to ensure safe and efficient handling and operation of IT Infrastructure products.

The instruction manuals must be read carefully by personnel before commencing any type of work.

All of the safety instructions and handling instructions given in the manual must be obeyed in order to ensure that work is carried out safely.

Operation of the system is subject to the laws and regulations which are applicable in the respective country at national, federal, European and international level.

The generally accepted rules of technology, usually in the form of standards, directives, regulations, conditions and technical rules specified by national and federal organisations as well as trade associations and committees for the field of specialisation concerned, shall apply.

Figures used in this instruction manual are provided for basic understanding and may differ from the actual design.

The operator/operating company is independently responsible for compliance with and observance of any subsequently introduced technical innovations or new legal requirements, as well as for all usual obligations of the operator/operating company.

The original version of this instruction manual was written in German. All non-German versions of this instruction manual are translations of the German instruction manual.

#### **2.1.2 Limitation of liability**

ADS-TEC GmbH shall not be liable for personal injury, property damage or damage caused to the device as well as consequential damage that is/was the result of non-compliance with this instruction manual, improper use of the device, repairs and other actions on the device by unqualified electricians and electricians not certified by ADS-TEC GmbH, or that is/was the result of using unapproved replacement parts. Failure to observe the maintenance intervals shall also result in exclusion from liability. Furthermore, it is strictly forbidden to make any unauthorised alterations or technical modifications to the device.

### 2.1.3 Manufacturer and contact details

The manufacturer of the product is ads-tec GmbH. The company is referred to in the following as ADS-TEC.

ads-tec GmbH

Heinrich-Hertz-Str.1

72622 Nürtingen

Germany

Phone: +49 7022 2522-0

Fax: +49 7022 2522-400

Email: mailbox@ads-tec.de




Web: www.ads-tec.de

### 2.1.4 Relevant device documentation

The following documents are decisive to device setup and operation:

- **Instruction manual:**  
Contains information for installation, commissioning and operation of the device along with technical data of the device hardware.
- **Website:**  
You can download the instruction manual as well as drivers, software, user manuals, leaflets and flyers from the Download area of our website [www.ads-tec.de](http://www.ads-tec.de).

### 2.1.5 Symbols

Symbol	Meaning
	Designation of batteries in accordance with § 13 of the German Battery Act (BattG). Batteries may not be disposed of with household waste, but must rather be disposed of separately. Used batteries must be returned to the point of sale or a disposal system.
	Labelling of electrical and electronic devices in accordance with § 7 of the German Electrical and Electronic Equipment Act (ElektroG). Electrical and electronic devices must not be disposed of with household waste, but must rather be taken to a collection point for waste electrical equipment. Such a collection point is generally operated by public waste management authorities, i.e., by municipalities.
	Symbol for the protective earth connection

### 2.1.6 Data, figures and modifications

All data, text and figures were prepared to the best of our knowledge. They do not represent any assurance for the properties themselves. Despite taking utmost care, no liability can be assumed for accuracy, completeness and actuality of the information. Subject to changes.

### 2.1.7 Trademarks

It is noted that any software and/or hardware trademarks and any company brand names mentioned in this documentation are all subject to the general trademark protection rights.

StoraXe®, Big-LinX® and X-Remote are registered trademarks of ADS-TEC.

All other used third-party trademarks are hereby acknowledged.

In the case of trademark infringement, ADS-TEC reserves the right to exercise all rights.

### 2.1.8 Copyright

This instruction manual is protected by copyright. For the authorised user, simple usage rights are granted within the scope of the intent of the contract. Any modified use or exploitation of the provided content, particularly duplication, modification or publishing in whatever form is permitted only with the prior consent of ADS-TEC.

In the case of copyright infringement, ADS-TEC reserves the right to exercise all rights.

### 2.1.9 Standards



The manufacturer hereby declares that the product described in this instruction manual complies with all relevant stipulations of the following European directives:

- 2011/65/EU, RoHs Directive
- 2014/30/EU, EMC Directive
- 2014/53/EU, RED Directive
- 2014/35/EU, Low Voltage Directive

The product is a class B device.

Note: For full compliance with the EMC legislation, all components and cables used for device connection must also be compliant with these requirements. It is therefore necessary to employ BUS and LAN cables with shielded connectors and these must be installed as per the instructions contained in the instruction manual.

A corresponding EU conformity declaration is available for competent authorities at the manufacturer and can be viewed upon request.

The EU conformity declaration can be requested on our website [www.ads-tec.de](http://www.ads-tec.de) and downloaded in the Download area.

The product also complies with the following UL standards:

UL 61010-1 Programmable Controllers

UL 61010-2-201 UL file number E343358

CAN/CSA-C22.2 No. 61010-1

CAN/CSA-C22.2 No. 61010-2-201

## 2.2 Explanation of safety instructions

### 2.2.1 Structure of safety instructions

The signal word classifies the hazard.

Reference to the type/consequences and source of the hazard is made underneath the signal word.

Information on how to avoid the hazard is indicated by an arrow (➡).

#### **DANGER**



##### **Type and source of the hazard!**

Possible consequences if the hazard is disregarded

➡ Measures for avoiding the hazard

## 2.2.2 Explanation of signal words

### DANGER



Indicates an imminent danger.  
If not avoided, death or severe injury will result.

### WARNING



Indicates a possible danger.  
If not avoided, death or severe injury could result.

### CAUTION



Indicates a possible danger.  
If not avoided, light or minor injuries could result.

### ATTENTION

Indicates a possibly damaging situation.  
If not avoided, the system or something in its surroundings could be damaged.



#### Recommendation for use:

Indicates terms and/or conditions that strictly need to be observed to ensure optimised and/or zero-defect operation. Tips and suggestions for the efficient use of the device and software optimisation are also provided.

## 2.3 Safety instructions

### 2.3.1 Basic safety instructions

- All users must read this manual and have access to it at all times.
- The safety notices and the manual itself must be observed by all persons who work with this device.
- The manual contains the most important instructions on how to use this device in a safe way.
- Intervention by the user is required only for performing the actions described in this document. Should any further modifications be required, it is necessary to consult either with the manufacturer directly or with service personnel authorised by the manufacturer.
- The device must be de-energised during work. Appropriate measures must be taken to prevent electrostatic discharges on components.
- If the device is opened up by an unauthorised person, the user may be subject to hazards and the warranty is invalidated.
- Installation, commissioning and operation may only be performed by qualified and trained personnel.
- At the installation site the valid guidelines and regulations for accident prevention must be observed.
- Appropriate storage, proper transport, installation and commissioning, as well as careful operation are prerequisites for ensuring safe and proper operation of the device.
- The device can be cleaned using cleaning agents specified in chapter 9.

### 2.3.2 Environmental conditions

#### ATTENTION

**Damage caused by heat!**

If the device is exposed to sunlight or any other light or heat source, it can overheat and suffer damage.

➔ Do not expose the device to direct radiation by sunlight or any other light or heat source!

**ATTENTION****Damage caused by heat!**

If the device is installed in a panel, casing or similar, heat accumulation can occur.

➔ Make sure that heat can be dissipated from the device!

**ATTENTION****Damage caused by condensation!**

If the temperature of the device is different to that of the room in which it is located, condensation can form.

➔ Switch on the device only if it has acclimated to the ambient temperature!

Use of the device is only permitted

- in enclosed buildings
- in non-explosive atmospheres
- at altitudes below 2000 m
- in environments with maximum contamination grade 2 (IEC/EN 61131-2)

The device can be operated under the environmental conditions (temperature, humidity, vibration and shock) which are specified in the data sheet in chapter 10.1.1. Failure to observe any one of these conditions will invalidate the warranty of the device. ADS-TEC cannot be held liable for any damages arising from improper use and handling.

The climatic conditions were tested according to:

IEC/EN 60068-2-1

IEC/EN 60068-2-2

IEC/EN 60068-2-14

Protection class: IP65 according to DIN EN 60529

### 2.3.3 Intended use

The control system is designed for use in the pharmaceutical, food, beverage and chemical industries. It was specially developed for the hygiene sector. The device is used for the visualisation and control of a wide range of processes on systems and machines in various application environments.

The device is only to be assembled, installed and operated within the permissible specifications. Use in non-specified environments is prohibited.

### 2.3.4 Improper use

Operation other than or beyond that described for the device shall be deemed improper use.

The device is not allowed to be used to control vehicles or for applications for which further approvals beyond the manufacturer's declaration are necessary, e.g. applications with explosion hazard, medical technology and shipping industry.

The device must not be put into operation in the case of transport damage or nonconformity with the specifications and, if necessary, must be taken out of operation in the case of changing conditions.

In the case of improper use, ADS-TEC shall not accept responsibility or liability for injury or damage that is directly or indirectly attributable to the handling of the device.

### 2.3.5 Damage due to improper use

#### ATTENTION

##### **Risk of mechanical damage!**

The device can be damaged as a result of unauthorised mechanical modifications.

➔ Make sure that the device is not drilled, chiselled or perforated and its exterior shape and design is not modified in any way!

Should the control system have evident signs of damages caused, e.g., by transport, nonconformity with the specifications, improper operation and storage conditions or due to improper use or handling, the device must be shut down immediately. Ensure that it is secured against being started up accidentally.



### 2.3.6 Warranty / repairs

During the device warranty period, any repairs must only be performed by the manufacturer or by service personnel that has been authorised by the manufacturer.

### 2.3.7 Treatment and disposal of lithium batteries

#### WARNING

**Hazard due to explosion**

Danger of explosion if using incorrect battery types.

➔ Use the battery type recommended by the manufacturer!

#### ATTENTION

**Hazard due to thermal loads**

The more the battery is exposed to higher temperatures, the faster it ages.

➔ Operate the device within its specifications!

#### ATTENTION

**Damage to the battery**

Incorrect handling of the battery can cause it to be damaged or destroyed

➔ Lithium batteries should not be exposed to fire, soldered, recharged, opened, short-circuited, reversed or heated above 100 °C and they should be disposed of properly as well as protected against sunlight, humidity and condensation!

This device contains a lithium battery for supplying the system clock with power as long as the supply voltage is not connected. The battery has a life cycle of 3-5 years depending on which load is applied.

The battery type to be used is:

Lithium battery CR2032 230 mAh

ADS-TEC part number: DZ-SONS-04075-1

The used lithium battery should be disposed of in accordance with local legal regulations.

## 2.3.8 Electrostatically sensitive components

### ATTENTION

#### Damage due to electrostatically sensitive components

Damage to the device can be caused by electrostatic discharges.

➔ All installation and service work performed on the device must be performed only under safe, secure and de-energised conditions!



#### Recommendation for use:

Always adhere to the safety measures applicable when handling components at risk of being damaged by electrostatic discharges.

The provisions of DIN EN 61340-5-1 / DIN EN 61340-5-2 apply.

### 3 Scope of delivery

#### ATTENTION

##### Damage to components containing soft parts!

If the soft material is subjected to a concentrated load, e.g., by placing it on a grating, irreversible impressions will form after some time.

➔ Make sure that a suitable surface is provided when setting down the device on its display side, e.g. a clean, plane surface!

➔ Please check that all of the following components are contained in the packaging.

#### MMT8000 series

Device	DVG-MMT8017 or DVG-MMT8024
4-pin plug (power supply)	DZ-SONS-01222-1/*
Instructions for drilling template	DZ-HAND-91053-0/*
Drilling template (for support arm adapter)	DZ-MECH-32444-0/*
Installation aid (M3 Allen key)	DZ-MECH-33703-0/*

#### MMD8000 series

Device	DVG-MMD8017 or DVG-MMD8024
3-pole plug	DZ-SONS-00994-2
Instructions for drilling template	DZ-HAND-91053-0/*
Drilling template (for support arm adapter)	DZ-MECH-32444-0/*
Installation aid (M3 Allen key)	DZ-MECH-33703-0/*

### 3.1 Optional scope of delivery

**Operating system** (only with MMT8000 series)

**Key module**

Key module	DO-001520
------------	-----------

**Additional elements for key module** (for non-premounted key module)

Front coversheet for key module	DZ-MECH-32391-0/*
Insert strip (silver)	DZ-MECH-32396-0/*
Insert strip (black)	DZ-MECH-32396-1/*

**HDBaseT™ Extender Kit** (only with MMD8000 series)

Transmitter module	DV-MMDEXT-TX
Receiver module	DV-MMDEXT-RX
USB cable	DZ-SONS-05647-0/*
HDMI cable	DZ-SONS-05646-0/*
Cable for power supply	DZ-SONS-09796-0/*

## 4 Installation

### ATTENTION

**Damage caused by heat!**

If the device is exposed to sunlight or any other light or heat source, it can overheat and suffer damage.

➔ Do not expose the device to direct radiation by sunlight or any other light or heat source!

**Recommendation for use:**

At least 2 persons are required to install the device at the installation location.

**Recommendation for use:**

Before installing, make sure that all mechanical connections are fixed in place in the connecting tube system at the installation location.

The following tools are needed for installation:

**Installation with support arm adapter**

- 4 mm Allen key (1 x straight and 1 x angled)
- 2.5 mm Allen key
- 3 mm Allen key
- 5 mm Allen key or Torx TX10
- 2 mm flap-tip screwdriver

**Installation with VESA 75 adapter**

- 4 mm Allen key
- 5 mm Allen key or Torx TX10
- 5.5 mm Allen key

## 4.1 Overview of installation components

### Overview of screw connection to support arm adapter

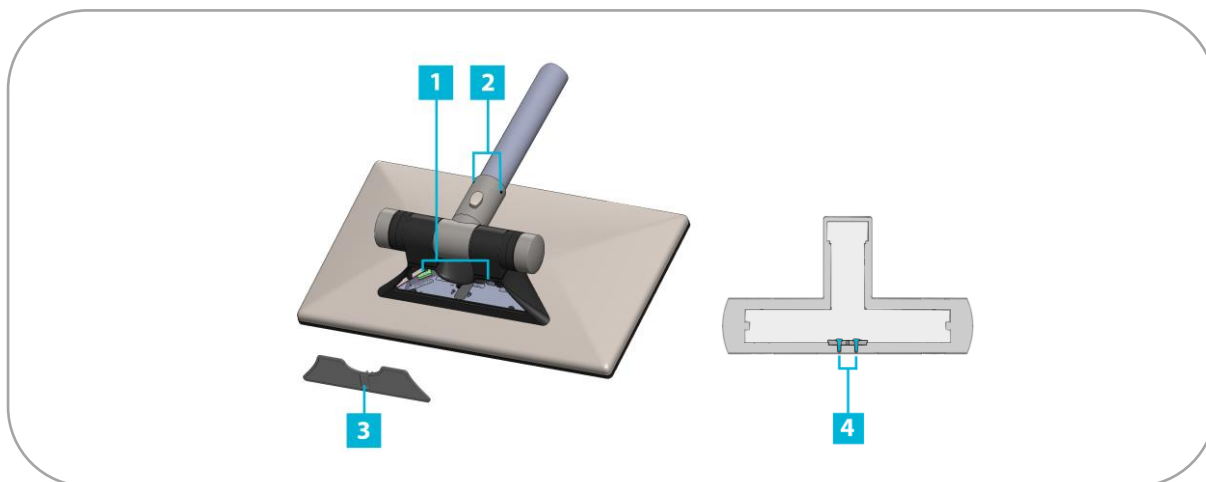


Figure 6: Overview of screw connection to support arm adapter

- |   |  |
|---|--|
| 1 | 4 mm Allen key, 6 Nm                   |
| 2 | 3 mm Allen key, 6 Nm (important!)      |
| 3 | 5 mm Allen key or Torx TX10, max. 3 Nm |
| 4 | 2.5 mm Allen key, max. 3 Nm            |

### Overview of screw connection to VESA 75 adapter

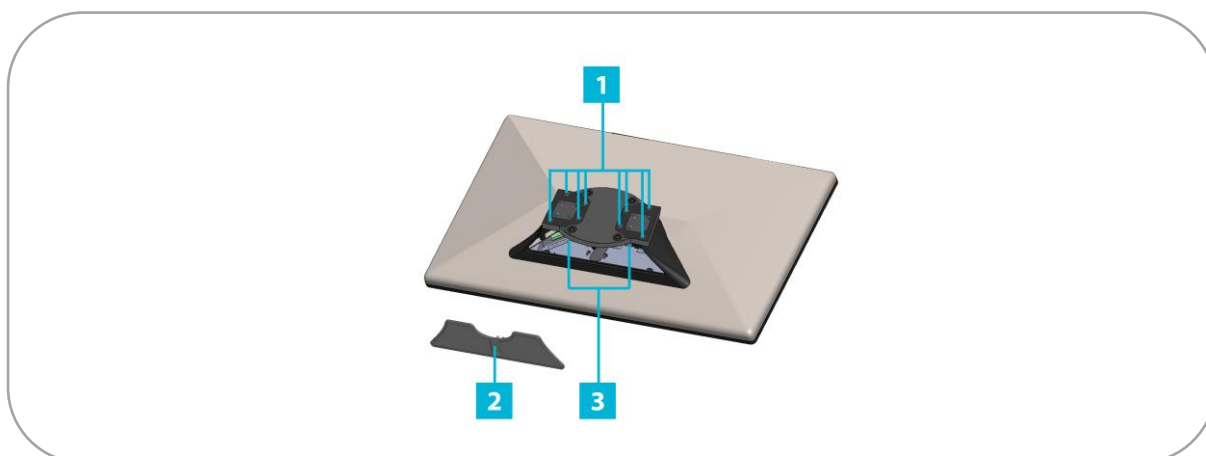


Figure 7: Overview of screw connection to VESA 75 adapter

- |   |  |
|---|--|
| 1 | 5.5 mm Allen key                       |
| 2 | 5 mm Allen key or Torx TX10, max. 3 Nm |
| 3 | 4 mm Allen key, 6 Nm                   |

## Designations

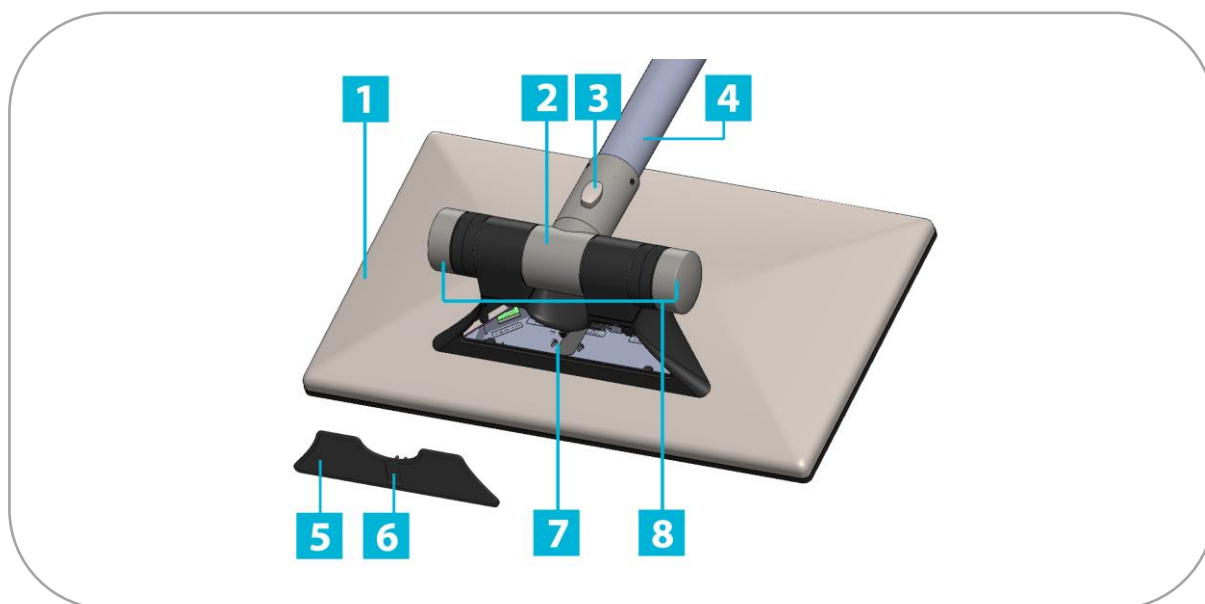


Figure 8: Designations

1	Device
2	Support arm adapter
3	Wing screw
4	Connecting tube
5	Service slot cover
6	USB flap
7	Service slot
8	Fastening screws

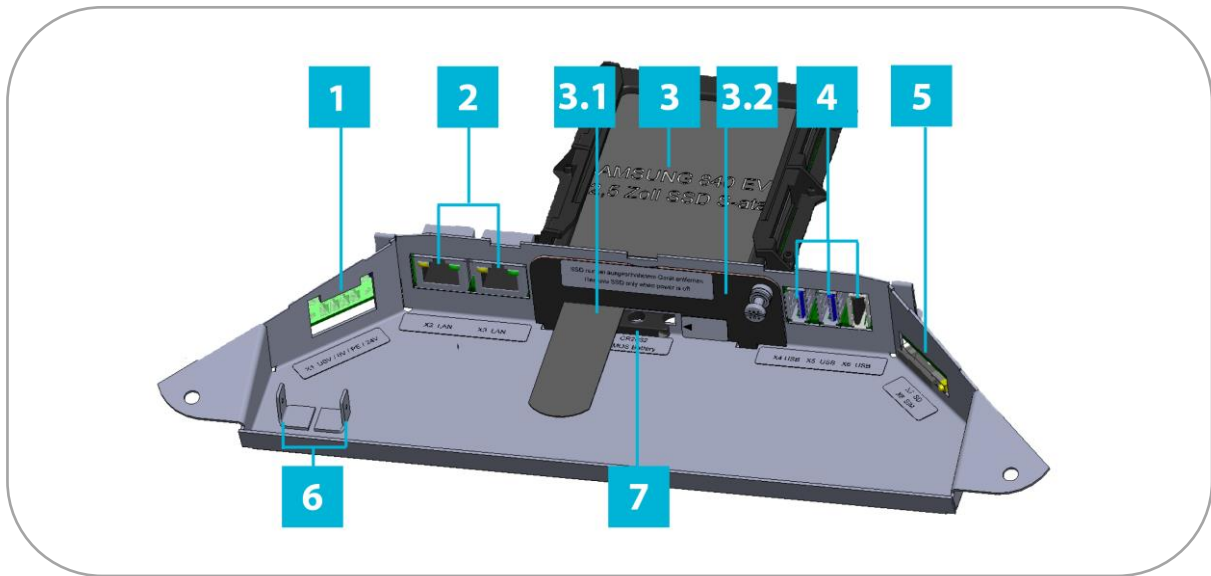
**Service slot – MMT8000 series**

Figure 9: Service slot – MMT 8000 series

1	Power supply
2	2 x LAN RJ45
3	1 x 2.5" SSD mass storage
3.1	Removal aid
3.2	Cover plate with screw fastening
4	2 x USB 3.0 1 x USB 2.0
5	1 x SD-Card Slot
6	2 x PE connection
7	Battery



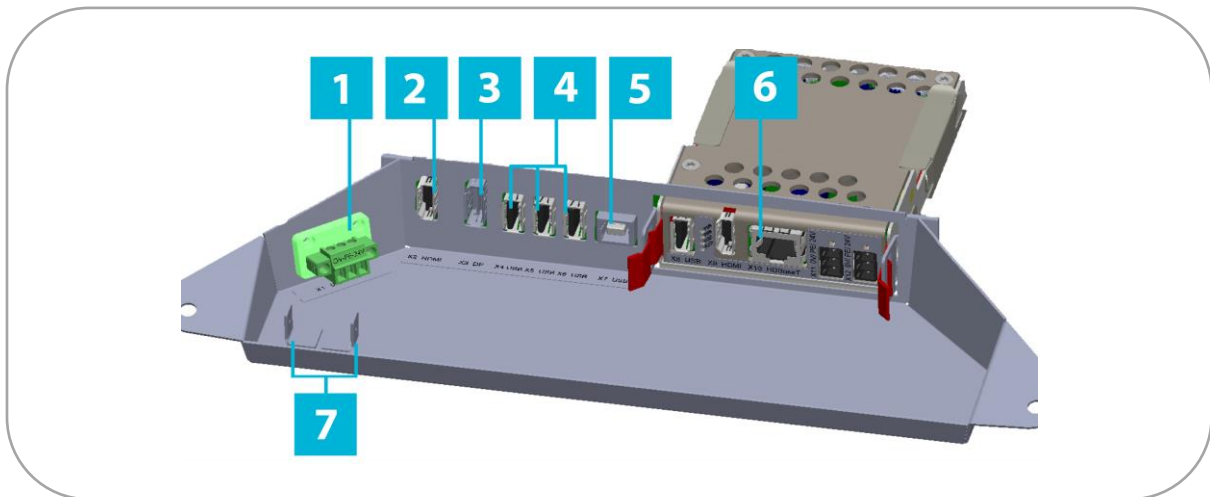
**Service slot – MMD8000 series**

Figure 10: Service slot – MMD8000 series

1	Power supply
2	1 x HDMI
3	1 x display port
4	3 x USB 2.0 type A
5	1 x USB 2.0 type B
6	Extender kit (optional)
7	2 x PE connection

## 4.2 Order of installation

### Installation with support arm adapter

1. Make sure that the device and all cables are disconnected from the power supply.
2. Remove the support arm adapter from the device.
3. *Optional:* Assemble and install the key module, chap. 4.3.2.
4. *Optional:* Adjust the support arm adapter to the installation position you require, chap.4.3.3.
5. Countersink the connecting tube, chap. 4.3.4.
6. Guide all necessary cables through the connecting tube and support arm adapter, chap. 4.3.5.
7. Mount the support arm adapter on the connecting tube (to 6 Nm), chap. 4.3.6.
8. *Optional:* Slide the extender kit into the mounting slot and connect the cables, chap.6.
9. Mount the device on the support arm adapter, chap. 4.3.8.
10. Connect all cables to the interfaces in the service slot, chap. 5.
11. Connect the device to the power supply (only after all of the above steps have been performed).

### Installation with VESA 75 adapter

1. Make sure that the device and all cables are disconnected from the power supply.
2. Screw the VESA adapter to the device.
3. Guide the cables through the VESA adapter, chap. 4.5.
4. Mount the VESA adapter on your connection system.
5. Connect all cables to the interfaces in the service slot, chap. 5.
6. Connect the device to the power supply (only after all of the above steps have been performed).

## 4.3 Installation with support arm adapter

If you do not intend to use a support arm adapter, you can skip chapter 4.3.

### 4.3.1 Detaching support arm adapter from device

**Recommendation for use:**

If the support arm adapter is already attached to the device when delivered, remove it. This will make subsequent installation easier.

- ➔ Loosen the four threaded pins (A) and remove the two screws (B).
- ➔ Pull the support arm adapter off the device.

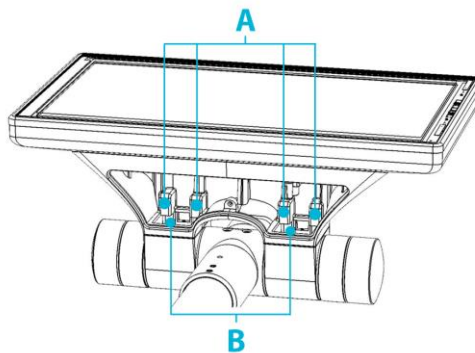


Figure 11: Screw connection of adapter to device

**A** 4 x M5 x 12 threaded pins (4 mm Allen key)

**B** 2 x M5 x 16 screws (4 mm Allen key)

### 4.3.2 Key module

- ➔ If you do not intend to use a key module or if your key module has already been installed by ADS-TEC, you can skip chapter 4.3.2.

#### ATTENTION

##### Damage to key module

Opening the key module incorrectly can cause damage.

- ➔ Open the key module on the right side (as viewed from the front)!

Switches, buttons and illuminated emergency-stop switches from various switch ranges can be installed on the key module for a hole diameter of 22.5 mm.

- ➔ Determine the exact dimensions from the technical drawing.
- ➔ Assemble and install the key module as described below:
- ➔ Open the key module on the right side (as viewed from the front) using a wide, blunt object.

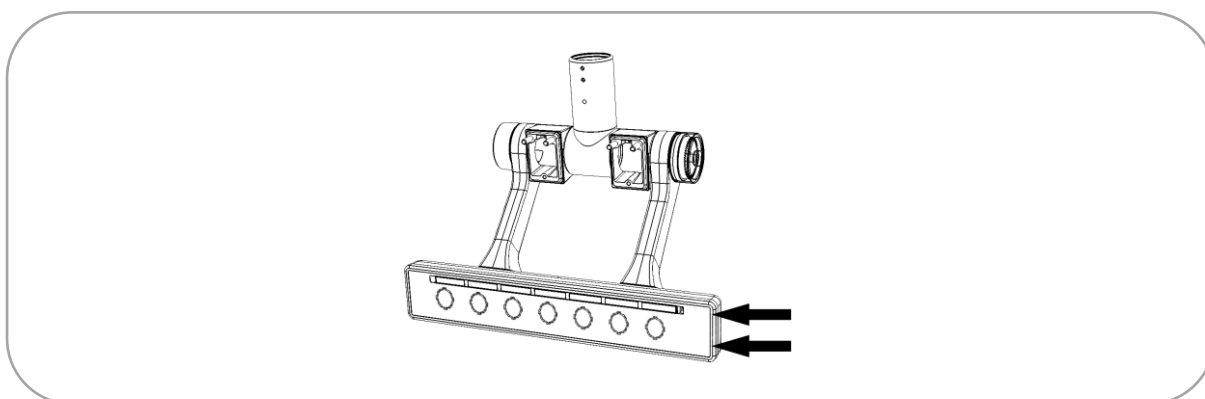


Figure 12: Opening key module

- ➔ Break the prepunched openings out of the key front as required. You can install up to seven switches/keys.

- ➔ Punch the required Ø 22.5 mm openings in the front coversheet from behind, or cut them out.  
The openings are highlighted in Figure 13.

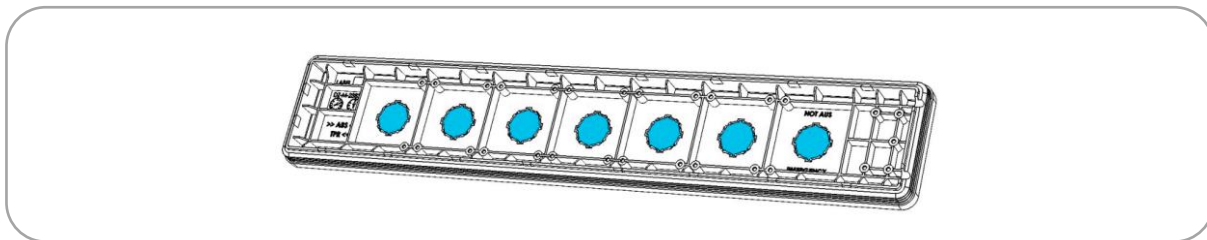


Figure 13: Prepunched openings in key module

- ➔ Print or write the appropriate labelling on the insert strip.
  - The dimensions (given in mm) are shown in Figure 14. There are seven printable areas each measuring 6.5 mm in height and 40 mm in length. The gap on the left side is 11 mm and the gaps between the areas are 8.3 mm.

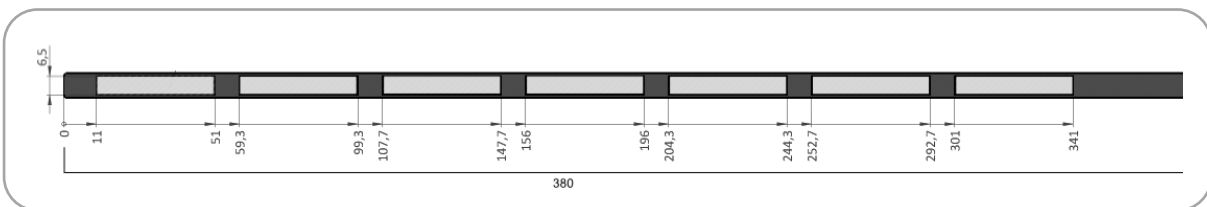


Figure 14: Labelling strip

- ➔ Slide the labelling strip from behind into the key front.

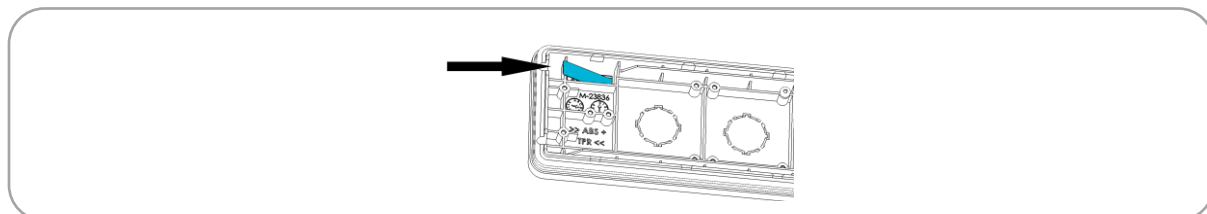


Figure 15: Inserting labelling strip

- ➔ Mount your keys on the key front.
- ➔ Install all necessary cables at the front keys.
- ➔ Guide the cables through the arms of the mounting bracket.

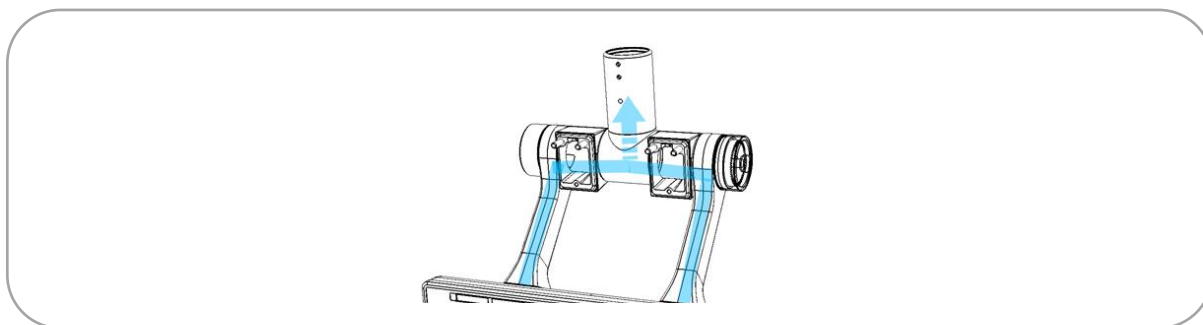


Figure 16: Cables of key module

- ➔ Make sure that the key module electronics are earthed via the device.

Close the key module:

- ➔ Position the front of the key module on the housing so that the panel lies against the left edge (as viewed from the front).
- ➔ Press the front of the key module into the housing of the key module.
  - Make sure that the front is also properly pressed down at the middle of the housing.

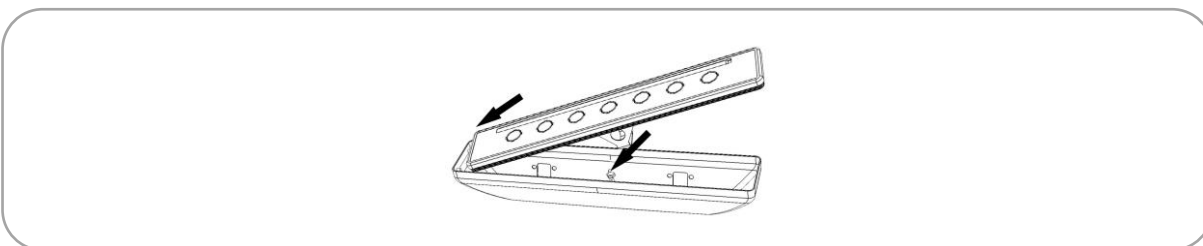


Figure 17: Closing key module

### 4.3.3 Adjusting position of support arm adapter

You can install the device both in the support arm position and in the stand position.

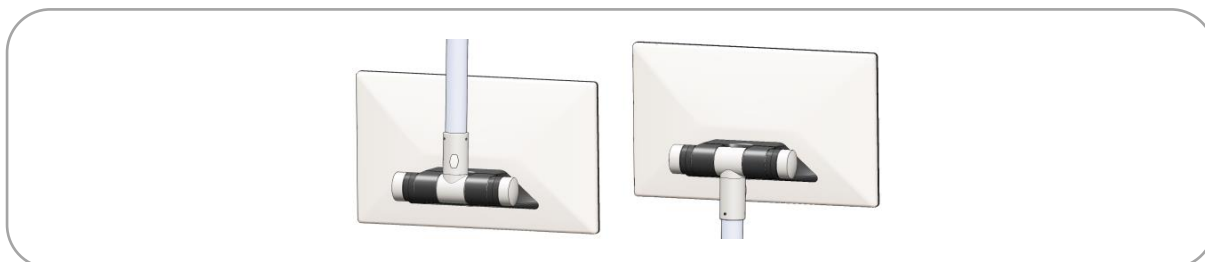


Figure 18: Mounting on support arm and stand

If the support arm adapter is not already set to the desired position, adjust it as required:

- ➔ Loosen the screws marked in the drawing (2.5 mm Allen key).
- ➔ Shake the screws and the clamping block out of the support arm adapter.

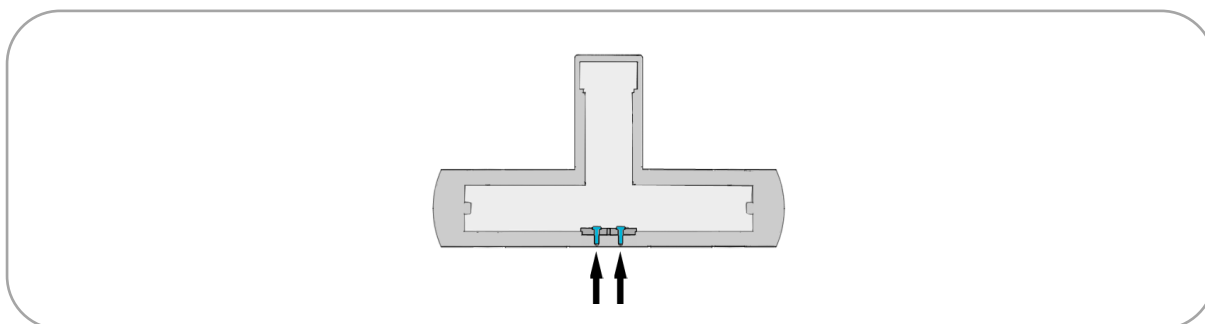


Figure 19: Screws in support arm adapter

- ➔ Grip the T-piece at one of the black areas and turn the metal tube to the other position.
  - The support arm position (suspended mounting) is shown on the left and the stand position (stand mounting) is shown on the right:

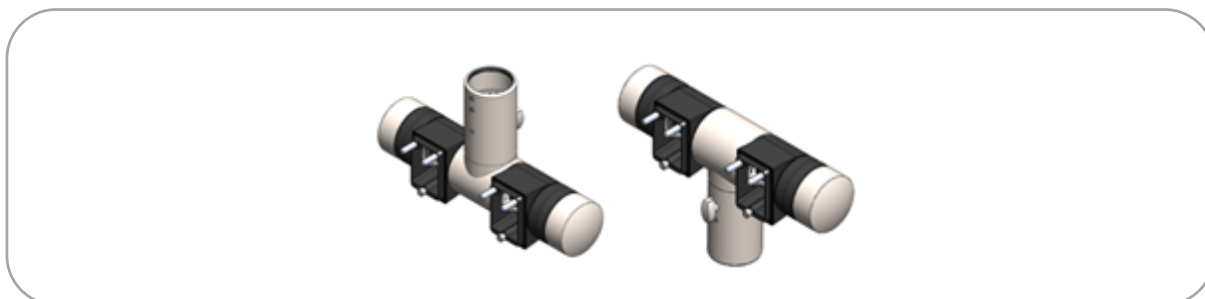


Figure 20: Support arm and stand position

- ➔ Screw the installation aid (rod with 3 mm threaded pin at the end) loosely into the clamping block.
- ➔ Insert the screws into the clamping block.
- ➔ Guide the clamping block into the support arm adapter.

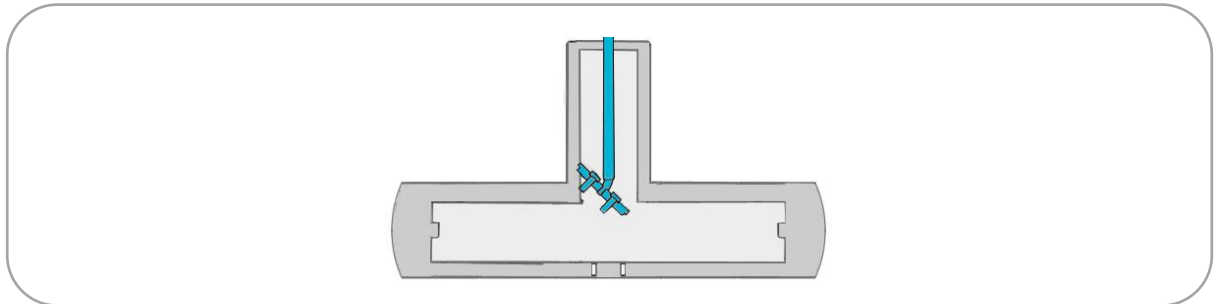


Figure 21: Inserting screws in adapter

- ➔ Remove the installation aid.
- ➔ Tighten the screws to a torque of 3 Nm (2.5 mm Allen key).



### 4.3.4 Preinstallation of connecting tube

#### WARNING



##### Risk of injury!

If the connecting tube is too thin, the device can work loose in the support arm position and fall to the ground.

➔ Make sure that the connecting tube meets the specifications!

The connecting tube must have a diameter of 48.3 mm with a maximum tolerance of  $\pm 0.3$  mm.

#### Support arm mounting

- ➔ Attach the self-adhesive installation template to the end of the connecting tube.
  - The "Display front" marking must be **on the side** on which the display will later be.
  - The arrows must point to the end of the connecting tube.
  - Attach the template to the connecting tube as far as the "Overlap" marking.
  - Fold over the template at the "Folding edge" marking so that the end sticks to the back of the "Overlap" area.

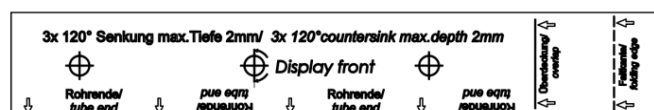


Figure 22: Installation template

- ➔ Countersink the connecting tube at the three marked points (min. M6 drill bit with 120° drill tip).
  - Drill max. 2 mm deep.

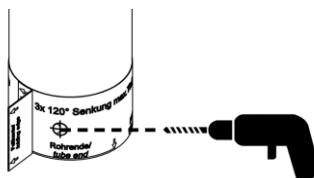


Figure 23: Countersinking connecting tube (support arm)

- ➔ Remove the template.

## Stand mounting

- ➔ Attach the self-adhesive installation template to the end of the connecting tube.
  - The "Display front" marking must be **opposite** the side on which the display will later be.
  - The arrows must point to the end of the connecting tube.
  - Attach the template to the connecting tube as far as the "Overlap" marking.
  - Fold over the template at the "Folding edge" marking so that the end sticks to the back of the "Overlap" area.

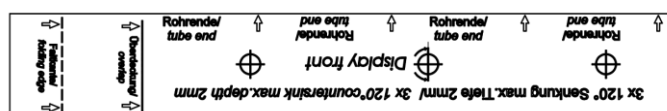


Figure 24: Installation template

- ➔ Countersink the connecting tube at the three marked points (min. M6 drill bit with 120° drill tip).
  - Drill max. 2 mm deep.

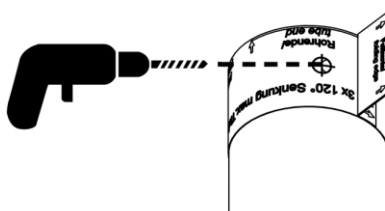


Figure 25: Countersinking connecting tube (stand)

- ➔ Remove the template.

### 4.3.5 Cable routing

**Recommendation for use:**

Use cables long enough so that they hang out of the connecting tube by min. 30–35 cm.

**Recommendation for use:**

Route the cables according to the interface positions in the service slot.

#### Support arm mounting

- ➔ Guide all cables out of the connecting tube and through the support arm adapter:
- Guide the USB cables through opening **A**.
  - Guide the power supply cable, earth cable and LAN cable through opening **B**.

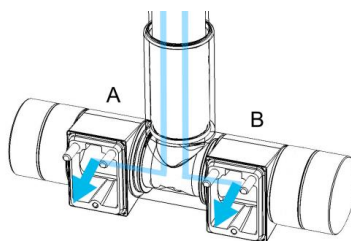


Figure 26: Cable routing for support arm mounting

#### Stand mounting

- ➔ Guide all cables out of the connecting tube and through the support arm adapter:
- Guide the USB cables through opening **A**.
  - Guide the power supply cable, earth cable and LAN cable through opening **B**.

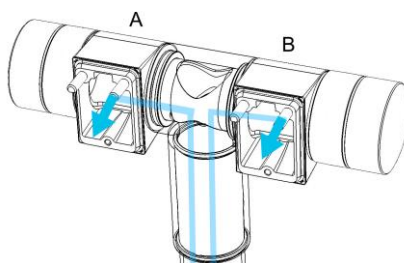


Figure 27: Cable routing for stand mounting

### 4.3.6 Mounting support arm adapter on connecting tube

#### WARNING



##### Risk of injury!

If the support arm adapter is attached too loosely, the device can work loose in the support arm position and fall to the ground.

➔ Observe the specified torques!

#### Support arm mounting

- ➔ Turn the foot of the support arm adapter so that the wing screw is **opposite** the connection openings.
- ➔ Attach the support arm adapter to the tube.
  - The connection openings must be on the side which the display is to face.
- ➔ Screw in the three threaded pins of the support arm adapter to 6 Nm (3 mm Allen key).

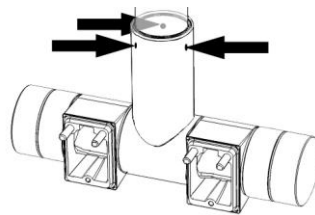


Figure 28: Screwing adapter to tube (support arm)

#### Stand mounting

- ➔ Turn the foot of the support arm adapter so that the wing screw is **on the same side** as the connection openings.
- ➔ Attach the support arm adapter to the tube.
  - The connection openings must be on the side which the display is to face.
- ➔ Screw in the three threaded pins of the support arm adapter to 6 Nm (3 mm Allen key).

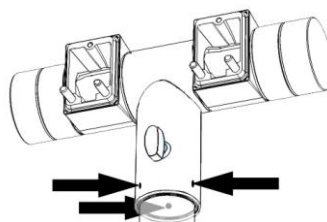


Figure 29: Screwing adapter to tube (stand)

### 4.3.7 Detaching and attaching service slot cover

#### ATTENTION

**Risk of dirt and moisture penetration!**

If the USB flap is not closed completely, dirt or moisture can enter the device.

➔ Close the USB flap completely before commissioning!

**Removing service slot cover**

- ➔ Open the USB flap
- ➔ Undo the screw underneath (5 mm Allen key or Torx TX10).

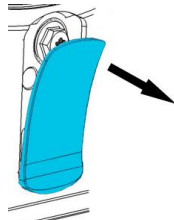


Figure 30: USB flap

- ➔ Remove the service slot cover.

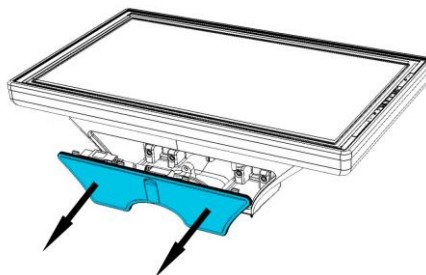


Figure 31: Removing service slot cover

**Attaching service slot cover**

- ➔ If required, insert the USB cable on the back of the service slot cover into the USB socket (USB 3.0).

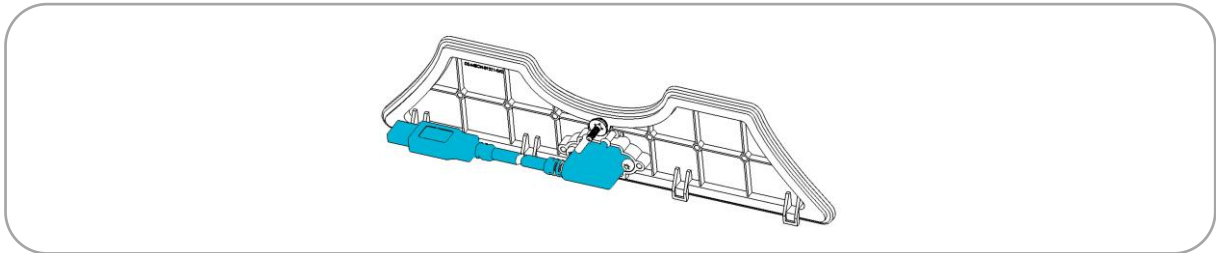


Figure 32: USB cable on service slot cover

- ➔ Position the lower edge of the service slot cover so that the retainer tabs engage in the frame.

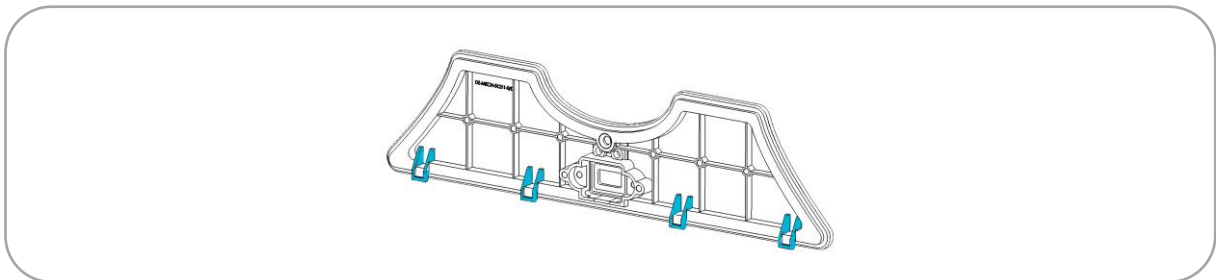


Figure 33: Retainer tabs of service slot cover

- ➔ Tighten the mounting screw
  - The service slot cover must be completely closed. The two sealing lips of the service slot cover must no longer be visible.
- ➔ Close the USB flap.

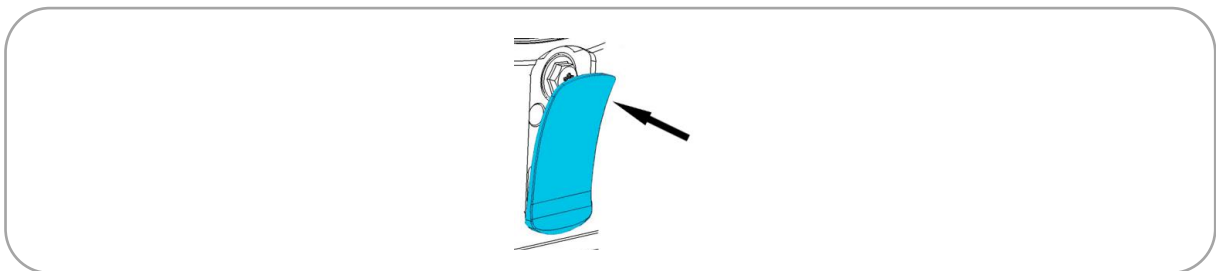


Figure 34: USB flap

### 4.3.8 Mounting device on support arm adapter

#### WARNING

**Risk of injury!**

If a person attempts to install the device alone, it may fall to the ground causing injury and damage.

➔ Have a second person assist in installing the device!

- ➔ Hold the device in front of the support arm adapter.
- ➔ Guide the cables out of the support arm adapter and through the service slot openings.
- ➔ Mount the device on the support arm adapter.

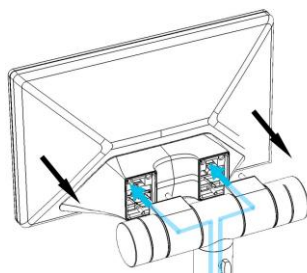


Figure 35: Mounting device on adapter

- ➔ Screw on the device securely using the two screws **B** and the four threaded pins **A**.

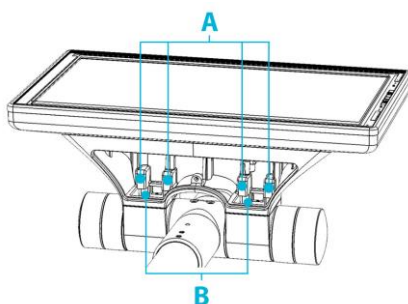


Figure 36: Screwing device to adapter

**A** 4 x M5 x 12 threaded pins (4 mm Allen key)

**B** 2 x M5 x 16 screws (4 mm Allen key)

## 4.4 Installation with crosspiece adapter

The crosspiece adapter allows you to mount two devices one above the other.



Figure 37: Installation with crosspiece adapter

- ➔ Turn the two vertical tube sections of the crosspiece adapter so that the wing screws point away from the openings.
- ➔ Countersink the connecting tube (chap. 4.3.4).
  - You can attach the adapter to a suspended tube (support arm mounting) or to a standing tube (stand mounting).
- ➔ Guide the cables through the adapter.

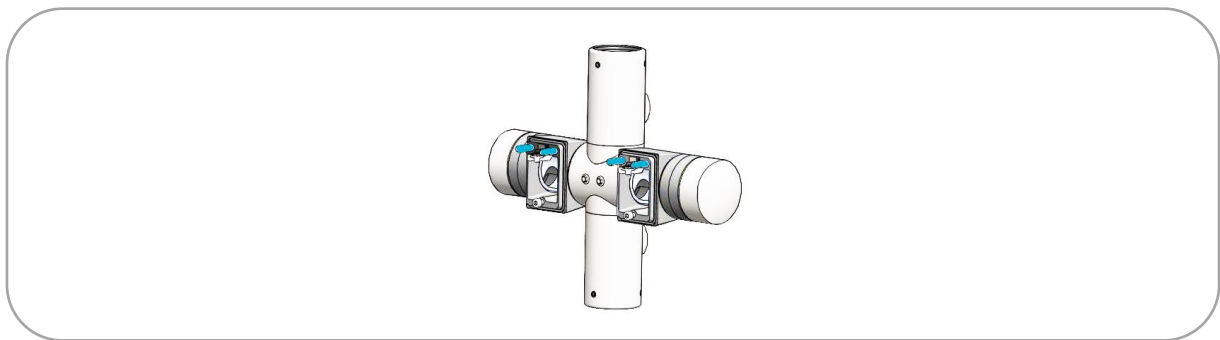


Figure 38: Crosspiece adapter

- The upper side of the crosspiece adapter is the side with the four protruding metal pins (Figure 38).
- Route the cables according to the interface positions in the service slot (chap. 4.3.5).
- ➔ Attach the crosspiece adapter to the connecting tube (chap. 4.3.6).
- ➔ Open the service slot cover of the device (chap. 0).
- ➔ Secure the device to the crosspiece adapter (chap. 4.3.8).
- ➔ Connect the cables to the interfaces (chap. 5).



## 4.5 Installation with VESA 75 adapter

### ATTENTION

#### Penetration of dirt!

If you route the cables through openings which do not match the cable diameters, dirt can enter through the opening.

➔ Route the cables to the openings according to the diameter table given below!



#### Recommendation for use:

Route the cables according to the interface positions in the service slot.

- ➔ Screw the VESA adapter to the device.
  - To do so, secure using the four threaded pins and the two screws (chap. 4.3.8).

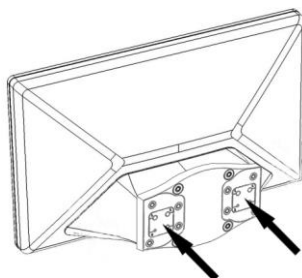


Figure 39: Device with VESA adapter

- ➔ Remove the retainer plates (8 screws, 5.5 mm Allen key)

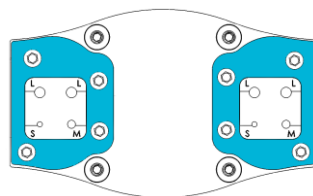


Figure 40: Retainer plates on VESA adapter

- ➔ Open the service slot cover (chap. 0).
- ➔ Push the rubber inserts upwards out of the bracket.
- ➔ Pull out the sealing plugs at all cable glands that you require.
  - To do so, pull the frame to the side (Figure 41).
  - The sealing plugs attached to the rubber insert must NOT be cut off as they may be needed for modifications made later.

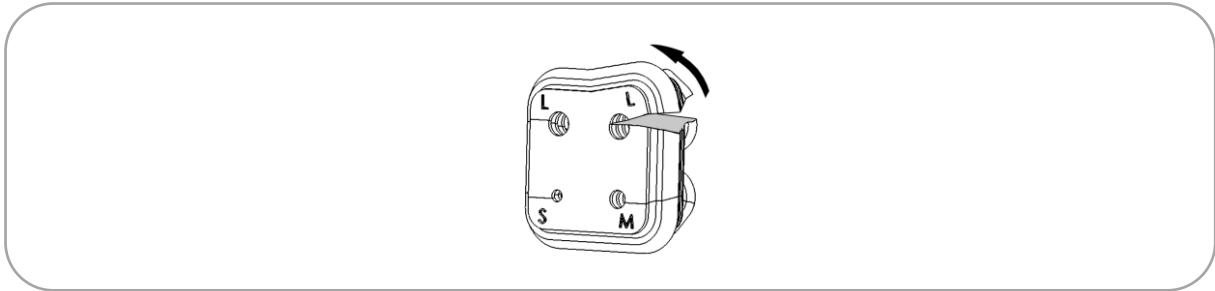


Figure 41: Rubber insert of VESA adapter

- ➔ Guide the cables through the openings.
    - For each cable, use the opening (S, M or L) which matches the cable diameter.
    - Diameter table:
- |    |                                      |
|----|--------------------------------------|
| S: | $\varnothing = 2.4 - 4.0 \text{ mm}$ |
| M: | $\varnothing = 4.0 - 6.0 \text{ mm}$ |
| L: | $\varnothing = 6.0 - 7.4 \text{ mm}$ |
- ➔ Press the rubber inserts into the bracket.
  - ➔ Screw on the retainer plates.
  - ➔ Screw the bracket to your **VESA** connection system.
    - Screws M6, length depending on your system, lock washers etc.
    - Maximum screw-in depth into the blind rivet nuts: 7 mm.

## ATTENTION

### Damage due to excessive tightening torque

The device can be damaged if the permitted tightening torque is not observed when the VESA bracket is screwed on.

- ➔ Tighten the screws to **max. 5 Nm**.
- ➔ If necessary: also use a suitable threadlocker, e.g., low-strength liquid adhesive.

## 5 Interfaces

### WARNING

**Hazard due to excessive current!**

Excessive current can cause overloading of the electronics which could then result in injury or damage.

- Operate the device with a power supply that complies with NEC Class 2!

### WARNING

**Hazard due to overvoltage!**

In case of no protective earth, there is a danger of overvoltage at the device.

- Always attach the protective earth!

### ATTENTION

**Damage to the electronics!**

The electronics can be damaged if plug-in connections are connected or disconnected while power is still being applied.

- Make sure that no power is being applied while connecting and disconnecting cables!

## 5.1 Interfaces of machine mounted terminal

All device connections are in the service slot.

Strain relief fixtures are provided on the support arm adapter.

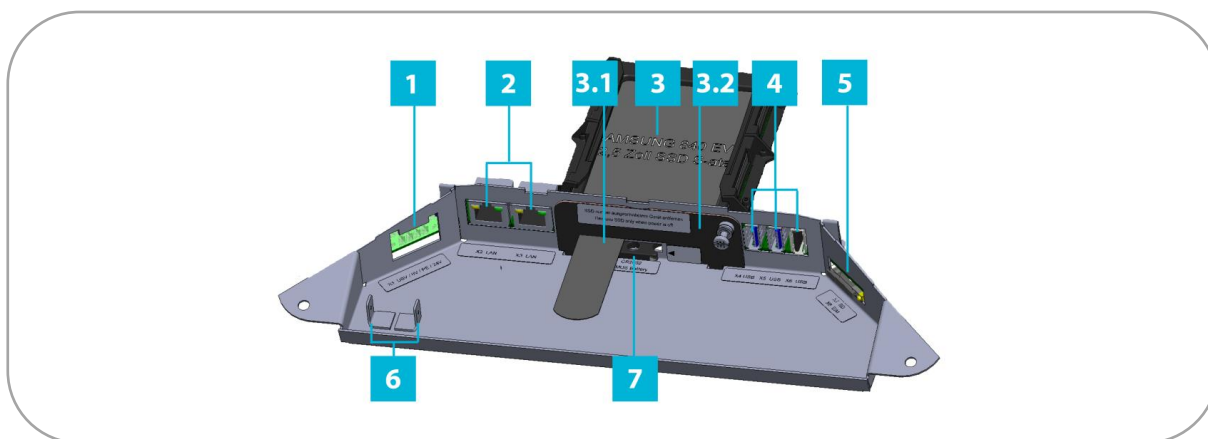


Figure 42: MMT service slot

1	Power supply
2	2 x LAN RJ45
3	1 x 2.5" SSD mass storage
3.1	Removal aid
3.2	Cover plate with screw fastening
4	2 x USB 3.0 1 x USB 2.0
5	1 x SD-Card Slot
6	PE connection (see chapter 5.3)
7	Battery

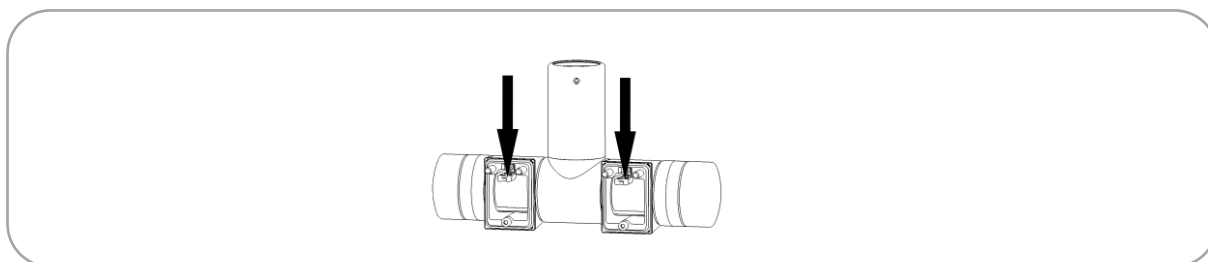


Figure 43: Strain relief fixtures on support arm adapter

## Power supply


You will need a power adapter with the following technical data:

Input voltage: 18 to 30 V  $\overline{=}$  (NEC Class 2)

Max. switch on current: 3 A (MMT8017)/4 A (MMT8024)

➔ For the power supply, use only the 4-pole plug connector (see the scope of delivery, chap. 3).

1	Can be used for shutdown function of a UPS
2	0 V $\overline{=}$
3	PE (see chapter 5.3)
4	24 V $\overline{=}$

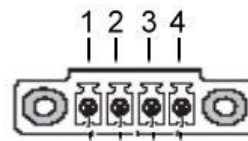

The figure shows the socket inside the device

## USB

The sockets comply with the USB 2.0 standard (white interface) and the USB 3.0 standard (blue interfaces). The USB 2.0 interfaces are downward compatible to USB 1.0, and the USB 3.0 interfaces are downward compatible to USB 2.0 and USB 1.0.

## LAN

You can integrate the device in an Ethernet network which supports 1 Gbit/s. For this purpose, use the 1Gbit RJ45 LAN ports. If required, the necessary drivers can be downloaded at [www.ads-tec.de](http://www.ads-tec.de). The specifications for the network topology must be observed.

## Mass storage

### Hard disk / Flash SSD

The following storage options are available:

1. mSATA module (permanently installed)
2. 2.5" SSD mass storage with up to 500 GB via SATA (removable, see chapter 8.4.2)

### External drives

External storage media can be connected via USB interfaces.

## ATTENTION

### Risk of data loss!

Data can be lost if an external data drive is connected or disconnected during operation.

➡ Switch off the device before connecting or disconnecting an external data drive!

## 5.2 Interfaces of machine mounted display

All device connections are in the service slot.

Strain relief fixtures are provided on the support arm adapter.

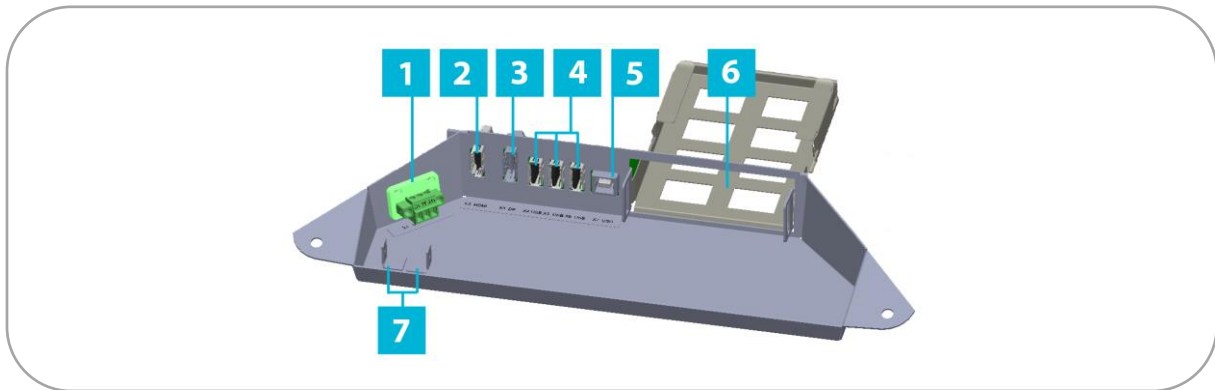


Figure 44: MMD service slot

1	Power supply
2	1 x HDMI
3	1 x display port
4	3 x USB 2.0 type A
5	1 x USB 2.0 type B
6	Mounting slot for extender kit
7	Earth connection (see chapter 5.3)

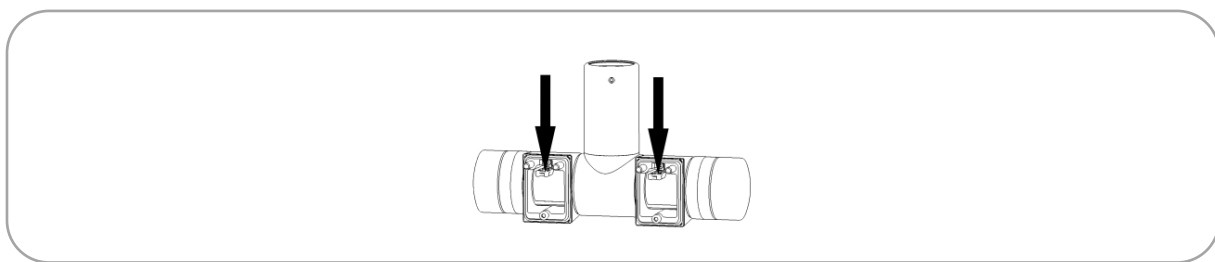


Figure 45: Strain relief fixtures on support arm adapter

## Power supply


You will need a power adapter with the following technical data:

Input voltage: 18 to 30 V $\overline{=}$  (NEC Class 2)

Max. switch on current: 2 A (MMD8017)/2.5 A (MMD8024)

For the power supply, use only the supplied 3-pole plug connector (see the scope of delivery, chap. 3).

1	24 V $\overline{=}$
2	PE (see chapter 5.3)
3	0 V $\overline{=}$

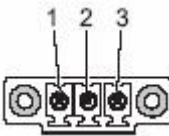

The figure shows the socket inside the device

## USB

These interfaces comply with the USB 2.0 standard (3 x type A and 1 x type B). They are downward compatible to USB 1.0.

## HDMI

The HDMI connection complies with version 1.4 of the HDMI standard.

## Display port

The display port complies with version 1.2a of the VESA DisplayPort standard.



## 5.2.1 Maximum cable lengths

**Recommendation for use:**

Note the maximum cable lengths for the respective application type.

The maximum length of cables which can be used to connect the display and computer is:

- HDMI up to max. 15 m
- Display port up to max. 10m
- USB 2.0 up to max. 15 m

The HDBaseT™ Extender Kit (chap. 6) is required for greater distances between the display and computer. This kit can be ordered from ADS-TEC.

HDBaseT™ Extender Kit:

- HDBaseT™ up to max. 100 m

## 5.3 Earthing

### 5.3.1 General informations regarding earthing

- **Protective earth (PE):** Protection by earthing of the housing, e.g. to discharge static charges.
- **Conductor cross sections:**  
**0V / 24V:** AWG 18 ( $\triangleq 1 \text{ mm}^2$ ) or AWG 16 ( $\triangleq 1,5 \text{ mm}^2$ ). With cable length  $> 5 \text{ m}$ , use the larger cross section.  
**PE:**  $\geq$  AWG16 ( $\triangleq 1,5 \text{ mm}^2$ ), optimum: AWG 10 ( $\triangleq 2,5 \text{ mm}^2$ )

### 5.3.2 Earthing MMT

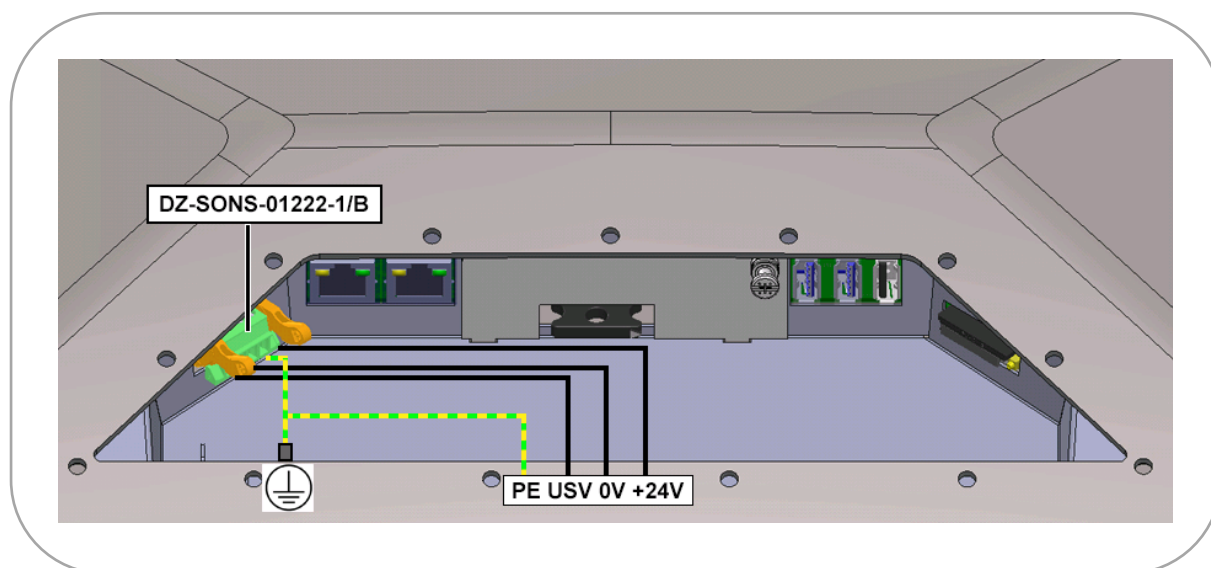


Figure 46: MMT – Earthing in the service slot

### 5.3.3 Earthing MMD without HDBaseT™ Extender Kit

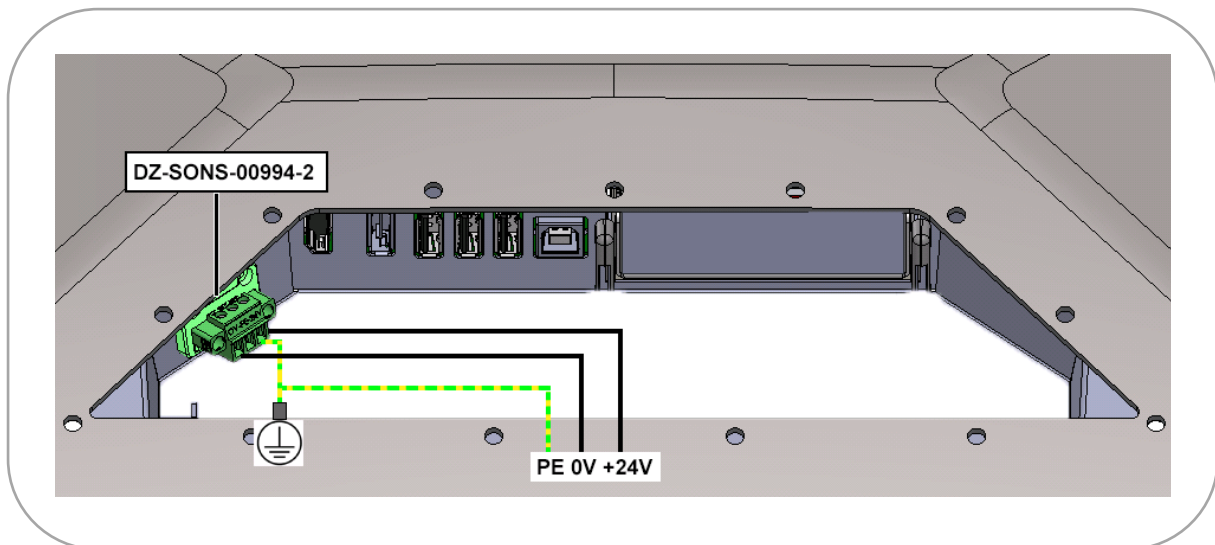


Figure 47: MMD without HDBaseT Extender Kit – Earthing in the service slot

### 5.3.4 Earthing MMD with HDBaseT™ Extender Kit

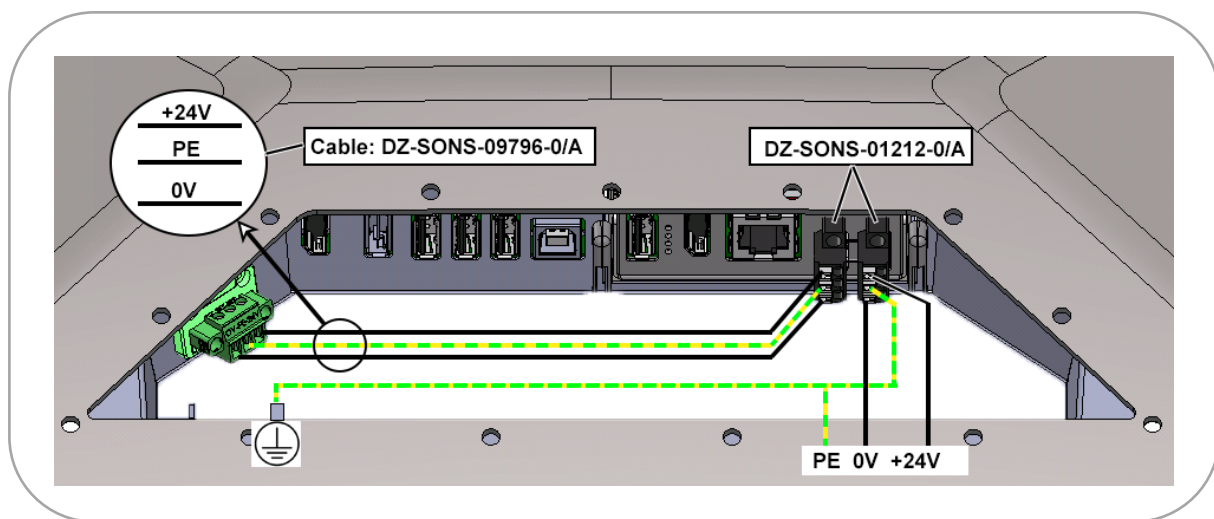


Figure 48: MMD with HDBaseT Extender Kit – Earthing in the service slot

### 5.3.5 Earthing of accessories

- The **PE connections** of accessories and of MMD/MMT can be connected at the double clamp in the service slot.

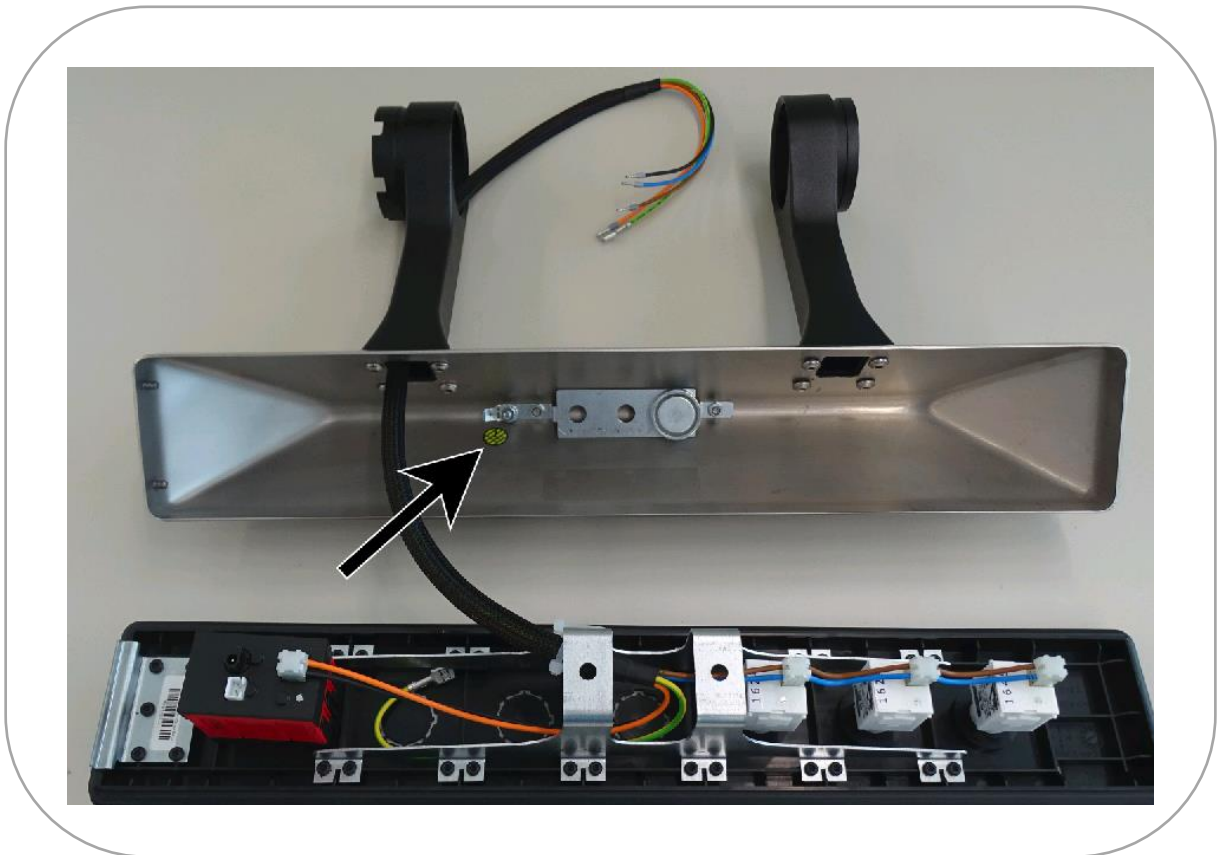


Figure 49: Example: PE connection of the optional key module

## 6 HDBaseT™ Extender Kit

### WARNING



#### Hazard due to excessive current!

Excessive current can cause overloading of the electronics which could then result in injury or damage.

➔ Operate the device with a power supply that complies with NEC Class 2!

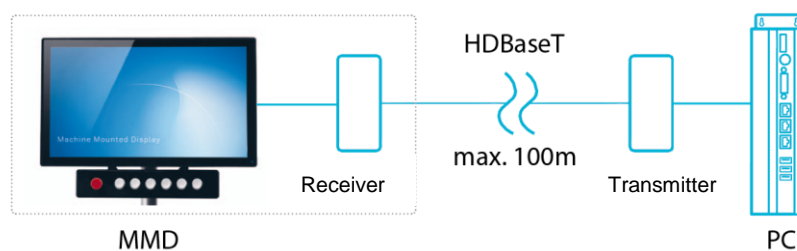


Figure 50: Use of HDBaseT™ Extender Kit

The HDBaseT™ Extender Kit allows data transmission between the computer and MMD over distances of up to 100 m. The scope of delivery is given in chapter 3.

### 6.1 Installation of receiver module

- ➔ Open the service slot of the machine mounted display.
- ➔ Slide the receiver module into the mounting slot.
  - The catches of the two retainer tabs on the receiver module must engage in the retainer clips.

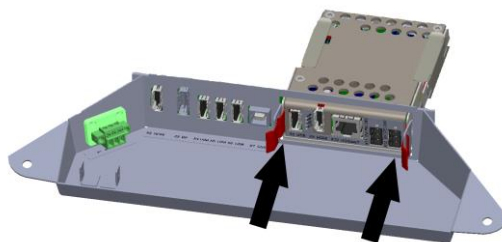


Figure 51: Receiver module in the service slot

## 6.2 Interfaces of receiver module

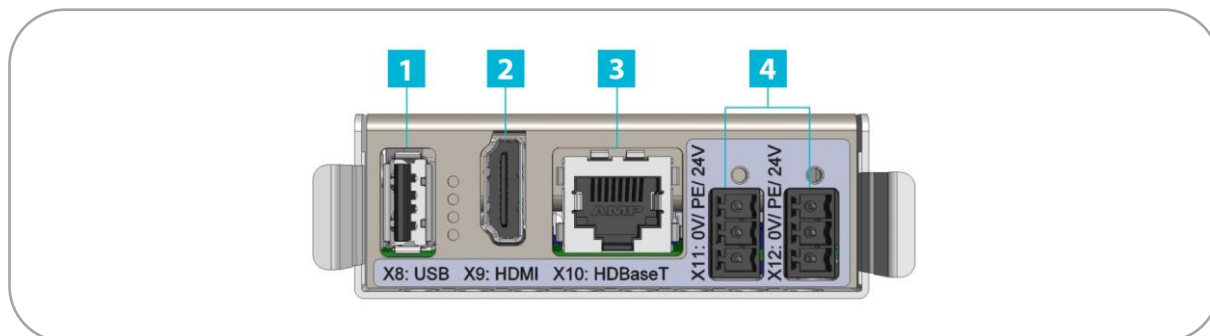


Figure 52: Interfaces of receiver module

1	USB 2.0
2	HDMI
3	HDBaseT™ 100Mbit
4	2 x 24 V $\overline{\text{---}}$ , connected in parallel

### Power supply

To operate the receiver module, you will need a power adapter with the following technical data:

Input voltage: 18 to 30 V  $\overline{\text{---}}$  (NEC Class 2)

Max. switch on current: 0.8 A


If you intend to connect the MMD to the power supply via the receiver module (chap.0), you will need a power adapter with the following technical data:

Input voltage: 18 to 30 V  $\overline{\text{---}}$  (NEC Class 2)

Max. switch on current: 3.3 A

For the power supply, use only the supplied 3-pole plug connector (chap. 3).

1	24 V $\overline{\text{---}}$
2	PE
3	0 V $\overline{\text{---}}$

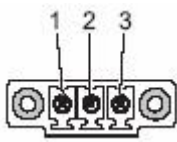

The figure shows the socket inside the receiver module.

## 6.3 Connecting cables between receiver module and MMD

- ➔ When connecting and disconnecting cables, make sure that no power is being applied to the device or cables.



### Recommendation for use:

Due to space constraints, connect the following cables before attaching the MMD to the bracket.



### Recommendation for use:

Due to space constraints, connect the cables in the sequence given below.

- ➔ Connect the power supply cable in order to supply the MMD with power via the receiver module.
- ➔ Screw in the fastening screws of the connectors finger-tight.



- ➔ Connect the USB cable.



- ➔ Connect the HDMI cable.



Complete cabling:



## 6.4 Interfaces of transmitter module

The transmitter module is intended for mounting on a top-hat rail (TS35) in the cabinet.

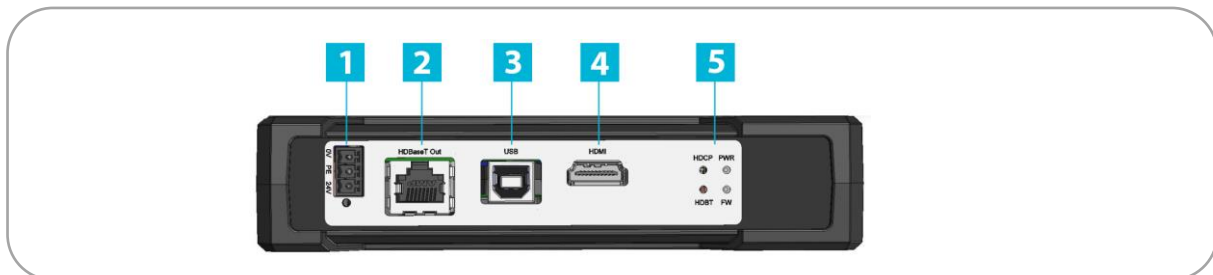


Figure 53: Interfaces of transmitter module

1	24 V $\overline{\text{---}}$
2	HDBaseT™ 100Mbit
3	USB 2.0
4	HDMI
5	SYS LEDs

➔ Connect the receiver module to the transmitter module via the HDBaseT™ connection.



### Recommendation for use:

The following CAT cables are recommended for connecting the transmitter to the receiver module: CAT6a cable 100 m with min. 24AWG / 27AWG

## Power supply


You will need a power adapter with the following technical data:

Input voltage: 18 to 30 V  $\overline{\text{---}}$  (NEC Class 2)

Max. switch on current: 0.6 A

For the power supply, use only the supplied 3-pole plug connector (chap. 3).

PIN number	Signal name
1	24 V $\overline{\text{---}}$
2	PE
3	0 V $\overline{\text{---}}$

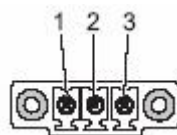

The figure shows the socket inside the transmitter module



## 6.5 Status indicators

### 6.5.1 Status indicators on transmitter module

The transmitter module has LEDs which indicate the status of the transmitter. They provide information about the graphics link (HDCP), the power supply (PWR), the firmware (FW) and the HDBaseT™ connection (HDBT).

The table below lists the various states.

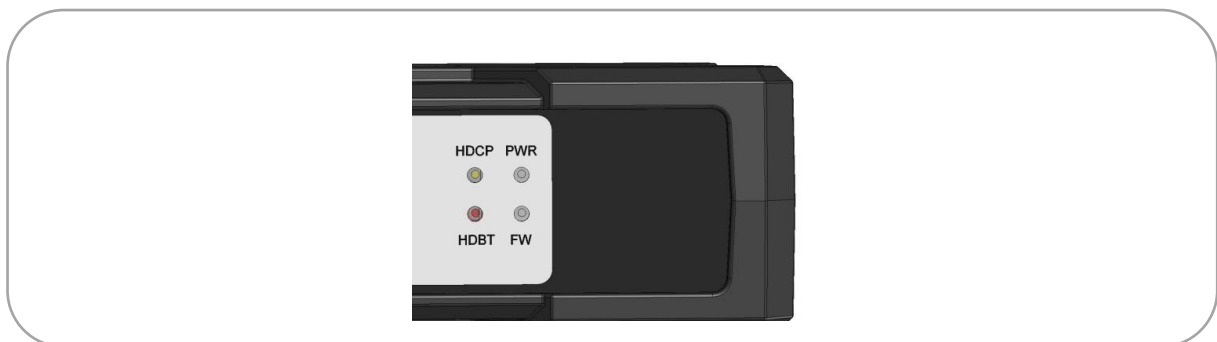












Figure 54: Status indicators on transmitter module

	LED signal	Action
<b>HDCP</b>	 Flashing	Graphics link is present
	 Off	No graphics link
<b>PWR</b>	 On (blue)	The device is supplied with voltage via POWER and is ready for operation
	 Off	No power supply
<b>HDBT</b>	 On	HDBaseT™ link present
	 Flashing slowly	Low Power Mode
	 Flashing rapidly	Ethernet Fallback Mode
	 Off	No link
<b>FW</b>	 Flashing	Firmware is loaded and ready for operation
	 Off	No firmware action

## 6.5.2 Status indicators on receiver module

The receiver module has LEDs which indicate the status of the receiver. They provide information about the graphics link (HDCP), the power supply (PWR), the firmware (FW) and the HDBaseT™ connection (HDBT).

The table below lists the various states.












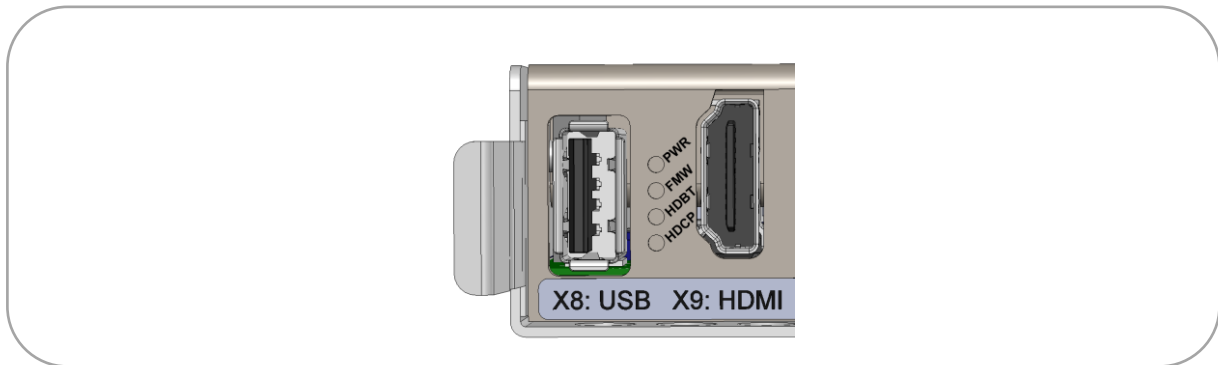

Figure 55: Status indicators on receiver module

	Signal	Action
<b>PWR</b>	 On (blue)	The device is supplied with voltage via POWER and is ready for operation
	 Off	No power supply
<b>FW</b>	 Flashing	Firmware is loaded and ready for operation
	 Off	No firmware action
<b>HDBT</b>	 On	HDBaseT™ link present
	 Flashing slowly	Low Power Mode
	 Flashing rapidly	Ethernet Fallback Mode
	 Off	No link
<b>HDCP</b>	 Flashing	Graphics link is present
	 Off	No graphics link

## 7 Commissioning

### WARNING

**Hazard due to excessive current!**

Excessive current could result in injury or damage.

- Operate the device only with a power supply that complies with NEC Class 2!

### WARNING

**Hazard due to overvoltage!**

In case of no protective earth, there is a danger of overvoltage at the device.

- Always attach the protective earth!

### ATTENTION

**Hazard due to excessive voltage!**

The electronics can be damaged if the permissible voltage is exceeded.

- Make sure to meet the permissible voltage for this device!

### ATTENTION

**Damage to the electronics!**

The electronics can be damaged if plug-in connections are connected or disconnected while power is still being applied.

- Make sure that no power is being applied while connecting and disconnecting cables!

## ATTENTION

### Damage to the electronics!

Condensation can damage the device.

→ Switch on the device only after it has acclimated to the ambient temperature!



### Recommendation for use:

The shielding of a data cable must always be connected with the connector housing (EMC).



### Recommendation for use:

Insofar as they are specified in the scope of delivery or in the replacement parts list, only connectors and cables offered by ADS-TEC are to be used for commissioning and during operation. All other connectors and cables which you use for commissioning and during operation must have been approved.

## Check for operational readiness

- Make sure that the screw connections between
  - the device and support arm adapter
  - the support arm adapter and connecting tubeare tightened to the specified torques.
- Make sure that the service slot and the USB flap are completely closed.

## Commissioning device

- When connecting and disconnecting cables, make sure that no power is being applied to the device or cables.
- Connect the cables to the interfaces in any order.
- Secure the cables to the support arm adapter using the strain relief fixtures.
- Make sure that the 24 V power supply complies with NEC Class 2.
- Connect the device to the power supply.

## 8 Operation

### 8.1 Switching on and off

#### ATTENTION

**Damage to the electronics!**

The electronics can be damaged if the device is switched off and then on again too quickly.

➔ After switching off and before switching on you must wait for at least 5 seconds!

➔ Switch on the device by connecting it to the external power supply.

If an operating system (Windows or Linux) is installed, it now starts.

When the device is on, the status LED of the monitor lights up. This LED is on the front at the bottom right.

➔ Switch off the device by shutting down the operating system.

### 8.2 Multifunction touch-screen



Figure 56: Touch-screen

➔ Operate the multifunction touch-screen using up to 10 fingers. It is not only possible to tap elements – swiping and dragging movements are also possible.

**Recommendation for use:**

The touch calibration data is stored independent of the operating system and requires no additional calibration by the user.

The necessary driver software is already integrated in the respective operating system.

- ➔ If you need other drivers, you can download them at <http://www.ads-tec.de> in the Download area.

**Recommendation for use:**

With older operating systems, a driver may be required for the touch-screen functionality.

## 8.3 Turning/tilting device and key module

### Tilting device

- ➔ Stand behind the device.
- ➔ Unscrew the fastening screw on the left side of the support arm adapter.
- ➔ Adjust the tilt of the device.
- ➔ Screw down the end again.

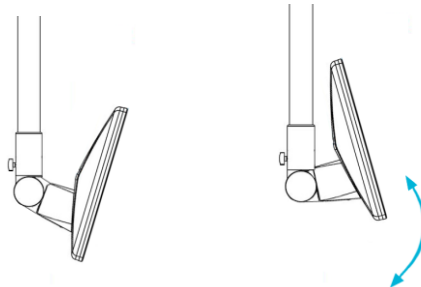


Figure 57: Tilting device

**Recommendation for use:**

Make sure that the fastening screw of the support arm adapter is screwed out far enough so that the device moves smoothly. If rattling noises are heard when turning the device, unscrew the end further.

**Tilting key module**

1. Stand behind the device.
2. Unscrew the fastening screw on the right side of the support arm adapter.
3. Adjust the angle of the key module.
4. Screw down the end again.

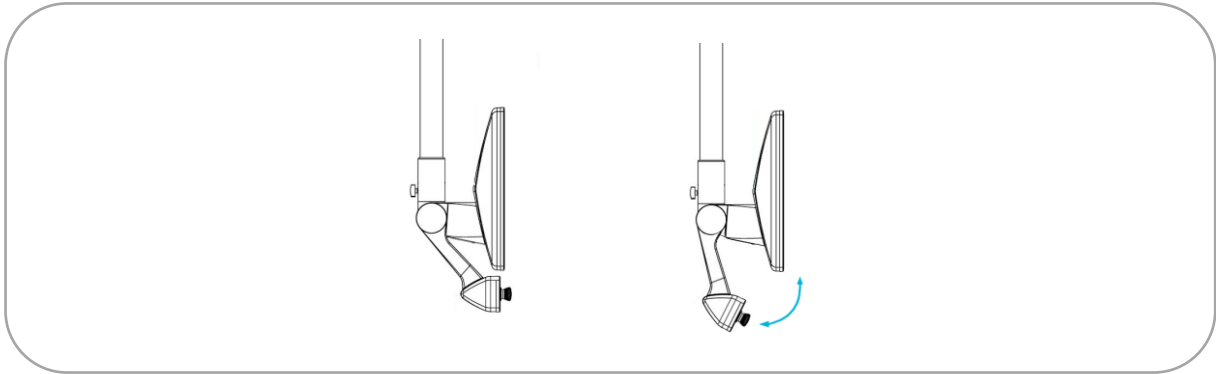


Figure 58: Tilting key module

**Turning device**

- ➔ Undo the wing screw.
- ➔ Turn the device (it can be turned through max. 340°).
- ➔ Tighten the wing screw again.

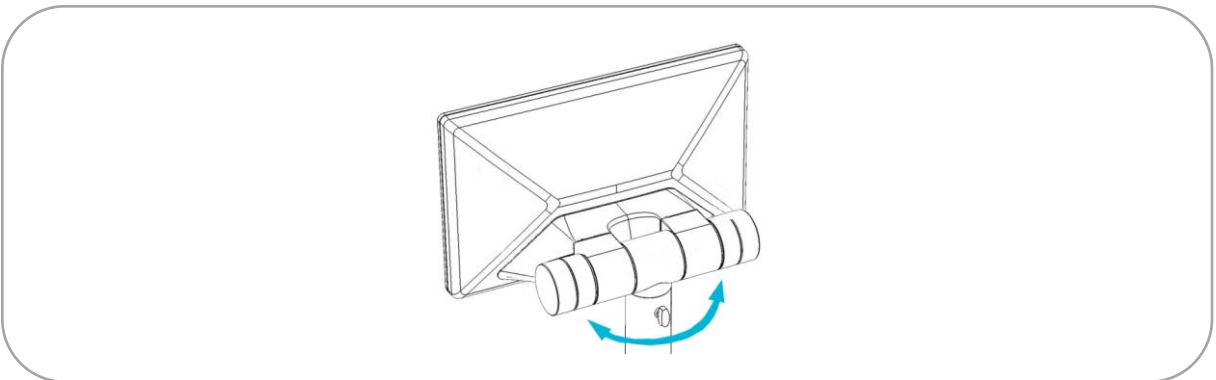


Figure 59: Turning device

## 8.4 Component replacement

### ATTENTION

**Risk of short circuit!**

A short circuit can occur if components are replaced while the device is still switched on.

→ Before replacing components, disconnect the power supply from the device!

### 8.4.1 Replacing BIOS battery on MMT8000 series

### ATTENTION

**Risk of explosion!**

Hazard due to overheating of the battery

→ Make sure that the battery is of the correct type and that it is inserted with the correct polarity!

**Recommendation for use:**

Avoid touching both battery poles at the same time.

The device of the MMT8000 series contains a lithium battery for supplying the system clock with power as long as the supply voltage is not connected. The battery has a life cycle of 3-5 years depending on which load is applied. It is in the service slot (chap.0).

The battery type to be used is:

lithium battery type CR2032 (230 mAh / 3 V)


**Recommendation for use:**

Use only the battery type recommended by ADS-TEC.




## Replacing battery

- ➔ Pull out the battery drawer (pull both sides of the battery drawer at the same time).

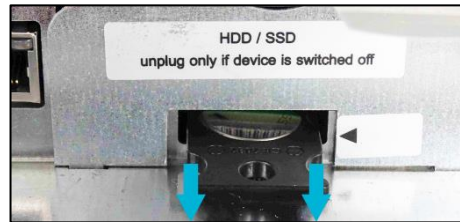


- ➔ Remove the old battery.
- ➔ Press the new battery (1) into the drawer (2); the battery must engage in the drawer.
  - The positive and negative terminal is indicated on the battery holder.

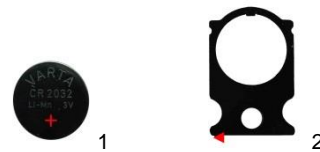

- ➔ Turn the drawer (3) over so that the negative terminal is pointing upwards.



- ➔ Insert the drawer into its slot (4); the drawer must engage in the slot.

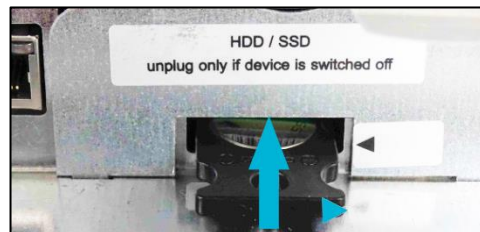

## 8.4.2 Replacing mass storage device

On the MMT8000 series, there may be a mass storage device in the service slot (chap.0).

### Removing mass storage device

- ➔ Remove the cover plate.
  - To do so, undo the fastening screw (PH1 cross-tip screwdriver).



- ➔ Grip the mass storage device by its removal aid (white flap) and pull it carefully and parallel along its guides into the slot.



- ➔ Remove the mass storage device at an angle in an upward direction.




## Installing mass storage device

- Insert the mass storage device into the slot at an angle.



- Lower the mass storage device and push it in all the way parallel to its guides.

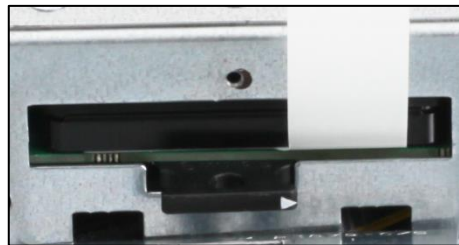

- Insert the retainer tabs of the cover into the guide slots and close the cover.




- Screw in the fastening screw finger-tight (PH1 cross-tip screwdriver)



### 8.4.3 Replacement parts list

Insofar as they are specified in the scope of delivery or in the replacement parts list, only connectors and cables offered by ADS-TEC are to be used for commissioning and during operation. All other connectors and cables which you use for commissioning and during operation must have been approved.

The following components can be ordered as replacement parts from ADS-TEC:

Device/designation	Designation	Part number
<b>MMT</b>		
Plug	4-pole plug with locking lever, green	DZ-SONS-01222-x
BIOS battery	Lithium battery CR2032 230mAh	DZ-SONS-04075-1
PE cable connection	6.35 mm blade terminal with retainer tab	DZ-HAND-36102-0
Cable tie	Cable tie 98 x 2.5 mm, natural	DZ-HAND-03225-0
<b>MMD</b>		
Plug	3-pole plug, black	DZ-SONS-01212-x
PE cable connection	6.35 mm blade terminal with retainer tab	DZ-HAND-36102-0
Cable tie	Cable tie 98 x 2.5 mm, natural	DZ-HAND-03225-0
<b>Transmitter Tx</b>		
Cable	USB2.0 1 m	DZ-SONS-05642-x
Cable	HDMI Male-Male 1 m	DZ-SONS-05643-x
Cable	HDMI Male-DP Male 1 m	DZ-SONS-05644-x
Plug	3-pole plug, black	DZ-SONS-01212-x
<b>Receiver Rx</b>		
Cable	24 V  power supply	DZ-SONS-09796-x
Cable	USB2.0	DZ-SONS-05647-x
Cable	HDMI Male-Male	DZ-SONS-05646-x
Plug	3-pole plug, black	DZ-SONS-01212-x

## 9 Maintenance, cleaning and disposal

Maintenance and cleaning must be performed by appropriately qualified personnel.

### 9.1 Maintenance

The following maintenance intervals must be observed:

Interval	Location	Activity
Daily	Overall device	Visually inspect for loose objects and visible damage
Monthly	Fixing screws	Check that they are seated securely; tighten as necessary
3 years	BIOS battery	Change
<b>Optional, if installed</b>		
Daily	Emergency stop button	Check that it functions correctly

### 9.2 Cleaning

How often you need to clean the system depends on your work and the operating environment. If necessary, follow the on-site cleaning plan.

➔ Clean and maintain your system regularly.

#### Cleaning agents and disinfectants

We recommend cleaning the devices using commercially available glass cleaning agents.

The following cleaning agents have also been successfully tested:

#### Ethanol and isopropanol based:

- Deconex Solarsept
- Bacillol
- Meliseptol

**Neutral cleaning agents:**

- P3-Cosa Foam 40
- P3-Cosa PUR 80

**Disinfectants:**

- Hydrogen peroxide < 30 %

**Acidic cleaning agents:**

- P3-cosa CIP 72

**Quarternary ammonium compounds:**

- Klerdice-CR Biocide A
- Deconex Surface AF
- P3-cosa DES


## 9.3 Disposal

Electrical and electronic devices must not be disposed of with household waste, but must rather be taken to a collection point for waste electrical equipment. Such a collection point is generally operated by public waste management authorities, i.e., by municipalities.

# 10 Technical data

## 10.1 MMT-MMD technical data

### 10.1.1 Data sheet

	MMT8017	MMT8024	MMD8017	MMD8024
Housing	Fully enclosed stainless steel housing			
Display	17.3" LED backlight	23.8" LED backlight	17.3" LED backlight	23.8" LED backlight
Resolution	1920 x 1080 pixels	1920 x 1080 pixels	1920 x 1080 pixels	1920 x 1080 pixels
Touch	PCAP multi-touch / toughened glass			
Processor	Intel® Celeron™ 1.6 GHz (2980U)  or  Intel® Core™ i5 1.9 GHz (4300U)		-	
RAM	to 8 GB DDR3		-	
Mass storage	SSD to 500 GB  or  mSATA SSD to 128 GB		-	
Network	2 x 1 Gbit/s Ethernet RJ45		-	
Interfaces	1 x USB 2.0/2 x USB 3.0 (1 x accessible from outside, optional)		3 x USB 2.0 (1 x accessible from outside, optional)  1 x USB slave  1 x HDMI, 1 x display port	
Power adapter	18 – 30 V  NEC Class 2			
Operating system	Windows Embedded Standard 7 (64 bit) or Windows 7 Ultimate [for Embedded Systems] (64 bit) or Windows Embedded 8.1 Industry Pro (64 bit) or Windows 10 IoT (64 bit)		-	
Protection class	IP65 (not verified by UL, tested by ads-tec GmbH)			
Operating temperature	0 °C to +50 °C	0 °C to +45 °C	0 °C to +50 °C	0 °C to +45 °C
Dimensions (W x H x D) (without support arm and key module)	431 x 261 x 68 mm	578 x 347 x 67 mm	431 x 261 x 68 mm	578 x 347 x 67 mm
Weight	Approx. 8 kg (without key module)	Approx. 9.5 kg (without key module)	Approx. 8 kg (without key module)	Approx. 9.5 kg (without key module)
Vibration	10 m/s <sup>2</sup> ; 2 – 200 Hz (class 3M4 of standard IEC/EN 60721-3-3)			
Shock resistance	100 m/s <sup>2</sup> ; t=11 ms (class 3M4 of standard IEC/EN 60721-3-3)			
Humidity	10 to 85% non-condensing			

### 10.1.2 External device dimensions MMT8017

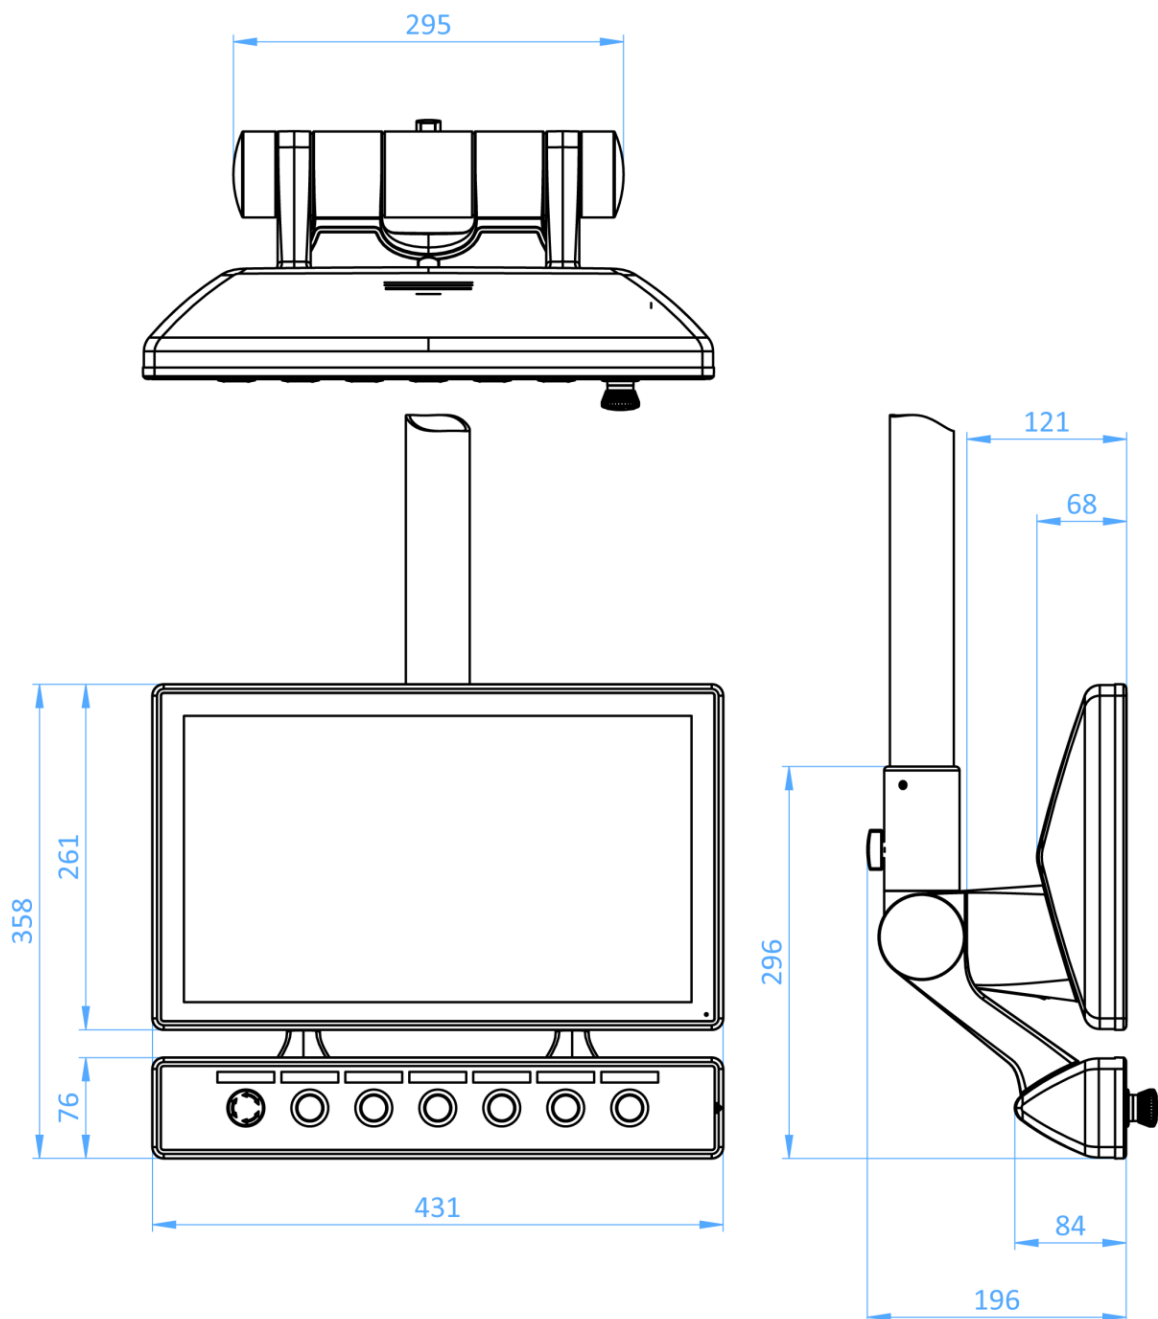


Figure 60: External device dimensions MMT8017



### 10.1.3 External device dimensions MMT8024

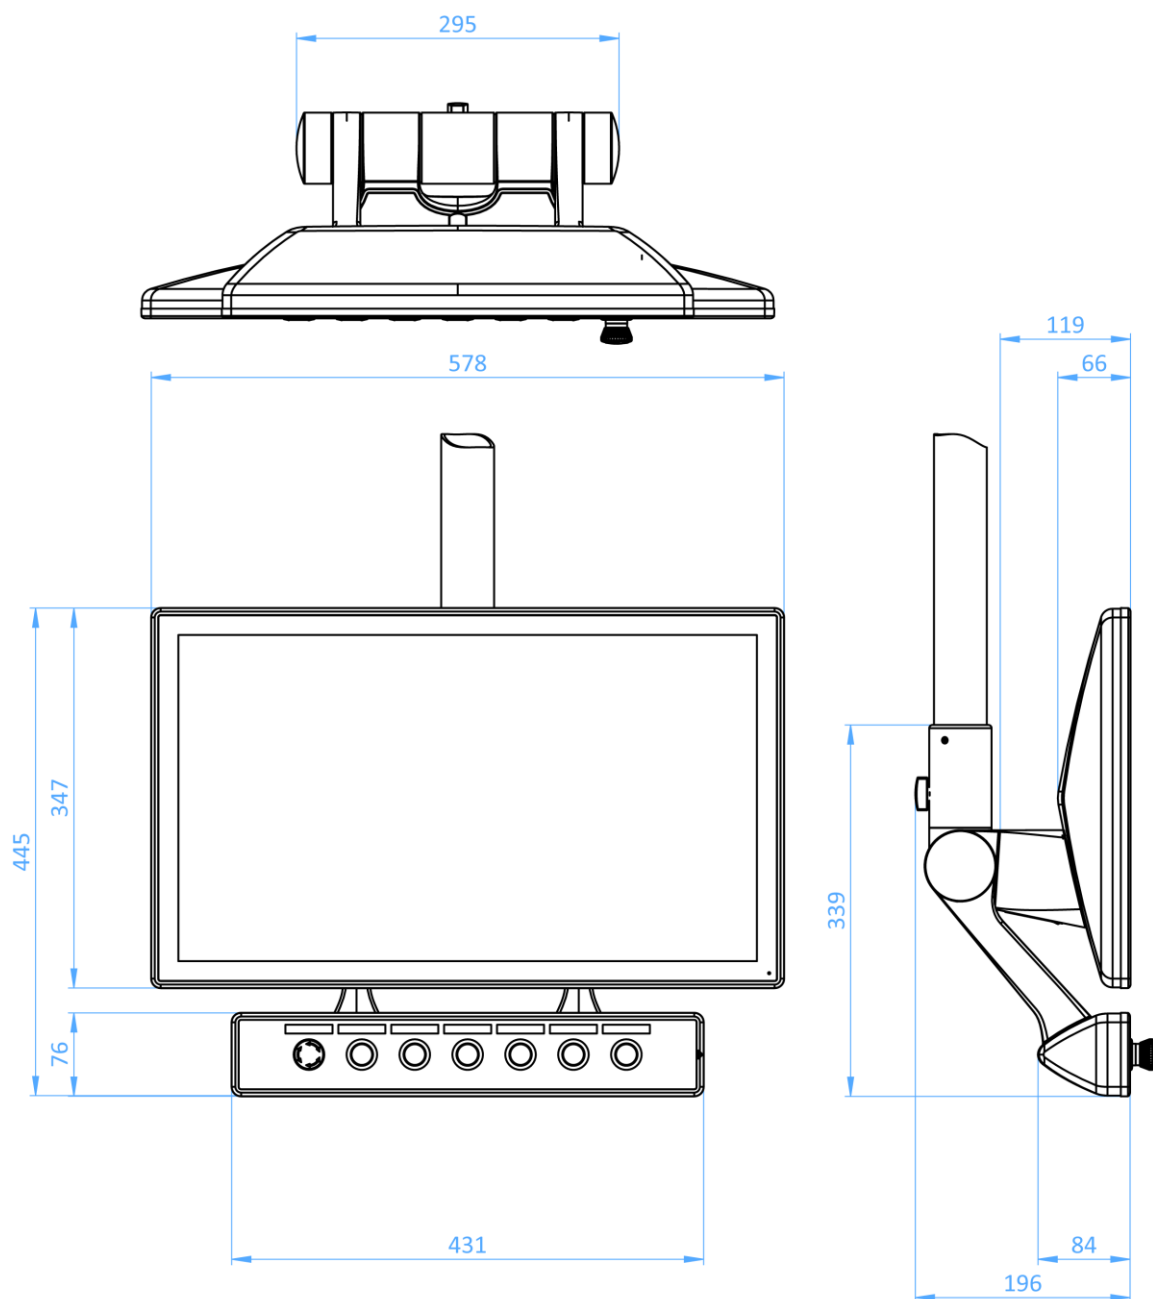


Figure 61: External device dimensions MMT8024

### 10.1.4 External device dimensions MMD8017

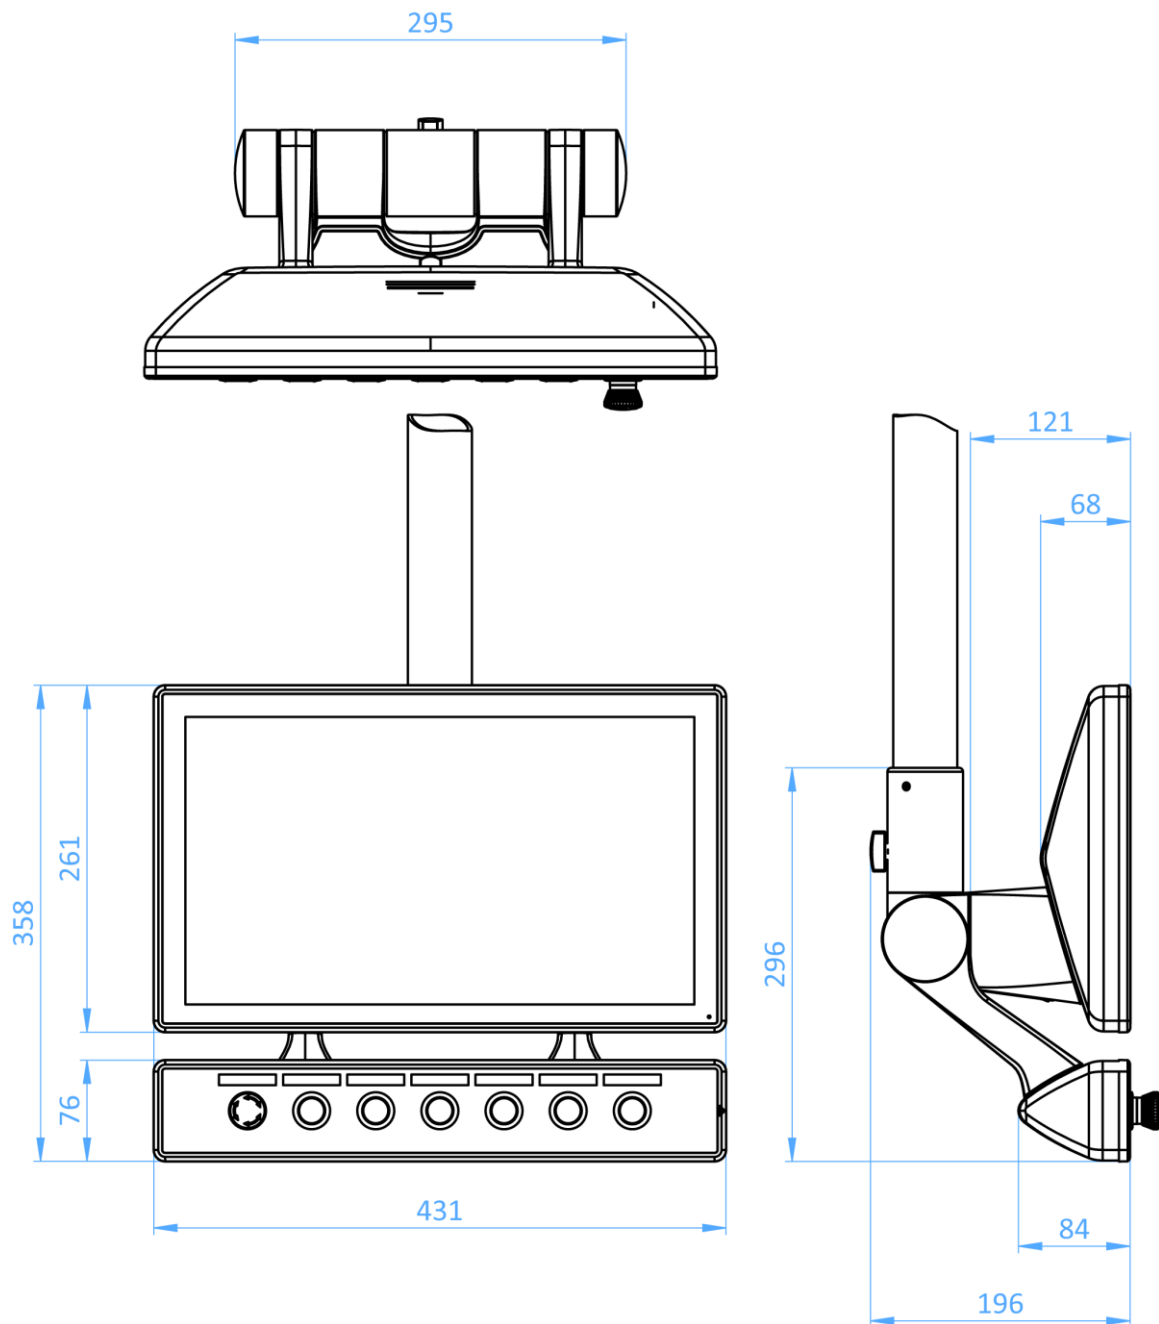


Figure 62: External device dimensions MMD8017

### 10.1.5 External device dimensions MMD8024

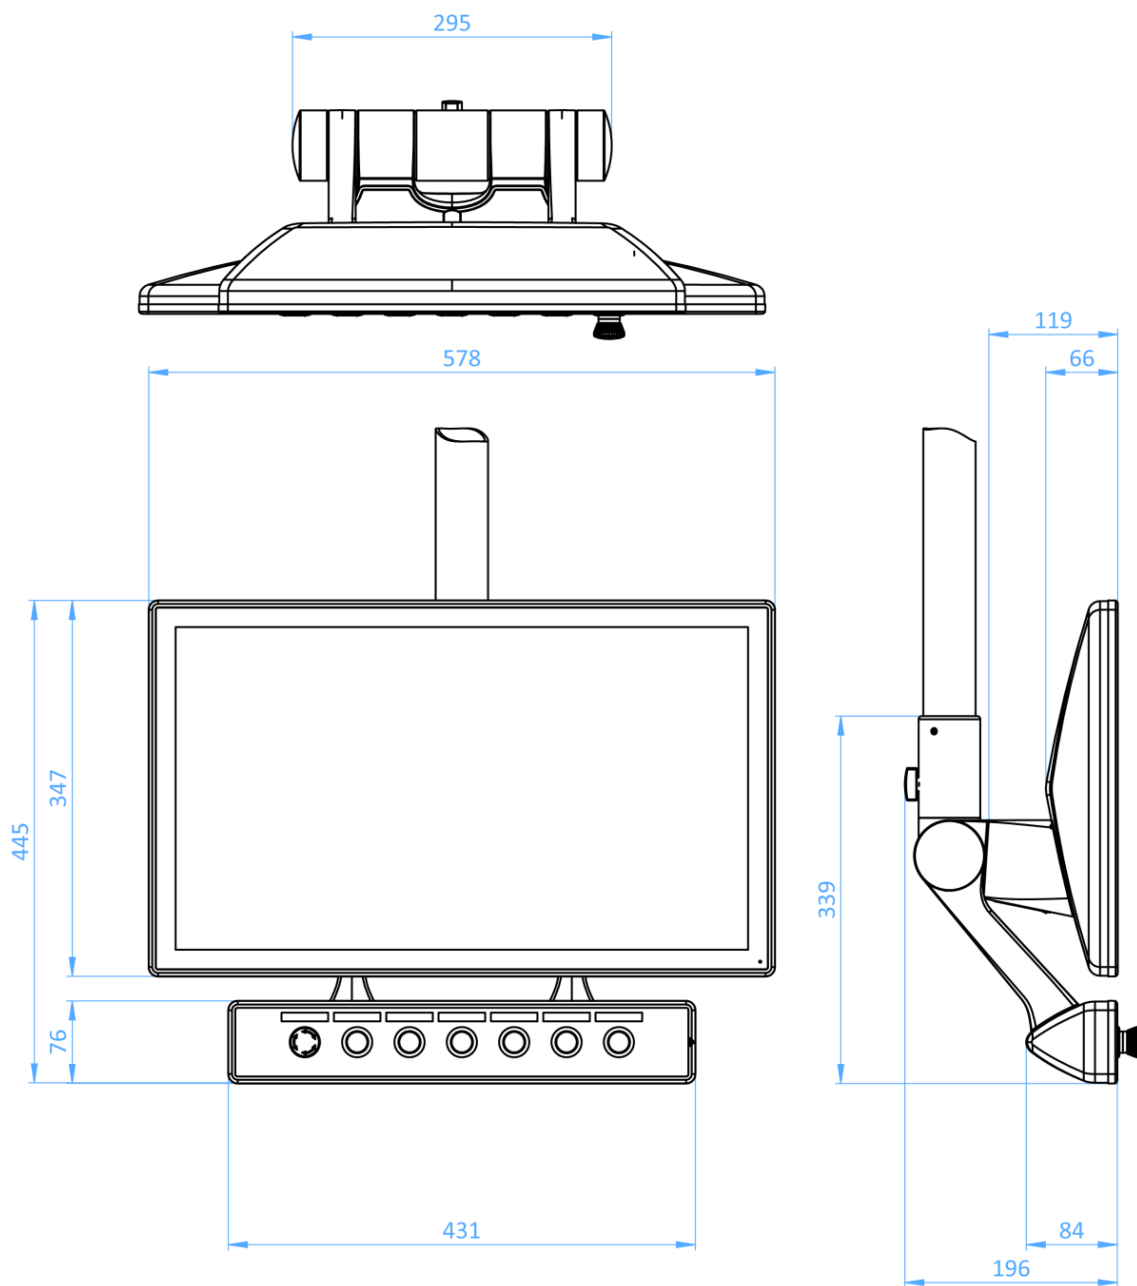




Figure 63: External device dimensions MMD8024

## 10.2 HDBaseT™ Extender Kit technical data

### 10.2.1 Data sheet

	Transmitter Tx	Receiver Rx
<b>Housing</b>	Aluminium die-casting housing	-
<b>Interfaces</b>	1 x USB 2.0 1 x HDMI 1 x HDBaseT™ 100Mbit	1 x USB 2.0 1 x HDMI 1 x HDBaseT™ 100Mbit
<b>Power supply</b>	18 – 30 V  NEC Class 2	18 – 30 V  NEC Class 2
<b>Protection class</b>	IP 20	IP 20
<b>Operating temperature</b>	0° to 55°C	0° to 50°C
<b>Dimensions (W x H x D)</b>	140 x 159 x 35 mm	74 x 105 x 27 mm
<b>Weight</b>	0.7 kg	0.2 Kg
<b>Humidity</b>	10 to 85% non-condensing	

### 10.2.2 External device dimensions – HDBaseT™ Extender Kit transmitter

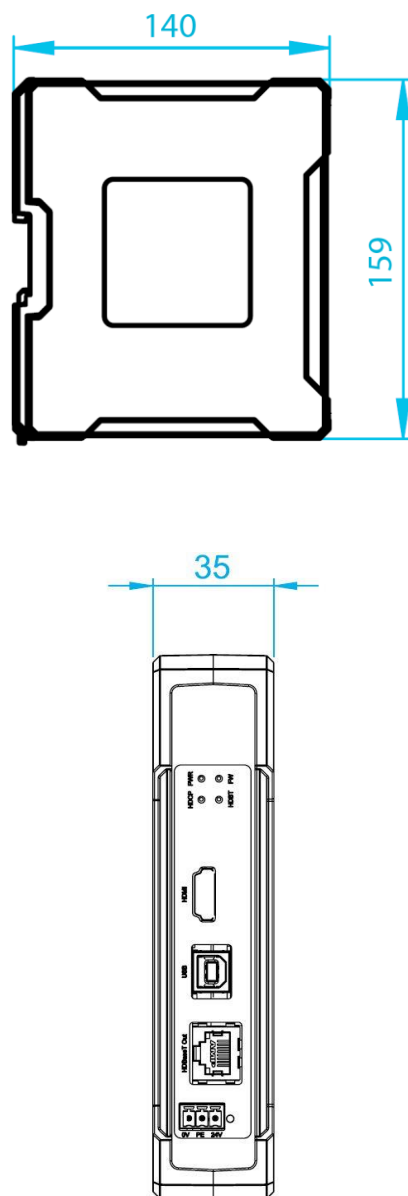


Figure 64: External device dimensions – HDBaseT™ Extender Kit transmitter

### 10.2.3 External device dimensions – HDBaseT™ Extender Kit receiver

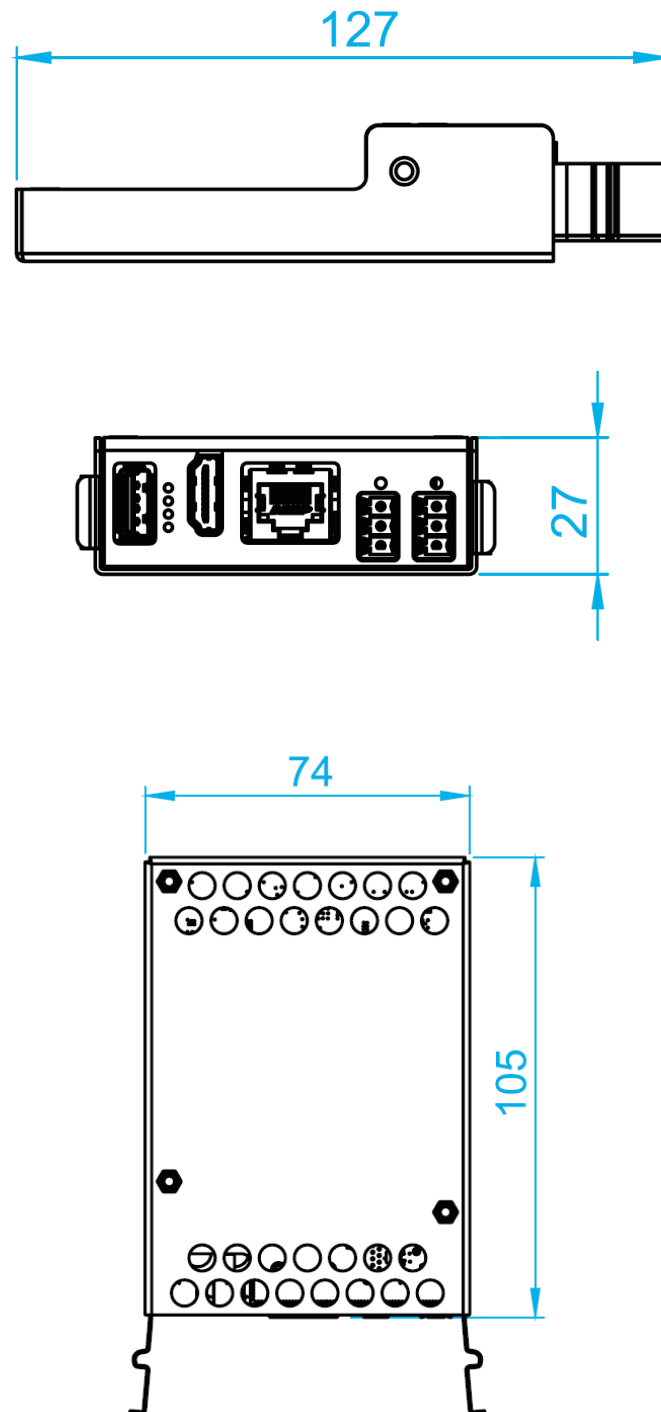


Figure 65: External device dimensions – HDBaseT™ Extender Kit receiver

# 11 List of figures

Figure 1: Use of MMT and MMD .....	6
Figure 2: Mounting on support arm and stand .....	7
Figure 3: Crosspiece adapter .....	7
Figure 4: Turning and tilting.....	8
Figure 5: VESA adapter.....	8
Figure 6: Overview of screw connection to support arm adapter .....	22
Figure 7: Overview of screw connection to VESA 75 adapter .....	22
Figure 8: Designations.....	23
Figure 9: Service slot – MMT 8000 series.....	24
Figure 10: Service slot – MMD8000 series .....	25
Figure 11: Screw connection of adapter to device .....	27
Figure 12: Opening key module .....	28
Figure 13: Prepunched openings in key module .....	29
Figure 14: Labelling strip .....	29
Figure 15: Inserting labelling strip .....	29
Figure 16: Cables of key module.....	30
Figure 17: Closing key module .....	30
Figure 18: Mounting on support arm and stand .....	31
Figure 19: Screws in support arm adapter .....	31
Figure 20: Support arm and stand position .....	31
Figure 21: Inserting screws in adapter .....	32
Figure 22: Installation template .....	33
Figure 23: Countersinking connecting tube (support arm) .....	33
Figure 24: Installation template .....	34
Figure 25: Countersinking connecting tube (stand) .....	34
Figure 26: Cable routing for support arm mounting .....	35
Figure 27: Cable routing for stand mounting.....	35
Figure 28: Screwing adapter to tube (support arm) .....	36
Figure 29: Screwing adapter to tube (stand).....	36
Figure 30: USB flap .....	37
Figure 31: Removing service slot cover .....	37
Figure 32: USB cable on service slot cover .....	38

Figure 33: Retainer tabs of service slot cover .....	38
Figure 34: USB flap .....	38
Figure 35: Mounting device on adapter .....	39
Figure 36: Screwing device to adapter .....	39
Figure 37: Installation with crosspiece adapter .....	40
Figure 38: Crosspiece adapter .....	40
Figure 39: Device with VESA adapter .....	41
Figure 40: Retainer plates on VESA adapter .....	41
Figure 41: Rubber insert of VESA adapter .....	42
Figure 42: MMT service slot .....	44
Figure 43: Strain relief fixtures on support arm adapter .....	44
Figure 44: MMD service slot .....	47
Figure 45: Strain relief fixtures on support arm adapter .....	47
Figure 46: MMT – Earthing in the service slot .....	50
Figure 47: MMD without HDBaseT Extender Kit – Earthing in the service slot .....	51
Figure 48: MMD with HDBaseT Extender Kit – Earthing in the service slot .....	51
Figure 49: Example: PE connection of the optional key module .....	52
Figure 50: Use of HDBaseT™ Extender Kit .....	53
Figure 51: Receiver module in the service slot .....	53
Figure 52: Interfaces of receiver module .....	54
Figure 53: Interfaces of transmitter module .....	56
Figure 54: Status indicators on transmitter module .....	57
Figure 55: Status indicators on receiver module .....	58
Figure 56: Touch-screen .....	61
Figure 57: Tilting device .....	62
Figure 58: Tilting key module .....	63
Figure 59: Turning device .....	63
Figure 60: External device dimensions MMT8017 .....	72
Figure 61: External device dimensions MMT8024 .....	73
Figure 62: External device dimensions MMD8017 .....	74
Figure 63: External device dimensions MMD8024 .....	75
Figure 64: External device dimensions – HDBaseT™ Extender Kit transmitter .....	77
Figure 65: External device dimensions – HDBaseT™ Extender Kit receiver .....	78



## 12 Service & support

ADS-TEC and its partner companies offer you comprehensive maintenance and support services, ensuring quick and competent support should you have any questions or concerns with regard to ADS-TEC products and equipment.

Because ADS-TEC products are also used by partner companies, these devices may have customised configurations. Should any questions arise with regard to such specific configurations and software installations, please contact the system supplier in question as ads-tec will not be able to answer such questions.

ADS-TEC does not provide support services for any device that was not purchased directly from ADS-TEC. In this case, maintenance and support is provided by the partner company.

### 12.1 ADS-TEC support

The ADS-TEC support team is available for inquiries from direct customers between 8:30am and 5:00pm, Monday to Friday

and can be reached via phone, fax or e-mail:

Phone: +49 7022 2522-202

Fax: +49 7022 2522-400

Email: [support@ads-tec.de](mailto:support@ads-tec.de)

Alternatively, you can contact us by completing a support form on our website [www.ads-tec.de](http://www.ads-tec.de). Our Support team will then get in touch with you as soon as possible.