

Version 2.5

Translation of the original  
instruction manual



# Instruction manual

## Terminals

### VMT7000 series

**adstec**

Industrial IT

# Table of Contents

<b>1</b>	<b>Notes</b>	<b>3</b>
1.1	General remark	3
1.2	Limitation of liability	3
1.3	Manufacturer	3
1.4	Relevant device documentation	3
<b>2</b>	<b>Safety instructions</b>	<b>4</b>
2.1	Structure of safety instructions	4
2.2	Graduation of risk level	4
2.3	Explanation of used symbols	4
2.4	Symbols	5
2.5	Data, figures and modifications	5
2.6	Trademarks	5
2.7	Copyright	5
2.8	Environmental conditions	6
2.9	Standards	7
<b>3</b>	<b>Operating and safety instructions</b>	<b>8</b>
3.1	Operating location	9
3.2	Damage due to improper use	9
3.3	Warranty / repairs	9
3.4	Intended use	9
3.5	Improper use	10
3.6	Treatment and disposal of lithium batteries	10
3.7	Safety instructions	11
<b>4</b>	<b>Product description</b>	<b>12</b>
4.1	Device features	12
4.2	24 V/48 V DC* power supply	14
4.2.1	Release contact (IGN)	15
4.3	Autostart function	16
4.4	USB connections	16
4.4.1	Service slot	16
4.4.2	Front panel	16
4.5	Network connection (RJ45)	17
4.6	WLAN wireless card (optional)	18
4.7	Bluetooth wireless card (optional)	19
4.8	Serial interface COM1 (RS232)	20
4.9	Heater (optional)	20
<b>5</b>	<b>Assembly</b>	<b>21</b>
5.1	External Device Dimensions VMT7008	23
5.2	External Device Dimensions VMT7010	24
5.3	External Device Dimensions VMT7012	25
5.4	External Device Dimensions VMT7015	26

<b>6</b>	<b><u>Putting into operation</u></b>	<b>27</b>
6.1	Scope of delivery	27
6.2	Check for operational readiness	27
6.3	Order of steps during commissioning	28
6.4	Operation	28
6.5	Taking out of operation	28
6.6	Available interfaces	29
<b>7</b>	<b><u>Operation</u></b>	<b>31</b>
7.1	Front Panel Operation Keys	31
7.2	Soft keyboard	32
7.3	Touch screen	33
7.4	Status displays	34
7.5	Speakers	35
<b>8</b>	<b><u>Wireless</u></b>	<b>36</b>
8.1	WLAN (optional)	36
8.2	RFID reader (as an option)	38
8.3	RFID configuration	39
8.3.1	MIFARE	39
8.3.2	LEGIC	40
8.4	ComInput configuration	41
<b>9</b>	<b><u>Drives</u></b>	<b>42</b>
<b>10</b>	<b><u>Software &amp; driver installation</u></b>	<b>43</b>
<b>11</b>	<b><u>Maintenance</u></b>	<b>44</b>
11.1	Information on maintenance	44
11.2	Information on storage	44
<b>12</b>	<b><u>Technical details</u></b>	<b>45</b>
<b>13</b>	<b><u>Service &amp; support</u></b>	<b>46</b>
13.1	ADS-TEC support	46
13.2	Company address	46

# 1 Notes

## 1.1 General remark

This instruction manual is intended to ensure safe and efficient handling of the device. It must be accessible to all persons who are involved in installation and commissioning of the device and must be read and understood before any work is started.

The instruction manual must be passed on to the device/system operator after commissioning has been completed.

All of the safety notices and handling instructions given in the manual must be obeyed in order to ensure that work is carried out safely.

Figures used in this instruction manual are provided for basic understanding and may differ from the actual design.

The original version of this instruction manual was written in German. All non-German versions of this instruction manual are translations of the German instruction manual.

## 1.2 Limitation of liability

ads-tec GmbH shall not be liable for personal injury, property damage or damage caused to the device as well as consequential damage that is/was the result of non-compliance with this instruction manual, improper use of the device, repairs and other actions on the device by unqualified electricians and electricians not certified by ADS-TEC, or that is/was the result of using unapproved replacement parts. Failure to observe the maintenance intervals shall also result in exclusion from liability.

Furthermore, it is strictly forbidden to make any unauthorised alterations or technical modifications to the device.

## 1.3 Manufacturer

The manufacturer of the product is ads-tec GmbH. The company is referred to in the following as ADS-TEC.

## 1.4 Relevant device documentation

The following documents are decisive to device setup and operation:

Instruction manual (this documentation):

Contains information for installation, commissioning and operation of the device along with technical data of the device hardware.

Website

You can download drivers, software, user manuals, leaflets and flyers about the product from our website [www.ads-tec.de](http://www.ads-tec.de).



### Recommendation for use:


We would recommend to make use of our website contents [www.ads-tec.de](http://www.ads-tec.de) in order to use current data and to be quickly and comprehensively informed of any technical modification.

## 2 Safety instructions

### 2.1 Structure of safety instructions

The signal word classifies the hazard.

Reference to the type/consequences and source of the hazard is made underneath the signal word. Instructions for preventing the hazard are identified by an arrow (➔).



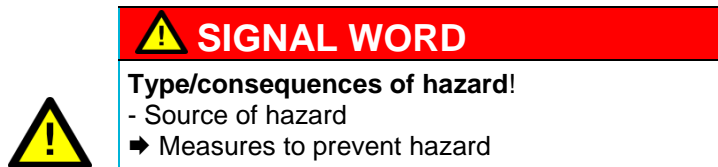


### 2.2 Graduation of risk level

The signal word classifies the hazard.

Instructions for preventing the hazard are identified by an arrow (➔).

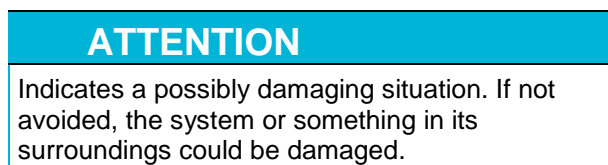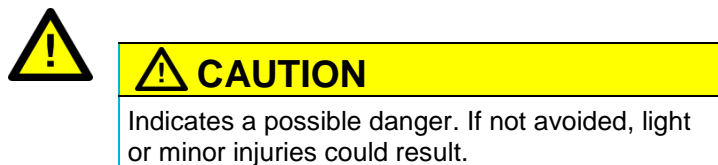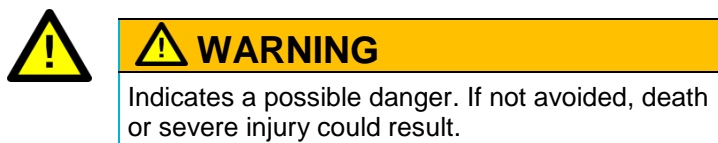


### 2.3 Explanation of used symbols



#### Recommendation for use:

The symbol "Recommendation for use" indicates terms and/or conditions that strictly need to be observed to ensure optimised and/or zero-defect operation. Tips and suggestions for the efficient use of the device and software optimisation are also provided.

## 2.4 Symbols

Symbol	Meaning
	Designation of batteries in accordance with § 13 of the German Battery Act (BattG). Batteries may not be disposed of with household waste, but must rather be disposed of separately. Used batteries must be returned to the point of sale or a disposal system.
	Labelling of electrical and electronic devices in accordance with § 7 of the German Electrical and Electronic Equipment Act (ElektroG). Electrical and electronic devices must not be disposed of with household waste, but must rather be taken to a collection point for waste electrical equipment. Such a collection point is generally operated by public waste management authorities, i.e., by municipalities.
	Symbol for the protective earth connection

## 2.5 Data, figures and modifications

All data, text and figures were prepared to the best of our knowledge. They do not represent any assurance for the properties themselves. Despite taking utmost care, no liability can be assumed for accuracy, completeness and actuality of the information. Subject to changes.

## 2.6 Trademarks

It is noted that any software and/or hardware trademarks and any company brand names mentioned in this documentation are all subject to the general trademark protection rights.

StoraXe® and Big-LinX® are registered trademarks of ADS-TEC.

All other third-party trademarks used are hereby acknowledged.

In the case of infringement of trademark rights, ADS-TEC reserves the right to exercise all rights.

## 2.7 Copyright

This instruction manual is protected by copyright. For the authorised user, simple usage rights are granted within the scope of the intent of the contract. Any modified use or exploitation of the provided content, particularly duplication, modification or publishing in whatever form is permitted only with the prior consent of ADS-TEC.

In the case of copyright infringement, ADS-TEC reserves the right to exercise all rights.

## 2.8 Environmental conditions

The device can be put into operation and used under the following conditions. Failure to observe any one of these conditions will invalidate the warranty. ADS-TEC cannot be held liable for any damages arising from improper use and handling.

- Temperature for devices without a heater
 

in operation*	-20 ... 55°C**
for storage	-30 ... 60°C
- Temperature for devices including a heater
 

in operation*	-30 ... 55°C
for storage	-30 ... 60°C
- Humidity
 

in operation	10 ... 85% without condensate
for storage	10 ... 85% without condensate

This unit is compliant to the DIN EN 60068-2-27 (shock and bump) testing specification

- Vibration and shock resistance
 

EN 60721-3-5 (06.1998), class 5M2 for HDD version, class 5M3 (terrestrial vehicles) for SSD version, 5 hours of noise-type vibrations; 3.6 g rms and 30 g peak value

Additionally applies MIL-STD 810F (01.2000), annex C, figure 514.5C (US highway truck transportation)

\* depending on mass storage device

\*\* The UL marking applies for operating temperatures up to max. 40°C and for devices without heater.

## 2.9 Standards

The manufacturer hereby declares that this device has been marked with the CE mark in accordance with the basic requirements and other relevant conditions of the following European Directives:

- 2011/65/EU, RoHs Directive
- 2014/30/EU, EMC Directive
- 2014/53/EU, RED Directive
- 2014/35/EU, Low Voltage Directive



The product is a class A device. Class A may cause interference when used in residential environments.

A corresponding EC conformity declaration is available for competent authorities at the manufacturer and can be viewed upon request.

The EC conformity declaration can be requested at

<http://www.ads-tec.de/support/support-anfrage.html> and is available for download at <http://www.ads-tec.de/support/download/eg-konformitaetserklaerung.html>.



### Recommendation for use:

For full compliance with the EMC legislation, all components and cables used for device connection must also be compliant with these requirements. It is therefore necessary to employ BUS and LAN cables with shielded connectors and these must be installed as per the instructions contained in the instruction manual.



## 3 Operating and safety instructions

The device operates under electrical voltage and contains highly sensitive components. Intervention by the user is required only for connecting the power supply lines. Should any further modifications be required, it is necessary to consult either with the manufacturer directly or with service personnel authorised by the manufacturer. The device must be de-energised during work. Appropriate measures must be taken to prevent electrostatic discharges on components. If the device is opened up by an unauthorised person, the user may be subject to hazards and the warranty is invalidated.

### General information

- All users must read this manual and have access to it at all times.
- Assembly, commissioning and operation may only be performed by qualified and trained personnel.
- The safety notices and the manual itself must be observed by all persons who work with this device.
- At the installation site the valid guidelines and regulations for accident prevention must be observed.
- The manual contains the most important instructions on how to use this device in a safe way.
- Appropriate storage, proper transport, installation and commissioning, as well as careful operation are prerequisites for ensuring safe and proper operation of the device.
- The device can be cleaned by using a soft cloth and a commercially available glass cleaning agent (e.g. Sidolin) with low alcohol content.

## ATTENTION

### Hazard due to damage to device

Damage caused by connected peripherals or data loss

- ➔ All cable lines (power supply, interface cables) should only be connected while the device is switched off and de-energised.

### 3.1 Operating location

The device is designed for use on support arm systems, wall and table mounting or on vehicles (commissioning trolleys, forklifts or similar). You have to take care that the environmental conditions specified in the technical data are met. Use in non-specified environments, i.e., on board ships, in explosive atmospheres or at extreme elevations, is prohibited.

The device must not be used to control vehicles. It must be ensured that the device is installed properly.

#### ATTENTION

##### **Hazard due to condensation**

Damage to electronic components caused by condensation resulting from temperature fluctuations.

- ➔ The device should only be switched on after it has acclimated to the ambient temperature!
- ➔ To avoid overheating in operation: The device must not be exposed to direct radiation by sunlight or any other heat source.

### 3.2 Damage due to improper use

Should the control system have evident signs of damages caused, e.g., by improper operation or storage conditions or due to improper use or handling, the device must be shut down immediately. Ensure that it is secured against being started up accidentally.

### 3.3 Warranty / repairs

During the device warranty period, any repairs must only be performed by the manufacturer or by service personnel that has been authorised by the manufacturer.

### 3.4 Intended use

The device is used for visualisation and control as well as the acquisition of operating and machine data in the production environment. Another typical application is in logistics. Here, the device can be used for mobile data acquisition.

The device is only to be assembled, installed and operated within the permissible specifications.

Use in non-specified environments is prohibited.

### 3.5 Improper use

Operation other than or beyond that described for the device shall be deemed improper use.

The device is not allowed to be used to control vehicles or for applications for which further approvals beyond the manufacturer's declaration are necessary, e.g. applications with explosion hazard, medical technology, shipping industry.

The device must not be put into operation in the case of transport damage or nonconformity with the specifications and, if necessary, must be taken out of operation in the case of changing conditions.

In the case of improper use, ADS-TEC shall not accept responsibility or liability for injury or damage that is directly or indirectly attributable to the handling of the device.

Should the device have evident signs of damages caused, e.g., by improper operation or storage conditions or due to improper use or handling, it must be shut down immediately. Ensure that it is secured against being started up accidentally.

### 3.6 Treatment and disposal of lithium batteries

This device contains a lithium battery for supplying the system clock with power as long as the supply voltage is not connected. The battery has a life cycle of 3-5 years depending on which load is applied.

#### ATTENTION

##### Hazard due to thermal loads

The more the battery is exposed to higher temperatures, the faster it ages.

➔ Avoid thermal loads.

#### WARNING

##### Hazard due to explosion

Danger of explosion if using incorrect battery types.

➔ Use the battery type recommended by the manufacturer.



Lithium batteries should not be exposed to fire, soldered, recharged, opened, short-circuited, reversed or heated above 100 °C and they should be disposed of properly as well as protected against sunlight, moisture and condensation.

The battery type to be used is:

½ AA 3V Lithium Battery Type: FDK Corp. CR14250SE

ADS-TEC part number: DZ-SONS-04100-0

The used lithium battery should be disposed of in accordance with local legal regulations.

## 3.7 Safety instructions

### ATTENTION

#### **Damage due to electrostatically sensitive components**

Damage to the device can be caused by electrostatically sensitive components.

➔ All installation and service work performed on the device must be performed only under safe, secure and de-energised conditions.



#### **Recommendation for use:**

Always adhere to the safety measures applicable when handling components at risk of being damaged by electrostatic discharges.

The provisions of DIN EN 61340-5-1 / DIN EN 61340-5-2 apply

## 4 Product description

### 4.1 Device features

Front side



Fig. 1:

No.	Description
1	Display with touch function
2	Front buttons
3	WLAN antennas (optional)
4	Front USB
5	Power-ON button

Rear side

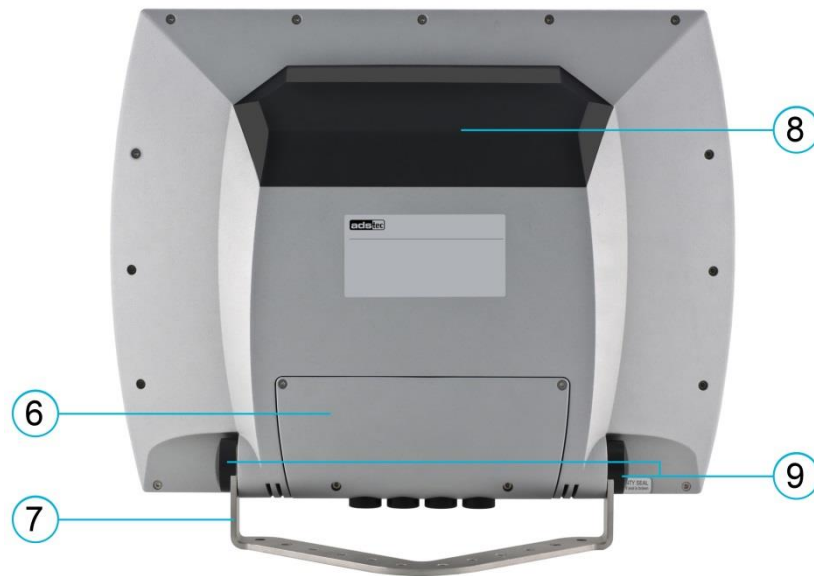


Fig. 2:


No.	Description
6	Service slot
7	Mounting bracket (optional)
8	Cover for third WLAN antenna
9	Mounting point for brackets

## 4.2 24 VDC / 48 VDC\* power supply

The device is available with a 24 VDC and a 48 VDC\* power supply.

The power supply is fed in via a 4-pin plug. (The figure shows the socket inside the device).

PIN	Signal
1	PE
2	0V DC
3	IGN
4	Nominal 24V: 10...36 VDC Nominal 48V*: 18...60 VDC

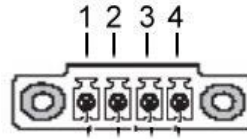

### Recommendation for use:

The power supply must be protected with a 4A fuse (slow-blow).

## ATTENTION

### Hazard due to overvoltage

If the protective earth is not attached, there is a danger of overvoltage at the device.

➔ Always attach the protective earth!

The power supply is realized by means of a transformer. The primary side of the transformer, which is connected to mains, is electrically insulated from the secondary side of the transformer, which provides the internal power supply.

Functional EMC protection is provided only if the PE-pin of the power supply is connected to earth.

When mounting on mobile vehicles, a functional earth must be established for this purpose.

\* The UL marking only applies to 24 VDC power supply.

## 4.2.1 Release contact (IGN)

The device is capable of being externally started by using an additional signal input. This function is well known from the automotive industry (switch-on by using an ignition contact). The device is here continuously supplied with a 24V / 48V DC power supply, and only if the additional signal is present at the ignition contact, e.g. as a result of turning the ignition key of the forklift, the computer is switched on or the blocking is released. This function protects the system from unauthorised use. If the device is installed onboard of vehicles or other mobile and battery driven equipment, the ignition function also saves energy. This function can be configured by using the **Ignition Key Locking** software tool. For example, the computer can be shut down in a time-controlled manner if voltage is no longer present at the ignition contact. Prefabricated supply cables are available from ADS-TEC for using the ignition function.



### Recommendation for use:

Switching the device on or off by using the ON/OFF pushbutton will override the ignition function. That means, if the device is switched off by using the Power button, the system is shut down and can be restarted by using the Power button. However, it can also be restarted by using the ON/OFF function of the ignition.

## ATTENTION

### Hazard due to overvoltage

There is an acute risk of irreparable damage if the permissible threshold is exceeded.

➔ Do not operate on vehicles that exceed the permissible system voltage.

The following thresholds for system voltage must be observed:

### 24V DC system voltage

5V DC – 36V DC

### 48V DC system voltage

5V DC – 60V DC



### Recommendation for use:

The ignition function must never be used together with the autostart function!



### Recommendation for use:

The functional description of the program **Ignition Key Locking** can be found in the chapter of the same name.



## 4.3 Autostart function

The autostart function allows the automatic start-up of the device upon application of the supply voltage of 24V / 48V DC.




### Recommendation for use:

The Autostart switch in the service slot must be set to ON in order to use this function.

## 4.4 USB connections

The USB interfaces are used for connecting peripherals with USB connection. These interfaces comply with the USB 2.0 standard requirements.

PIN number	Signal name
1	VDC
2	D -
3	D +
4	GND



### 4.4.1 Service slot

There are 3 USB connections in the service slot of the device.



### Recommendation for use:

The total current at each USB interface is limited to 1 A. The device supports a maximum of 8 external USB mass storage devices. If a USB Flash SSD is installed, a maximum of 7 USB mass storage devices can be connected.



### Recommendation for use:

The USB interfaces can be individually locked by using the "Lock USB" software tool.

### 4.4.2 Front panel

There is a USB interface on the front side. It is protected against dust and dirt by a cover.




### Recommendation for use:

It should remain closed when not in use in order to ensure the IP protection.

## 4.5 Network connection (RJ45)

If the drivers required for functioning are installed on the device, the control system may be integrated in an Ethernet network supporting the 10/100/1000Mbit/s standard by using the Ethernet 10/100/1000 BaseT network connector. The specifications of this network topology must be observed. If the drivers necessary for the function are not installed, they can be downloaded from the website ([www.ads-tec.de/downloads](http://www.ads-tec.de/downloads)).

Pin	Signal
1	MDI0+
2	MDI0-
3	MDI1+
4	MDI2+
5	MDI2-
6	MDI1-
7	MDI3+
8	MDI3-



### Recommendation for use:

The device has two separately installed network controllers of the Realtek RTL 8111c Family PCIe Gigabit Ethernet type.



### Recommendation for use:

PXE booting is only possible by using the LAN1 port.

## 4.6 WLAN wireless card (optional)



The device is optionally equipped with two antennas integrated in the front panel via a mini-PCI Express WLAN card. There is also an internally installed antenna on the rear side of the device.

The Mini PCI Express WLAN card supports standards:  
802.11a/b/g/n.

Additionally, the following security standards are supported:

WEP 64 bit, 128 bit 802.11i

WPA TKIP, CCMP (AES)

WPA2 TKIP, CCMP (AES)

WPA PSK (preshared key)

WPA enterprise: EAP-TLS

The specifications of this network topology must be observed.



### Recommendation for use:

The device can optionally be equipped with an external antenna. It must be ensured here that this antenna is connected in order to retain the expanded antenna concept.



### ATTENTION

If an external antenna is used, which is not approved by ADS-TEC, the operator/operating company shall be responsible for compliance with the regulatory and legal requirements.

## 4.7 Bluetooth wireless card (optional)



The device can optionally be equipped with a Bluetooth wireless module. The following Bluetooth standards are available:

Option	Name	Range
Option 1	Bluetooth 2.0 Class 1	Approx. 100m
Option 2	Bluetooth 2.0 Class 2	Approx. 10-50m

## 4.8 Serial interface COM1 (RS232)

The serial interface is used for digital data transmission. The RS232 interface can be connected by using a commercially available 9-pin SUB-D cable.




### Recommendation for use:

Pin 9 of the serial interface connector can be used for additional connection of a 5V power supply, e.g. for operating a serial barcode scanner. The COM +5V switch in the service slot of the device must be put in the ON position in order to use this function. A subsequent restart of the computer is required in order to properly activate this function.

Interface	IRQ	Address
COM1	4	3F8h

PIN number	Signal name
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI or + 5V DC (max. 1 A)



### Recommendation for use:

This interface is not electrically isolated.

## 4.9 Heater (optional)

As an option, the device can be equipped with a heater. The heater can be used in, for example, the low-temperature range down to -30°C. The exact temperature ranges are specified in the data sheet. The heater is controlled automatically by the firmware. If the temperature falls or rises to a predefined value, the heater is activated or deactivated. Intervention by the user is not necessary.

## 5 Assembly

The device series supports various mounting options.

Further information can be found on our website:

[www.ads-tec.de](http://www.ads-tec.de)

### ATTENTION

#### Hazard due to excessive tightening torque

- The device can be damaged if the tightening torque is not observed when the bracket is screwed on!

➔ Tighten the VESA bracket to max. 5 Nm!



1



2



3



4



5

No.	Description
1	Bracket for Rittal housing connector top
2	VESA 75 Standard bracket
3	Table/vehicle bracket
4	Mounting bracket left/right
5	Bracket for Rittal housing connector bottom

### 5.1 External Device Dimensions VMT7008

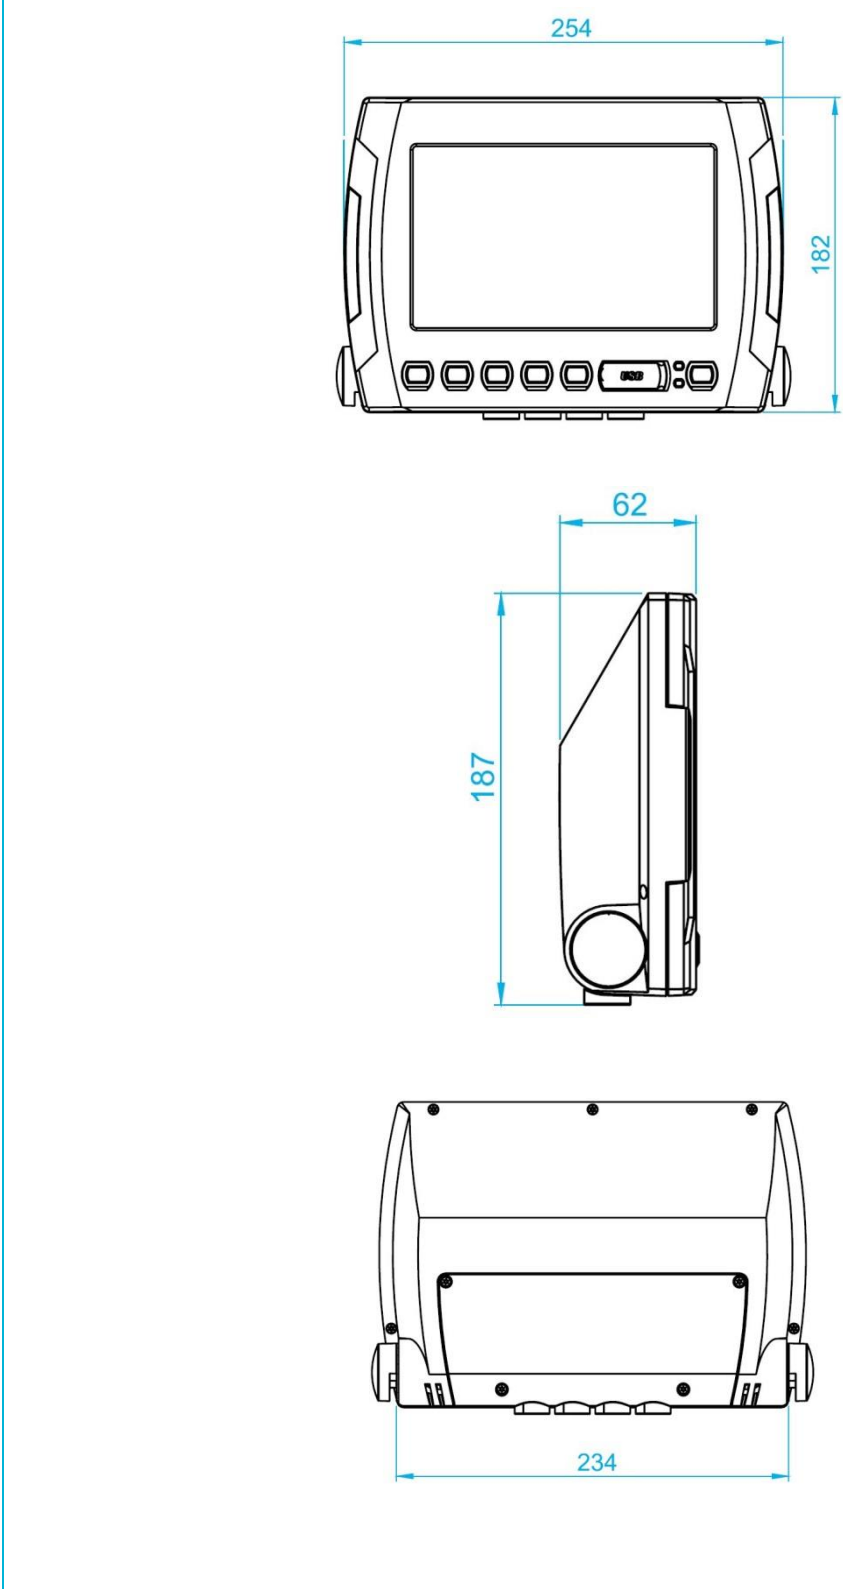


Fig. 3:



### 5.2 External Device Dimensions VMT7010

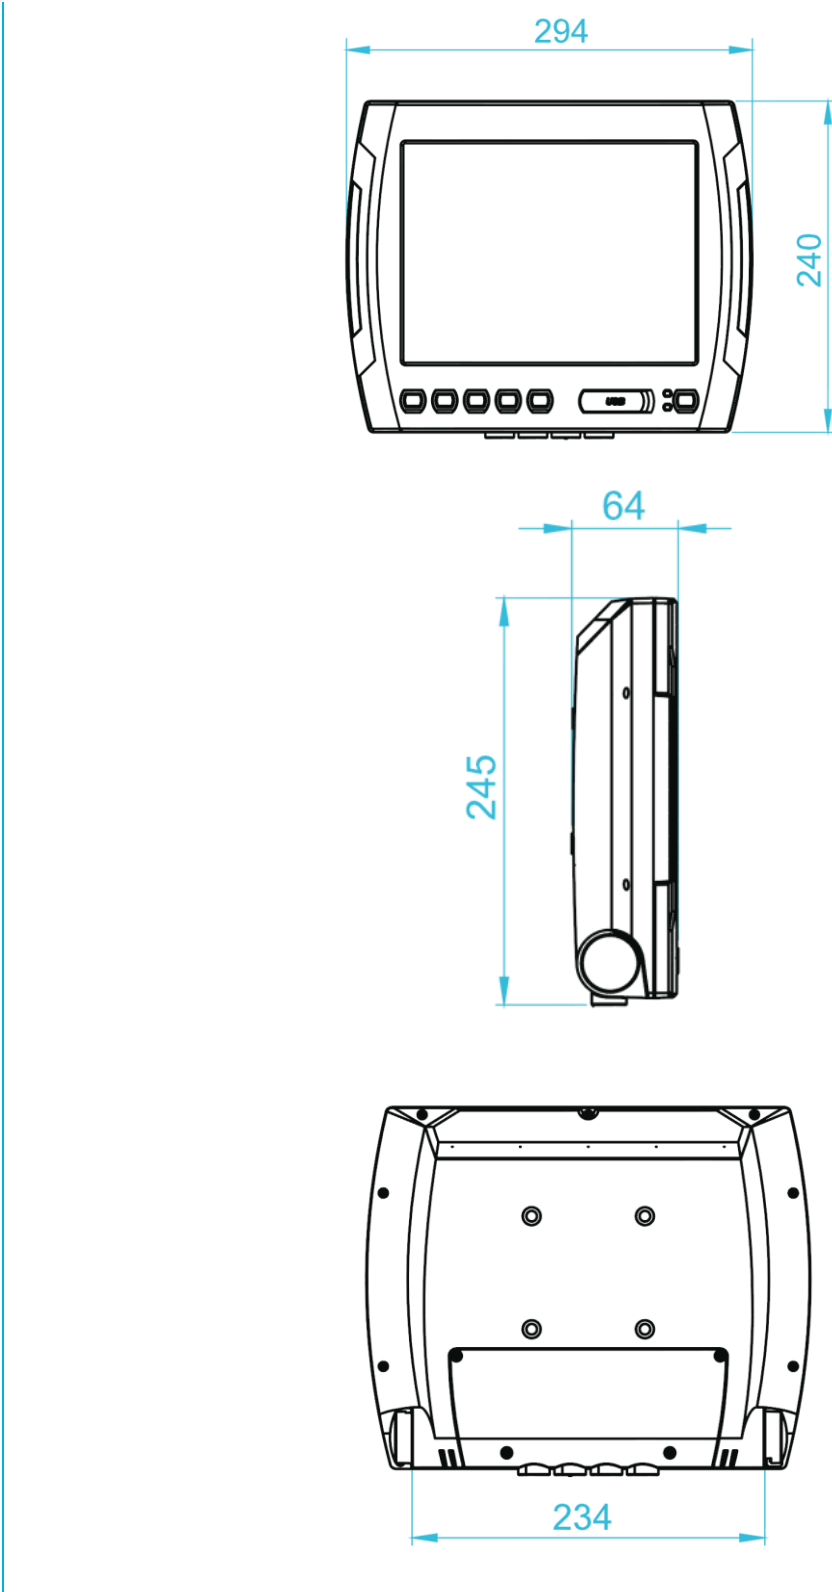


Fig. 4:

### 5.3 External Device Dimensions VMT7012

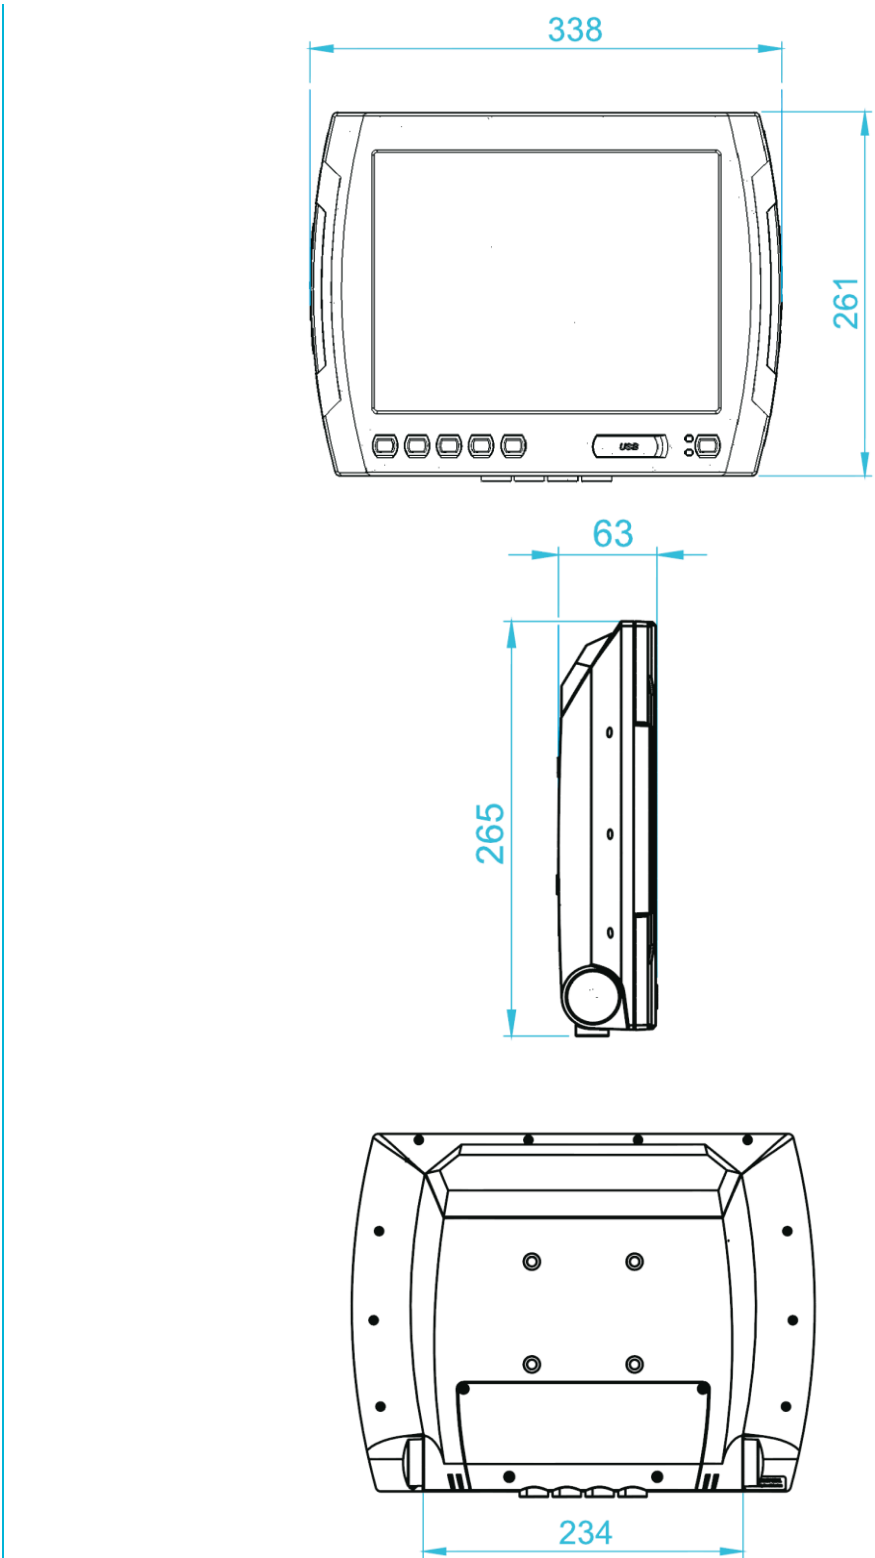


Fig. 5:

### 5.4 External Device Dimensions VMT7015

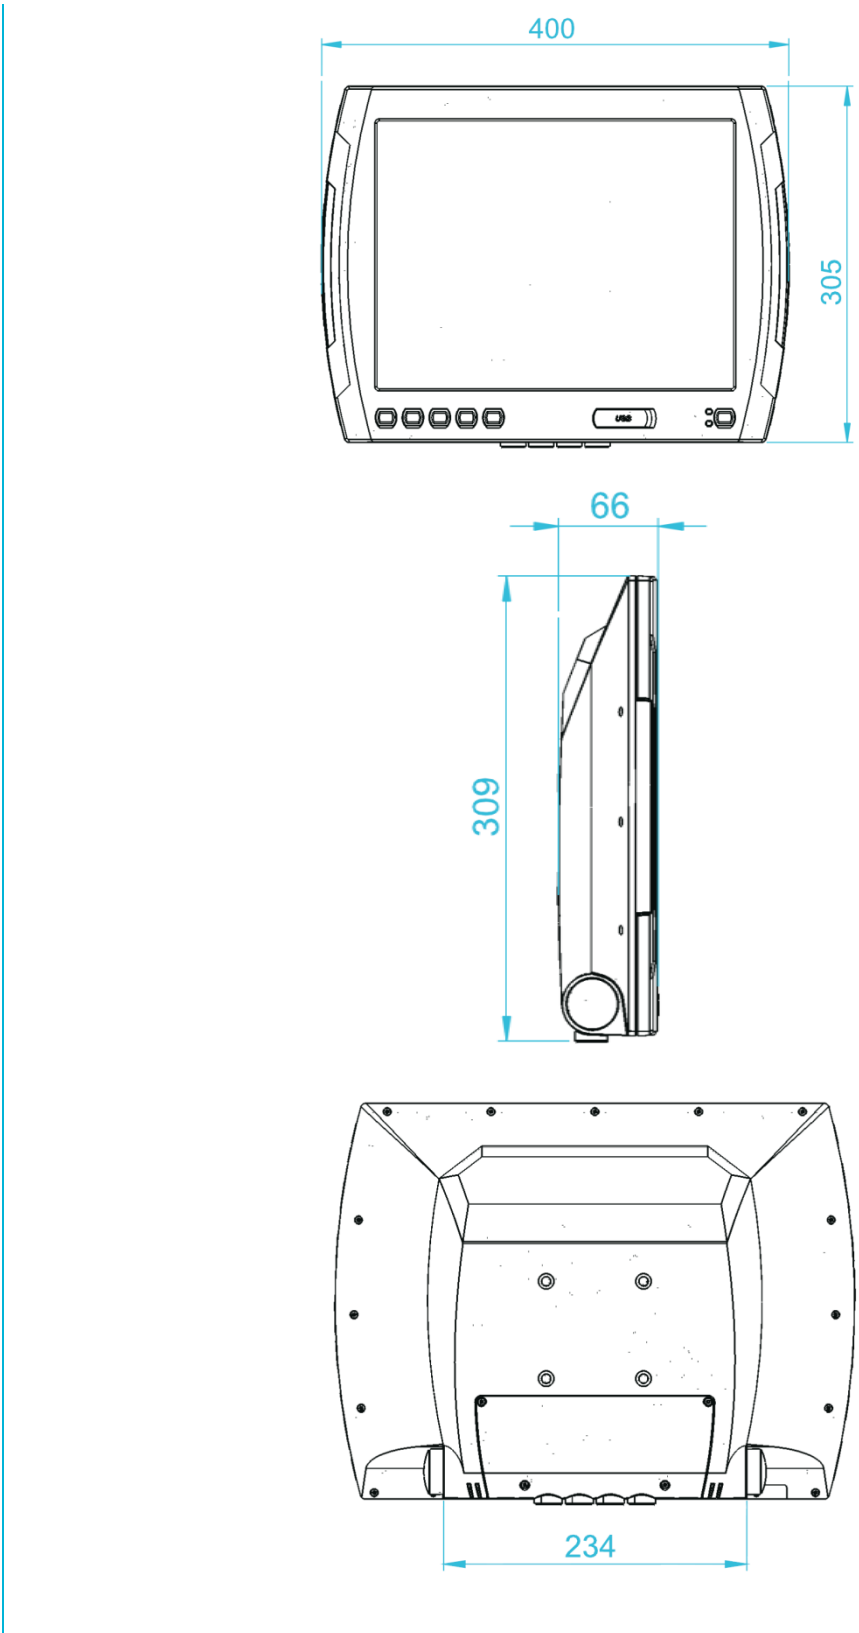


Fig. 6:

## 6 Putting into operation

### 6.1 Scope of delivery

Please check that all of the following components are contained in the packaging:

- 1 x device
  - 1 x 4-pin plug for power supply
- Optional scope of delivery:
- Operating system (license / opt. DVD\*)
  - Installation kit
  - Power adapter
- \* depending on operating system

### 6.2 Check for operational readiness

Check the device to determine whether hidden damages have been caused by improper transport, incorrect operation / storage conditions or improper handling.

If you find any damage, contact the manufacturer immediately. The device must not be put into operation.

The power supply and the device interfaces are located in the service slot. It has to be removed in order to connect the power supply lead and the interface cables. All necessary cables must be connected at the beginning of commissioning.

#### ATTENTION

##### Hazard due to condensation

Damage to electronic components caused by condensation resulting from temperature fluctuations.

- ➔ The device should only be switched on after it has acclimated to the ambient temperature!
- ➔ To avoid overheating in operation: The device must not be exposed to direct radiation by sunlight or any other heat source.

#### ATTENTION

##### Damage due to electrostatically sensitive components

Damage to the device can be caused by electrostatically sensitive components.

- ➔ All installation and service work performed on the device must be performed only under safe, secure and de-energised conditions.



##### Recommendation for use:

The shielding of a data cable must always be connected with the connector housing (EMC).

## 6.3 Order of steps during commissioning

### Removing the lid from the service slot

Loosen the undetachable screws on the service slot cover by using a Torx Tx10 screw driver and subsequently remove the service slot cover from the device.

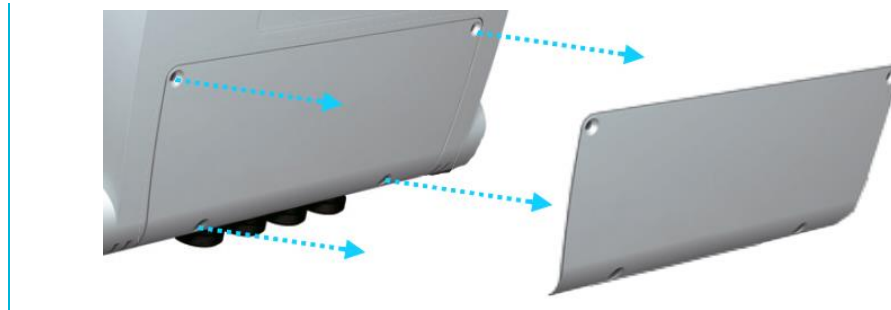


Fig. 7:

### Connecting the cables

Please connect all required cables. Always use the grommets to correctly install the cables.

## ATTENTION

### Breaching of IP protection

The device can be damaged if the service slot cover is not attached or is attached incorrectly!

- ➔ Make sure that the service slot cover is attached correctly before starting operation!



### Recommendation for use:

Before attaching the service slot cover, make sure that the seal is clean, undamaged and dry.

## 6.4 Operation

The device should be operated by trained and instructed personnel only.

The manufacturer must be contacted if damage is found.

## 6.5 Taking out of operation

The device can be shut down using the ON/OFF pushbutton, the ignition function and using the software. The method to be used depends on the application case.

## 6.6 Available interfaces

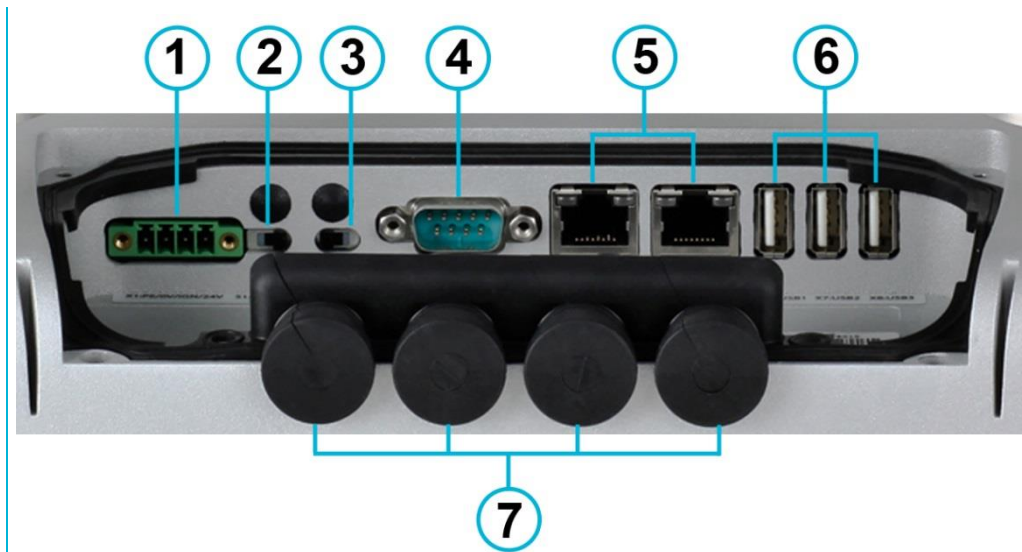


Fig. 8:

No.	Designation	Description
1	X1:PE/0V/IGN/24V X1:PE/0V/IGN/48V (optional)	DC IN
2	S1:AUTOSTART OFF/ON	Autostart function
3	X2:WLAN S2:COM+5V:OFF/ON	Preparation for ext. WLAN 5V connection at port COM1
4	X3:COM	COM1 port (RS232)
5	X4:LAN1 X5:LAN2	LAN ports (RJ45 10/100/1000 Mbit)
6	X6:USB1 X7:USB2 X8:USB3	USB ports (USB 2.0)
7	-	Cable entry grommets / seals



#### Recommendation for use:

The power supply is realized by means of a transformer. The primary side of the transformer, which is connected to mains, is electrically insulated from the secondary side of the transformer, which provides the internal power supply. Functional EMC protection is provided only if the PE-pin of the power supply plug is connected to earth.

When mounting on mobile vehicles, a functional earth must be established for this purpose.

If the device is to be earthed, this can be performed at the appropriate point in the service slot:

#### How to proceed if PE is used:

You must adhere to the following figure in order to ensure a correct installation of the PE system.

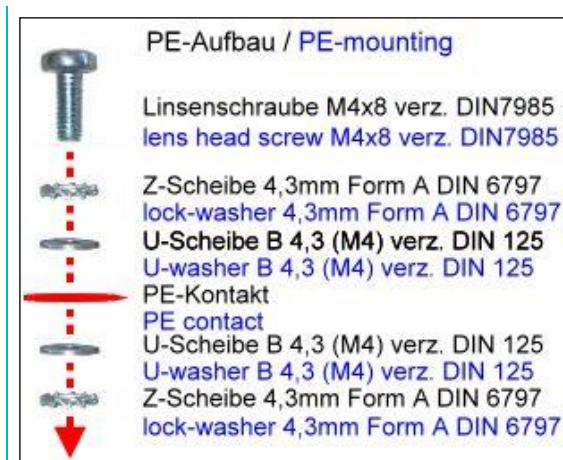


Fig. 9:







# 7 Operation

## 7.1 Front Panel Operation Keys

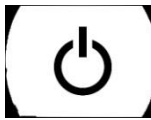

Fig. 10:

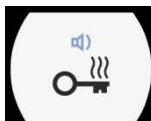Depending on the device version, an operating system and configuration of the front buttons is already installed ex works.

	<p>ON / OFF pushbutton of the device (ATX functionality) The operating system is shut down, but the device is not disconnected from the input voltage.</p>
	<p><u>Level 1:</u> Activate and deactivate the soft keyboard for letter/character input by using the touch screen.</p> <p><u>Level 2:</u> Decrease display brightness.</p>
	<p><u>Level 1:</u> Change task (Alt+ESC) in Windows.</p> <p><u>Level 2:</u> Increase display brightness.</p>
	<p><u>Level 1:</u> Not allocated. The configuration of this level can be customised by programming via the soft keyboard program</p> <p><u>Level 2:</u> Decrease the volume of the internal speakers.</p>
	<p><u>Level 1:</u> Right mouse-key function.</p> <p><u>Level 2:</u> Increase the volume of the internal speakers.</p>
	<p>Shift key (SHIFT) for activating the second keyboard level. This key must be pressed simultaneously with the desired function key.</p>





### Recommendation for use:

If the software keyboard is not installed, only the functions for display settings and volume control are active. If the values are changed, no visible change takes place on the display. The key functions can have been previously modified in accordance with customer specific requirements. The above described functions are pre-set ex works.

## 7.2 Soft keyboard

If an operating system is installed ex works, the soft keyboard is also preinstalled. If the operating system is delivered separately with the device, the soft keyboard must also be installed on site. By using the soft keyboard, data can be entered via the touch screen like with an external keyboard.






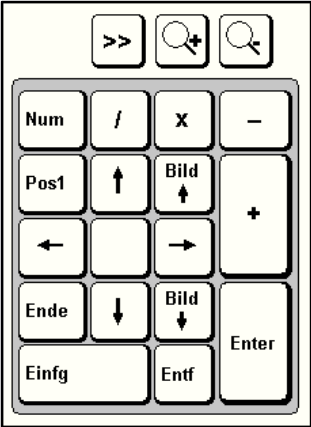
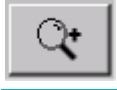



Fig. 11:

Operating the soft keyboard:

	Activate and deactivate the soft keyboard for character input using the touch screen
	Switches numeric keys on and off (only if numeric keys are visible)
	Switching between different representations (Alphanumeric keys → Numeric keys → Function key bar)
 <p data-bbox="564 1010 815 1039">View of numeric keys</p>	 <p data-bbox="1023 1010 1273 1039">View of position keys</p>
	Soft keyboard representation, zoom in
	Soft keyboard representation, zoom out

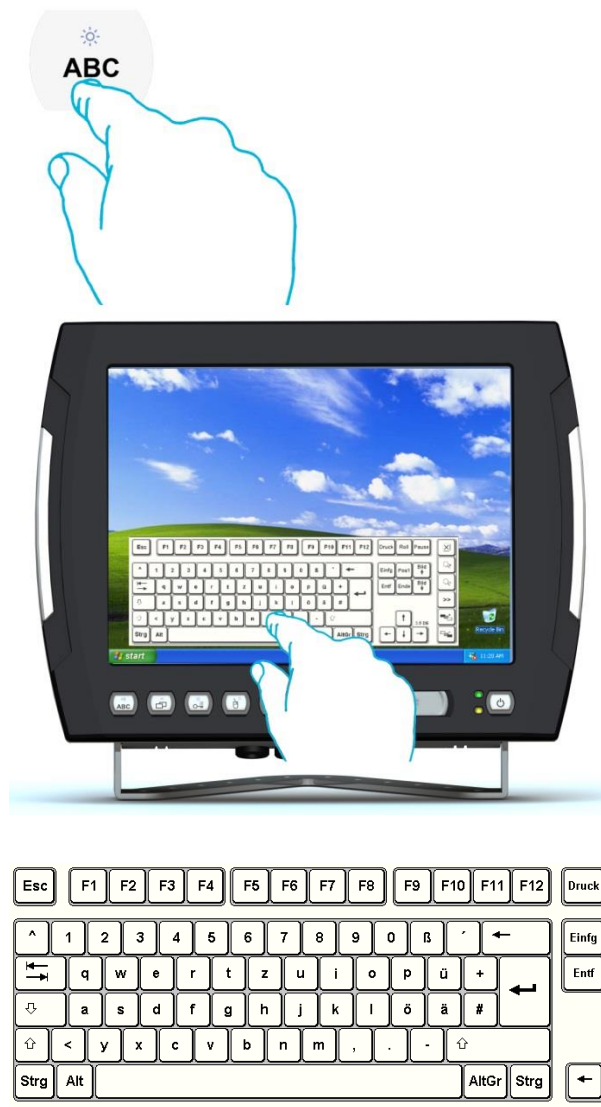**Recommendation for use:**

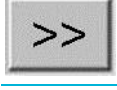If functions are to be called for which two keys must be pressed simultaneously on a standard keyboard (e.g., Alt + F4), these keys are to be pressed in sequence on the soft keyboard.

The Shift, Alt and Ctrl special keys must always be pressed first.

Due to differences in programming of a large variety of software programs, we cannot ensure that the soft keyboard works properly with all available software.

When deactivating the soft keyboard, the previously active state (alphanumeric / numeric keys or function keys) will be stored and will be displayed when re-activating the keyboard.

## 7.3 Touch screen

The control system is equipped with a touch screen monitor. The driver software necessary for use is already included in the respective operating system or can be downloaded from the company's website ([www.ads-tec.de/download](http://www.ads-tec.de/download)).

## 7.4 Status displays




### SYS LED (bicoloured)

Depending on the colour and type of flashing different device states are displayed by the SYS LED.



Fig. 12:

The following signals are displayed:


<u>System LED indicators</u>	<u>Behaviour</u>	<u>Description</u>
	green / static	Device is connected to a power source and switched on.
	orange/fl ashing	Volume / display brightness is being modified
	orange/fl ashing	Minimum / maximum value for volume / display brightness is reached

## 7.5 Speakers


The VMT8000 devices have two internal speakers.




Speaker positions

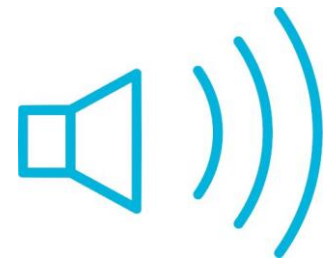

The volume can be set up by using the device front keys. When activating the described key combinations, the volume level is modified accordingly. If the soft keyboard has been installed, the system volume is additionally displayed by a bar graph. If the Fn button is touched, the backlighting of the buttons changes from white to blue. Level 2 is now active and the required volume can be set.

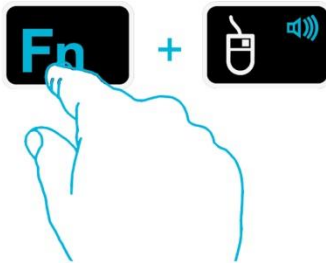

Button combination - increase volume

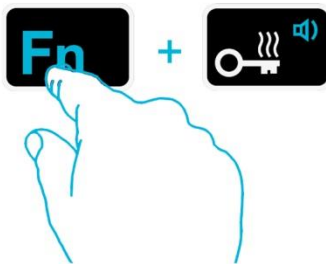

Button combination - reduce volume

## 8 Wireless

### 8.1 WLAN (optional)



WLAN antenna emission at front and rear

As an option, the device can be equipped with a Mini-PCI Express WLAN card. Two integrated antennas are behind the front panel. There is a third, internally installed antenna on the rear side of the device.

The Mini PCI Express WLAN card supports standards:  
802.11a/b/g/n.

Additionally, the following security standards are supported:

WEP 64 bit, 128 bit 802.11i

WPA TKIP, CCMP (AES)

WPA2 TKIP, CCMP (AES)

WPA PSK (preshared key)

WPA enterprise: EAP-TLS

The specifications of this network topology must be observed.

**Recommendation for use:**

The device can optionally be equipped with an external antenna. Make certain that this antenna is connected in order to retain the expanded antenna concept.

This antenna is connected in the service slot by means of an R-SMA plug. This function is optional and must be installed at the factory.

**ATTENTION****Hazard due to violation of transmit frequencies**

Due to the use of non-approved antennas  
If an external antenna is used, which is not approved by ADS-TEC, the operator/operating company shall be responsible for compliance with the regulatory and legal requirements.

## 8.2 RFID reader (as an option)

By using the RFID reader, passive RFID TAGS (RFID chip / key card) are available for automatic system login. The user applies the RFID tag like a key and requires neither user name nor password. For authentication, the transponder is raised to the position indicated in the image. The information on your transponder is read by the device and evaluated by a software solution.

The MIFARE and LEGIC technology are used in the VMT series.

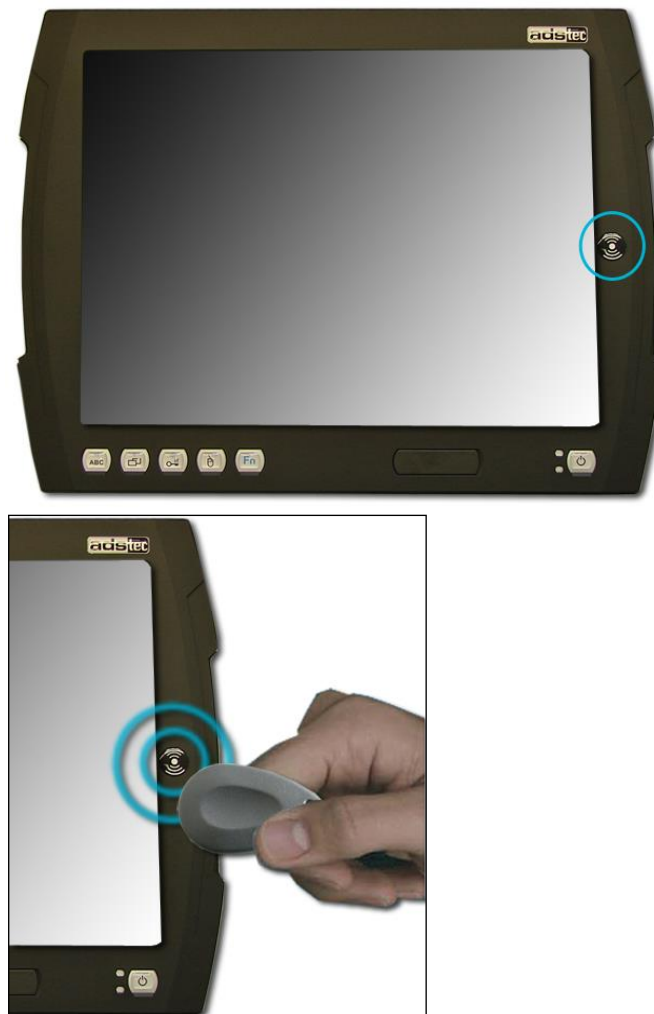


Fig. 13:

## 8.3 RFID configuration

On delivery, the devices are preconfigured so that a test of the RFID functionality can be performed without configuration.

**Recommendation for use:**

Check the functionality of your RFID reader using the following steps before starting commissioning via software in order to exclude any possible transport damages or other error sources.

Depending on hardware equipment, a MIFARE or LEGIC RFID reader is installed.

### 8.3.1 MIFARE

To test the RFID function, select the "ADS-TEC RFID example application" via the pre-installed Configuration Center.

**Recommendation for use:**

Detailed information on the Configuration Center can be found in chapter "Configuration Center".

#### Ads-tec RFID-Reader tool

This application is configured automatically, i.e. when the program is started, all COM ports are searched for the RFID reader.

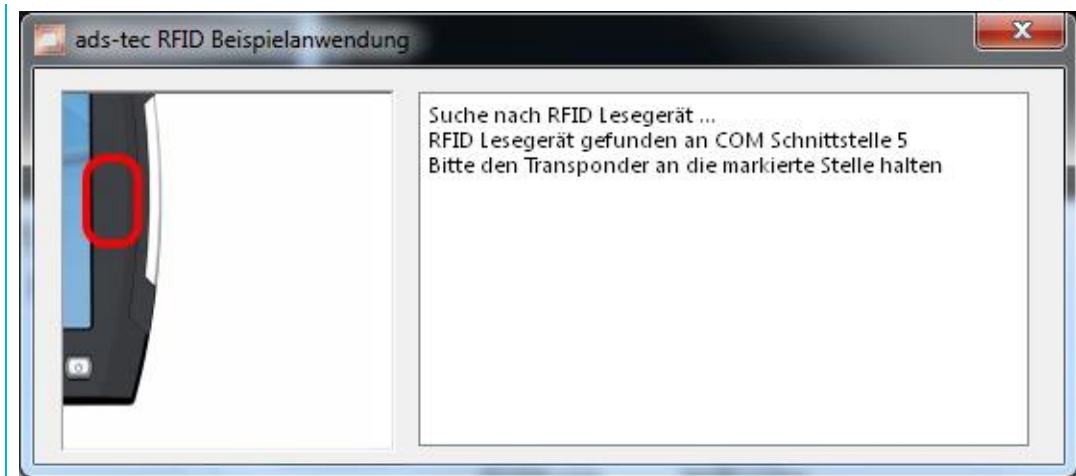


Fig. 14:

If an RFID reader was detected, the device cyclically queries to check whether a serial number (CSN) was read. If a transponder serial number is read during this process, it is output directly on the user interface.



If no RFID reader was found, one has the option to select the serial interfaces at which the RFID reader is connected.

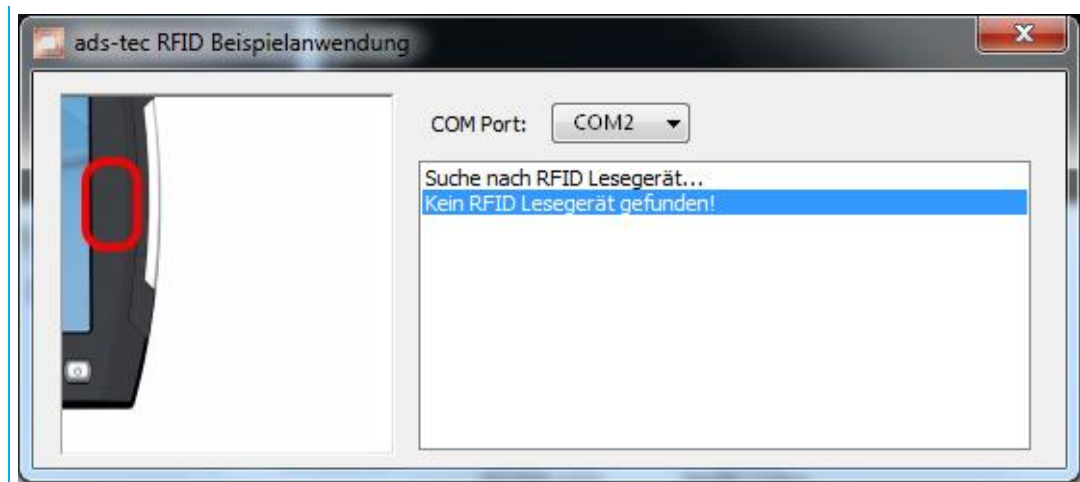


Fig. 15:

After the COM port is selected, the application opens the interface which is then ready to receive data. The data from a transponder are output on the user interface.

### 8.3.2 LEGIC

To test the RFID function, select a suitable editor (Notepad, Word) and hold the RFID tag up to the RFID reader. The corresponding information is output.



**Recommendation for use:**

The data that are output can be adjusted in advance in consultation with ADS-TEC to meet customer requirements .

## 8.4 ComInput configuration

The ComInput application converts data that are received via a serial interface into key sequences and then feeds them into the Windows operating system. The data from an RFID reader or barcode scanner can thereby be automatically directed to the active application without any additional work.

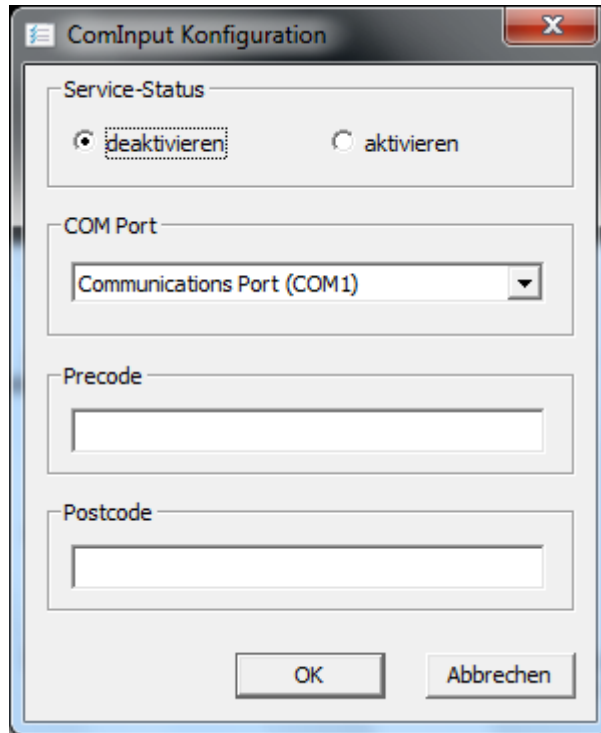


Fig. 16:

The functionality of the application can be activated or deactivated at any time via the interface integrated in the Configuration Center. The serial interface to be used can be selected after activating the service from the list of available interfaces.



**Recommendation for use:**

Baud rate: 9600/ Data bits: 8/ Stop bits: 1/ Parity: none/ FlowControl: none

## 9 Drives

The storage medium is selected according to the customer requirements. The following options are available for storage:

### **mSATA Flash:**

A flash with a storage capacity of at least 1GB is used.

Its capacity depends on the desired operating system and the additional programs to be installed.

### **Hard disk/SSD:**

A 2.5" hard disk with at least 80 GB (SATA) capacity is used.

The device can alternatively be equipped with an SSD. Its capacity depends on the desired operating system and the additional programs to be installed.

### **External drives:**

The device includes no drive for removable media (CD/floppy).

Instead, the system provides a USB interface, to which an external drive can be connected. In this case you'd have to ensure that the used device is suitable for industrial environments.

## ATTENTION

### **Using external drives**

Connecting or disconnecting external drives during operation is not admissible, since it cannot be excluded that the drive might be in use while connecting or disconnecting it. Data loss might result in the event of non-compliance!

## 10 Software & driver installation

The device is equipped with a touch screen monitor. The touch screen is connected internally via the USB interface. The driver software necessary for use as well as the software for the soft keyboard are already included in the respective operating system.

In the case of devices without preinstalled operating system, the drivers/software can be downloaded from the homepage.



### Recommendation for use:

If the hard drive has been reformatted, the operating system can be reinstalled by using one of the existing interfaces.

An external keyboard is required for installation.

### Installing the operating system

The device does not have any integrated CD drive. The installation of the operating system can therefore only be carried out by using the USB interface.

Procedure for installation:

- The boot drive in the system Bios must be switched to USB in order to boot the device from the USB interface.
- Restart the device and insert a Windows CD.
- Install Windows and set up the basic data.
- With devices including touch screens, the touch screen driver as well as the soft keyboard should be installed in order to ensure their full functionality.

# 11 Maintenance

## 11.1 Information on maintenance

### ATTENTION

- Maintenance should be performed only by qualified electricians certified by ADS-TEC.

The following components of the system are maintenance parts. Use dry cleaning cloths to clean the system.

Component	Type of maintenance	Maintenance interval
BIOS battery	Replace ½ AA 3V buffer battery. Type: FDK Corp. CR14250SE ADS-TEC part number: DZ-SONS-04100-0	3 years
Fuse	Replace 7A / 32Vdc Littelfuse INC. F200 / F1200 Type: 453007	Replace only if damaged
Exterior	Clean device with dry cloth.	As necessary, dependent on installation site
Earth connections	Secure connection and correct operation	According to VDE0113

## 11.2 Information on storage

Always observe the environmental conditions for storing batteries (no direct sun light, dry room, no frost,...).

## 12 Technical details

Device data	VMT7008	VMT7010	VMT7012	VMT7015
<b>Housing</b>	Diecast aluminium, powder-coated			
<b>Front panel</b>	Glass-fibre reinforced plastic, painted			
<b>Display</b>	8" TFT Resolution 800 x 480 pixels Represented colours max. 16.2 million	10.4" TFT 1024 x 768 pixels max. 16.2 million	12.1" TFT 800 x 600 pixels 1024 x 768 pixels max. 256k colours	15.1" TFT 1024 x 768 pixels max. 16.2 million
<b>Touch</b>	Automatic or manual display brightness adjustment / optional: Sunlight-readable			
<b>Processor</b>	Intel®	Atom™ N2600 1.6 GHz (Dual Core)		
<b>RAM</b>	4 GB DDR3			
<b>Graphics controller</b>	Intel®	SCH US15W with integrated graphics		
<b>Graphic memory</b>	A minimum of 8 MB shared memory			
<b>Mass storage</b>	mSATA 8, 16, 32, 64 GB			
	-	Alternatively: 2.5" automotive hard disk with a minimum of 80 GB (SATA) 2.5" SSD 8, 16, 32, 64 GB		
<b>Interfaces</b>	COM 1 (RS232 5V, supply can be activated for scanner) 1 x USB 2.0 <sup>5</sup> in front panel 3 x USB 2.0 <sup>5</sup> (All external USB interfaces in high current design up to 1A) Optional: COM2 (RS232, RS485 or CAN)			
<b>Network</b>	2 x Ethernet (10/ 100/1000Mbit) RJ 45			
<b>Sound</b>	Sound output via two internal speakers			
<b>Wireless</b>	Optional: Integrated WLAN module 802.11 (a/b/g/n) with 3 WLAN antennas for 3 x 3n Optional: Connection for external antenna (R-SMA connector in service slot)			
<b>Power adapter</b>	24 VDC** (10...36 VDC)		48 VDC** (18...60 VDC)	
<b>Typ. power*</b>	Typ. 0.70 A	Typ. 0.95 A	Typ. 1.10 A	Typ. 1.30 A
<b>Operating system</b>	Windows® Embedded Standard 7 MUI Windows® 7 Ultimate FES MUI Windows® Embedded 8 Standard Windows® Embedded 8 Professional			
<b>Protection class</b>	IP65			
<b>Operating temperature</b>	-20 to +55 °C** (depending on mass storage device)			
	-	Optional: -30 to +55°C** (depending on mass storage device)		
<b>Dimensions (W x H x D)</b>	254 x 182 x 62 mm	294 x 240 x 62 mm	338 x 261 x 62 mm	400 x 305 x 65 mm
<b>Weight</b>	Approx. 2.1 kg	Approx. 2.9 kg	Approx. 3.3 kg	Approx. 4.3 kg
<b>Vibration and shock resistance</b>	EN 60721-3-5 (06.1998), class 5M2 for HDD version, class 5M3 (terrestrial vehicles) for SSD version, 5 hours of noise-type vibrations; 3.6 g rms and 30 g peak value MIL - STD 810F (01.2000) Annex C. Fig. 514.5C (US Highway Truck Transportation)			
<b>Humidity</b>	10 to 85% non-condensing			

\*The figures given for the typ. current consumption do not take into consideration any peripherals connected to the Universal Serial Bus (USB) interfaces.

\*\* The UL marking applies for operating temperatures up to max. 40°C, 24V DC power supply and for devices without heater.

## 13 Service & support

ADS-TEC and its partner companies offer you comprehensive maintenance and support services, ensuring quick and competent support should you have any questions or concerns with regard to ADS-TEC products and equipment.

Because ADS-TEC products are also used by partner companies, these devices may have customised configurations. Should any questions arise with regard to these specific configurations and software installations, please contact them as ADS-TEC will not be able to answer such questions.

ADS-TEC does not provide support services for any device that was not purchased directly from ADS-TEC. In this case, maintenance and support is provided by the partner company.

### 13.1 ADS-TEC support

The ADS-TEC support team is available for inquiries from direct customers between 8:30am and 5:00pm, Monday to Friday.

The support team can be reached via phone, fax or e-mail:

Phone: +49 7022 2522-202

Fax: +49 7022 2522-400

Email: [support@ads-tec.de](mailto:support@ads-tec.de)

Alternatively, you can contact us by completing a support form on our website [www.ads-tec.de](http://www.ads-tec.de).

Our Support team will then get in touch with you as soon as possible.

### 13.2 Company address

ads-tec GmbH  
Heinrich-Hertz-Str.1  
72622 Nürtingen  
Germany

Phone: +49 7022 2522-0

Fax: +49 7022 2522-400

Email: [mailbox@ads-tec.de](mailto:mailbox@ads-tec.de)

Web: [www.ads-tec.de](http://www.ads-tec.de)